



COMMANDER

RVX4-WALL

Bracket Installation Guide

The Wall Bracket can be installed to mount X4 COMMANDER Cameras in hanging or upright orientation. Fixings to mount the Wall Bracket will depend on the fixing surface. It is important to use adequate fixings to safely support an X4 COMMANDER Camera. The Wall Bracket has 4 fixing slots on a 4" PCD and a further 4 fixing holes at the corners of the base plate. The camera face provides 4 mount holes to align with the X4 COMMANDER 4" PCD base.

Umbilical Lead Installation

The umbilical lead can be fed through either the end of the bracket tube, or via the 20mm Gland Entry Point. Note: The gland entry uses a 20 x 1.5mm thread to accommodate industry standard 20mm Glands.

Safety-bond installation

Attach the safety-bond (supplied pre-fitted to the camera PCD base, Fig. 1 below) to the safety-bond eyelet, located on the vertical bracket tube (Fig. 2 below), using the snap-lock hook on the end of the safety-bond.



Fig. 1 Safety-bond fitting on Camera

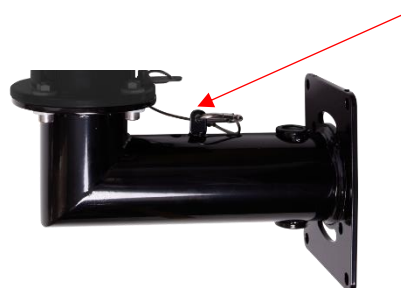


Fig. 2 Safety-bond Eyelet on bracket tube

ALWAYS USE THE SAFETY-BOND!

Attaching the camera to the bracket

Connect the umbilical lead to the camera base, using the Amphenol connector. Note the locating lug on the connector, allowing a one-way fit. Do not attempt to force the connector, you may damage both plug and socket. Place the camera base up to the mounting-plate of the bracket, aligning the 4 fixing holes and fix securely with 4x M8 bolts (recommended size).

Contents

- 4x M8 x 25 Socket Cap
- 8x M8 Plain Washer
- 4x M8 Nyloc Nut
- 1x Cable Gland
- 2x Cable Gland Cover
- 1x M6 Allen Key