


RV-GALV-KIT

Galvanic Isolation Kit Installation

The Redvision Galvanic Isolation Kit is to be used to galvanically isolate the Redvision CCTV camera to its mounting base.

Installation

Install the camera to the mounting base using the 4 off M6 x 25 Socket Cap fixings. Follow the instructions as per Fig. 1 below to avoid contact of dissimilar metals during installation. Ensure that the Nylon shoulder washer is seated perfectly, and no part of the bolt or nuts make contact with the mounting part of the tower/ pole.

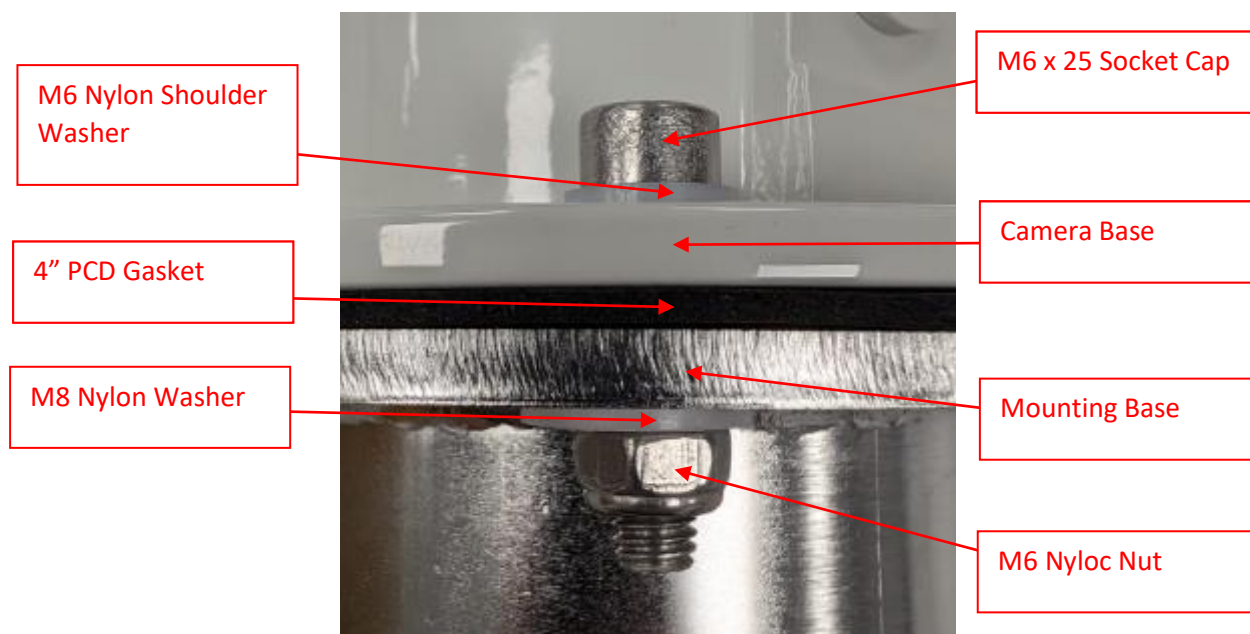

Contents

- 4x M6 x 25 Socket cap
- 4x M8 Nylon Washer
- 4x M6 Nyloc Nut
- 4x M6 Shoulder Washer
- 1 x 4" PCD Gasket