

EBBA BARSTOOL

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

N/A

WARNINGS:

Do not throw away packing materials and carton until after assembly.


Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

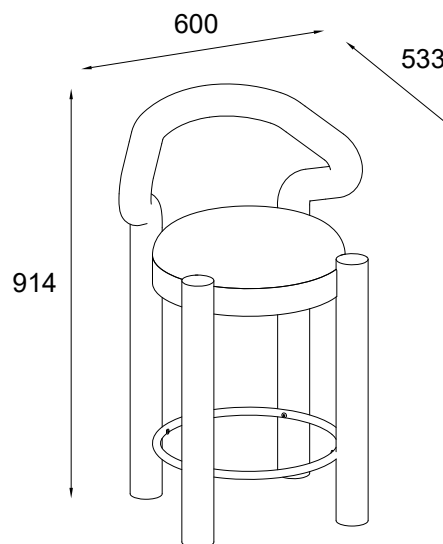

PARTS INCLUDED

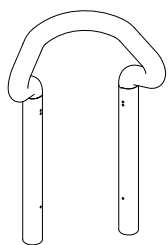


A) Back Frame x1

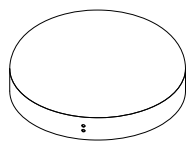


B) Seat x1




C) Front Leg x2



D) Foot Rest x1

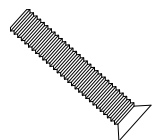

E) Bolt
[M6x30mm] x12

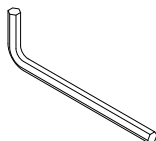




F) Allen Wrench x1

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be




STEP 1

Assemble Seat (B) and Foot Rest (D) to Back Frame (A) with Bolts (E), as shown in the drawing below. Tighten with supplied Allen Wrench (F).

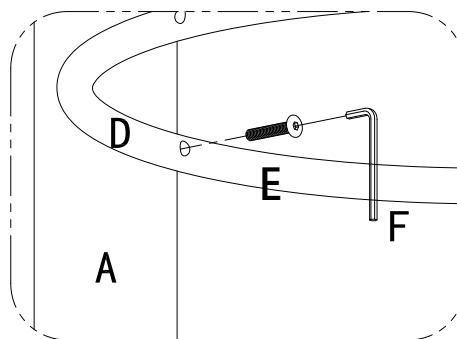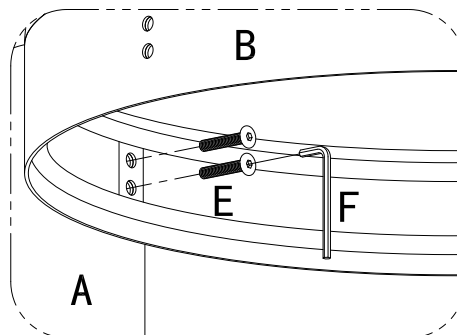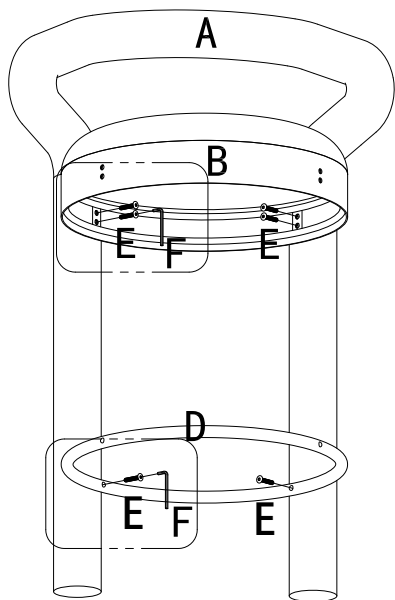

STEP 2

Assemble Front Legs (C) to Seat (B) and Foot Rest (D) with Bolts (E), as shown in the drawing below. Tighten with supplied Allen Wrench (F).

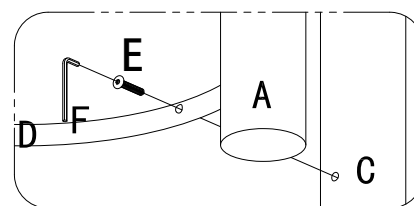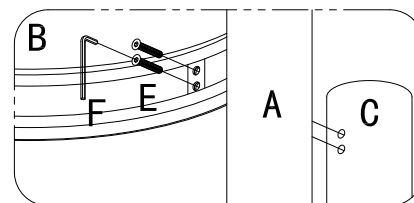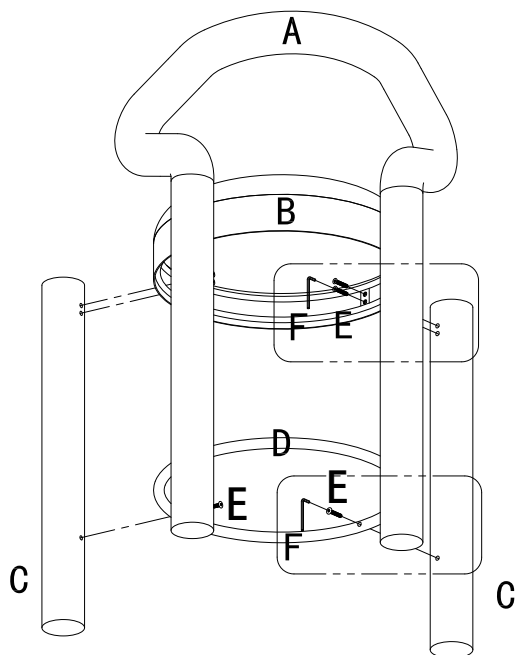

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be