

SOREN SHELF

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Phillips head screw driver

WARNINGS:


At least two people recommended for assembly
Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
Do not drag the shelf while moving

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

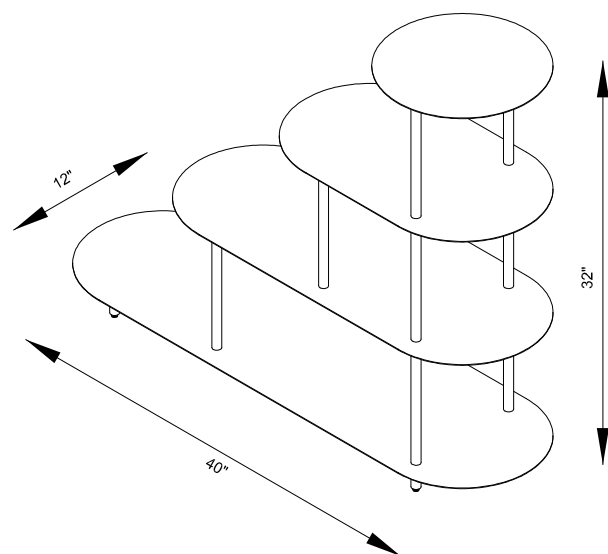


PARTS INCLUDED

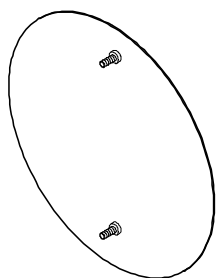


A) Top Metal Shelf x1

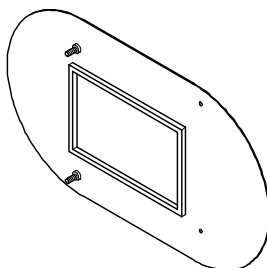


B) Second Metal Shelf x2

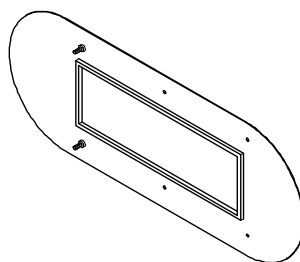


C) Third Metal Shelf x1

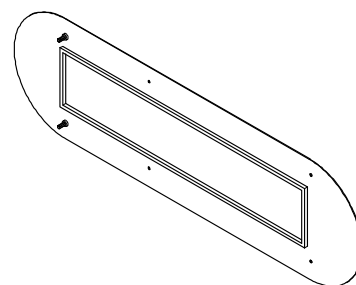


D) Bottom Metal Shelf x1

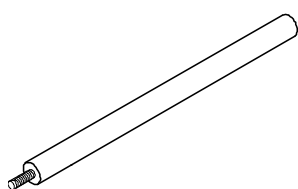


E) Metal tube with threaded stud x6

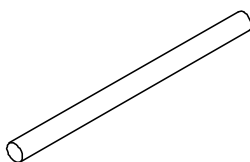


F) Metal tube rail x4

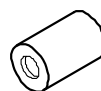

G) Metal Tube Glide x4

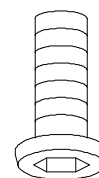

H) Bolt [M6xL20mm] x4

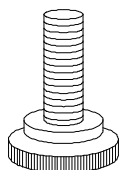

I) Adjustable Leveler x4



J) Allen Key x1


SOREN SHELF

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Align Top Metal Shelf (A) and Metal tube with threaded insert (E) as shown and screw tight. Align Second metal shelf (B) to metal tube with threaded insert (E), and metal tube rail (F) as shown and screw tight.

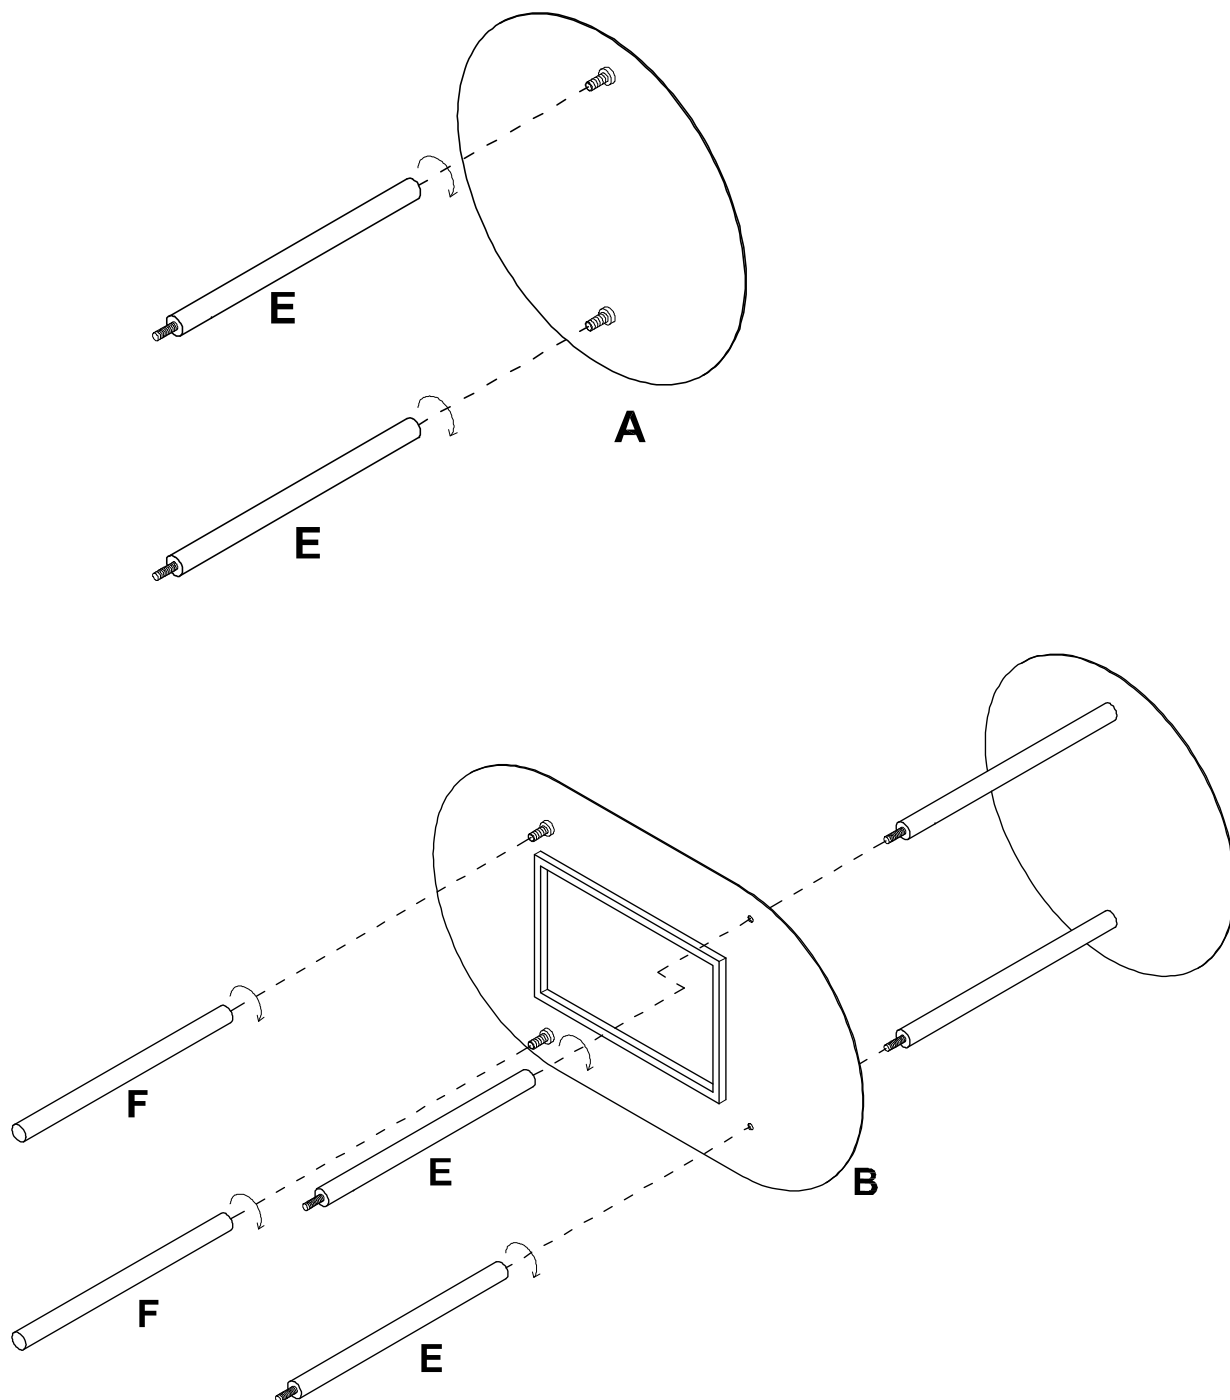


SOREN SHELF

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Align third metal shelf (C) to the Metal tube with threaded insert (E) and Metal tube rail (F) above as shown. Insert Bolt (H) into the metal tube rail (F) above the third metal shelf (C) and tighten with Allen key (J). Screw the additional Metal tube rails (F) into the studs below the third metal shelf (C) as shown.

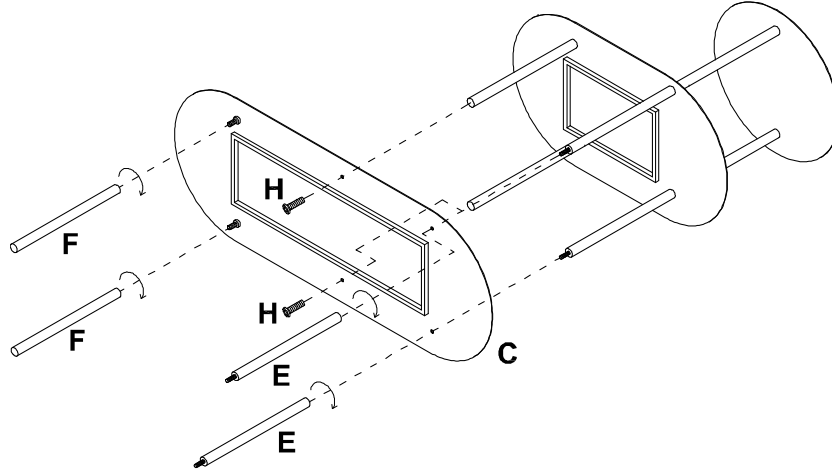

STEP 4

Align Bottom metal shelf (D) to the Metal tube with threaded insert (E) and Metal tube rail (F) above as shown. Insert Bolt (H) into the metal tube rail (F) above the bottom metal shelf (C) and tighten with Allen key (J). Screw the Metal tube glide (G) into the studs in the Bottom metal shelf (D) and Metal tube with threaded insert (E) as shown. Screw the adjustable levelers (I) into the Metal tube glide (G).

