

Modular Stacking Bin

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


Pencil, Phillips head screw driver

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place over heat or Air conditioning vents.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

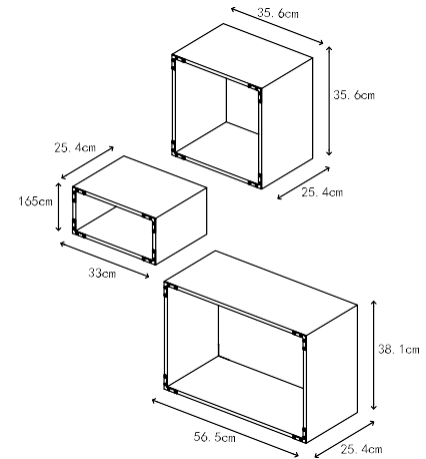


PARTS INCLUDED

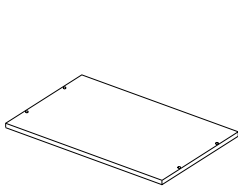

A) Large End Panel x2




B) Large Side Panel x2




C) Middle End Panel x2




D) Middle Side Panel x2



E) Small End Panel x2




F) Small Side Panel x2



G) Cam-lock
[15mmx9mm] x24




H) Bolt
[25mm] x24

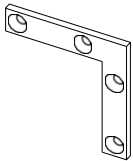


I) Bracket x12




J) Screw
[M3x20mm] x50



K) U x4

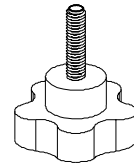


L) Bolt
[M6x20mm] x4




M) Flat Washer
[25mm] x4



N) Screw
[M4x35mm] x2

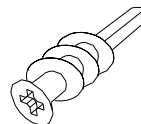

O) Anchor x2

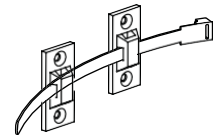

P) Plastic Plate Set x1



Q) Bolt
[M4x6mm] x4

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


Modular Stacking Bin

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Assemble Large side panels(B) to Large end panel(A) with Bolt(H) and Cam-lock(G) as shown in the drawing below. Tighten with a Phillips head screwdriver (not included).

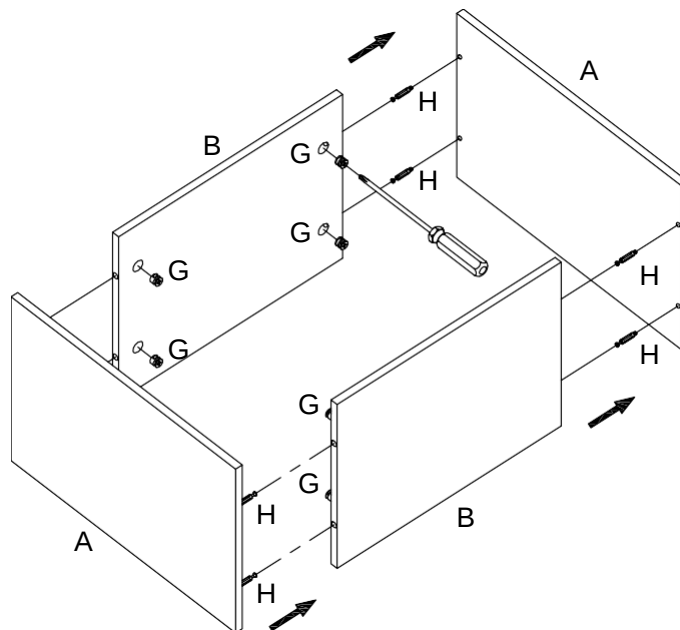

STEP 2

Assemble Large side panels(D) to Large end panel(C) with Bolt(H) and Cam-lock(G) as shown in the drawing below. Tighten with a Phillips head screwdriver (not included).

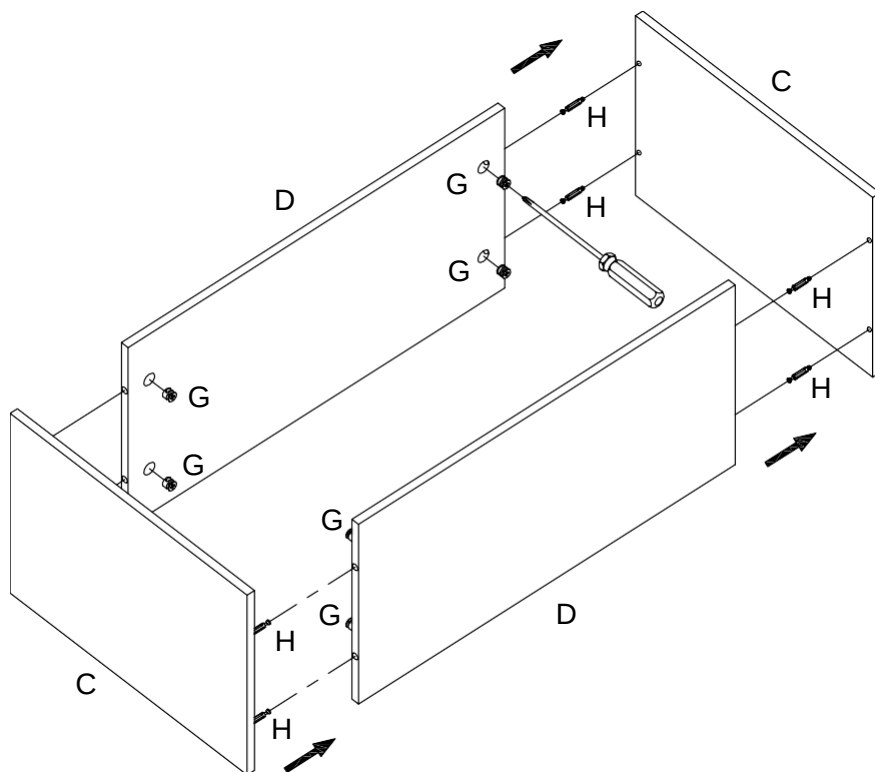

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


Modular Stacking Bin

Assembly Instructions

URBAN OUTFITTERS


STEP 3

Assemble Large side panels(F) to Large end panel(E) with Bolt(H) and Cam-lock(G) as shown in the drawing below. Tighten with a Phillips head screwdriver (not included).

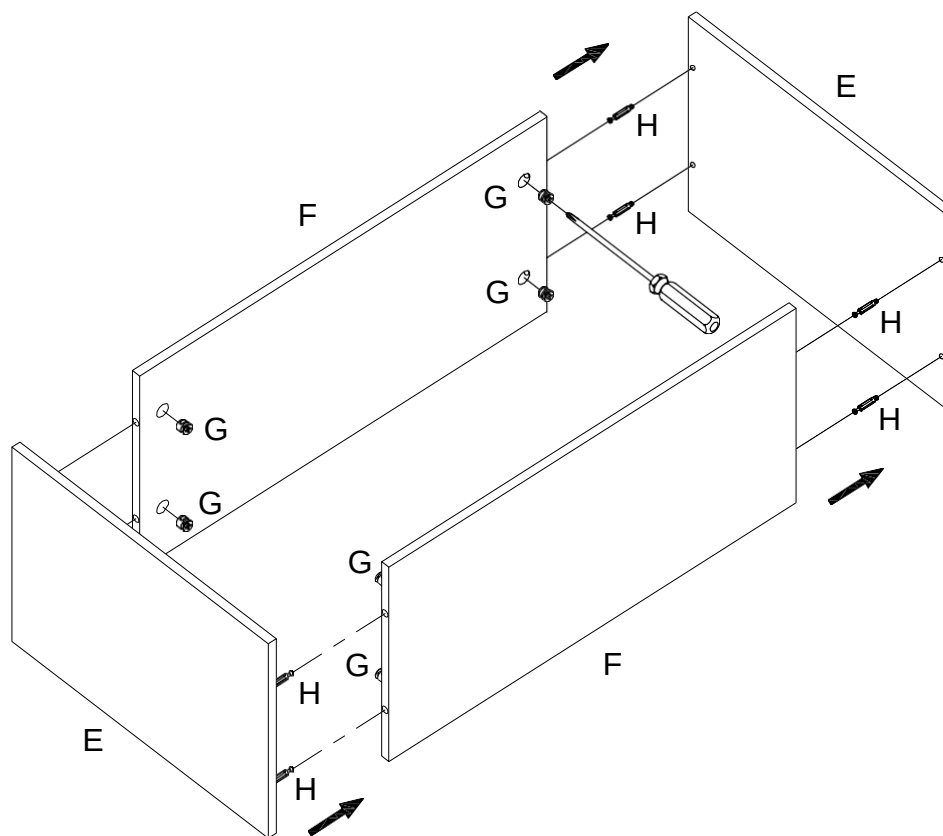

STEP 4

Reinforce each cube at corners with Bracket (I) and Screw(J) as shown in the drawing below. Tighten with a Phillips head screwdriver (not included).

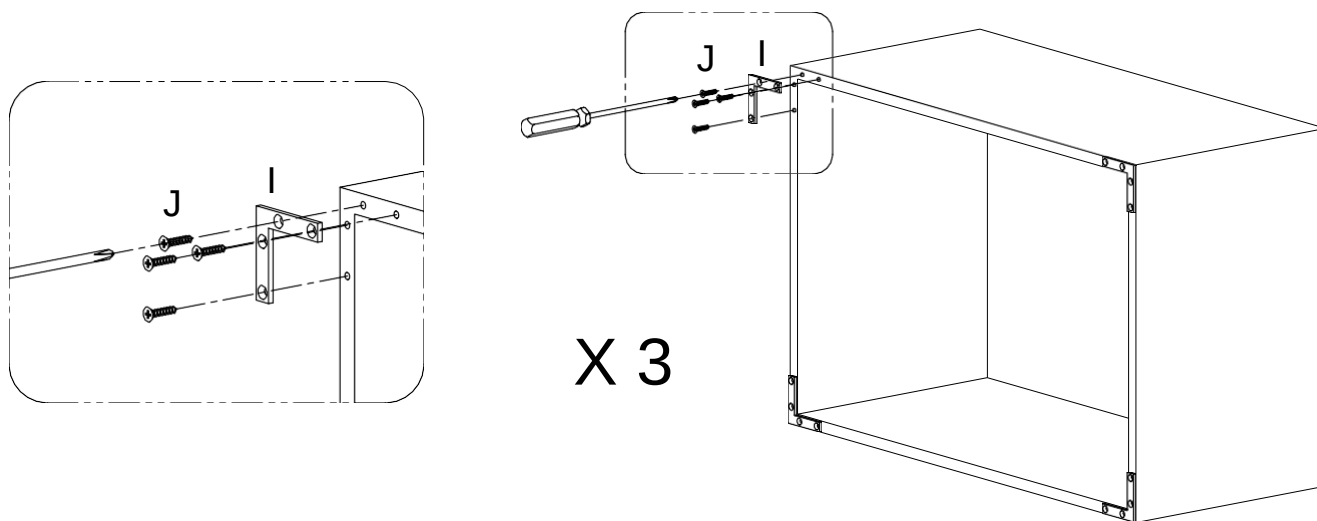

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


Modular Stacking Bin

Assembly Instructions

URBAN OUTFITTERS

STEP 5

Assemble Bolt(L&Q) and Flat Washer(M) to U-Bracket (K) as shown in the drawing below. Tighten with a Phillips head screwdriver (not included). Then assemble cubes together with U-Bracket (K) as shown in the drawing below. Tighten by hand.

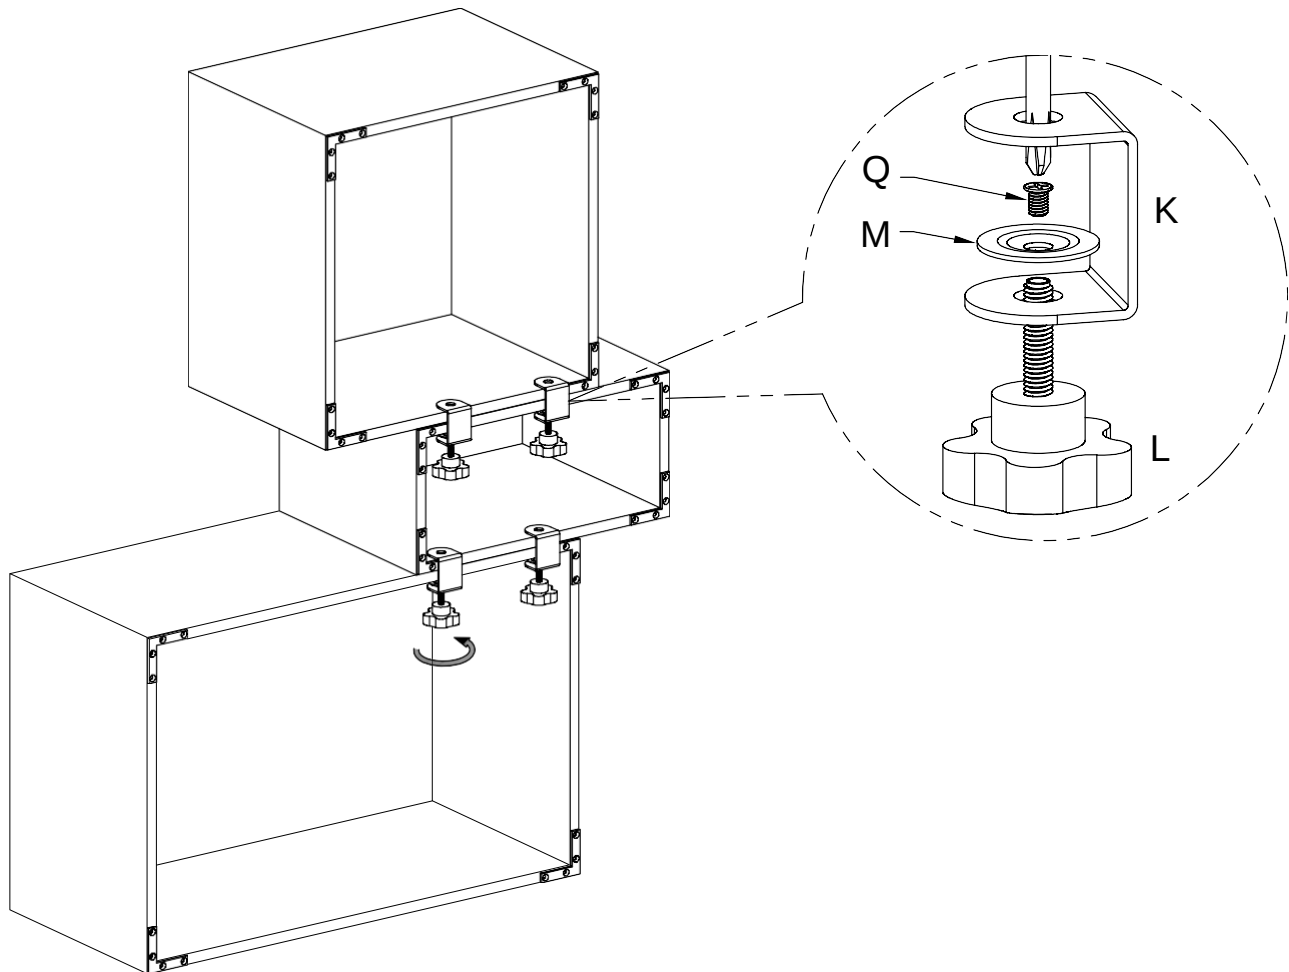

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


Modular Stacking Bin

Assembly Instructions

URBAN OUTFITTERS

STEP 6

Attach one of the Plastic Brackets included with the Anti-tip kit (P) to the back edge of the Top panel with Screws (J) as shown. Place the Bin against the wall. Align the additional Plastic Bracket on the wall and mark the location on the wall through its holes. Insert the Anchors (O) at the marked locations and screw them into the wall. Screw the additional Plastic Bracket to the wall with Screws (N) as shown. Tighten with Phillips Screwdriver (not included). If attaching to drywall, you do not need to use the plastic anchors. Insert the plastic strap through both of the brackets and into the slot in its end. Pull tight to secure.

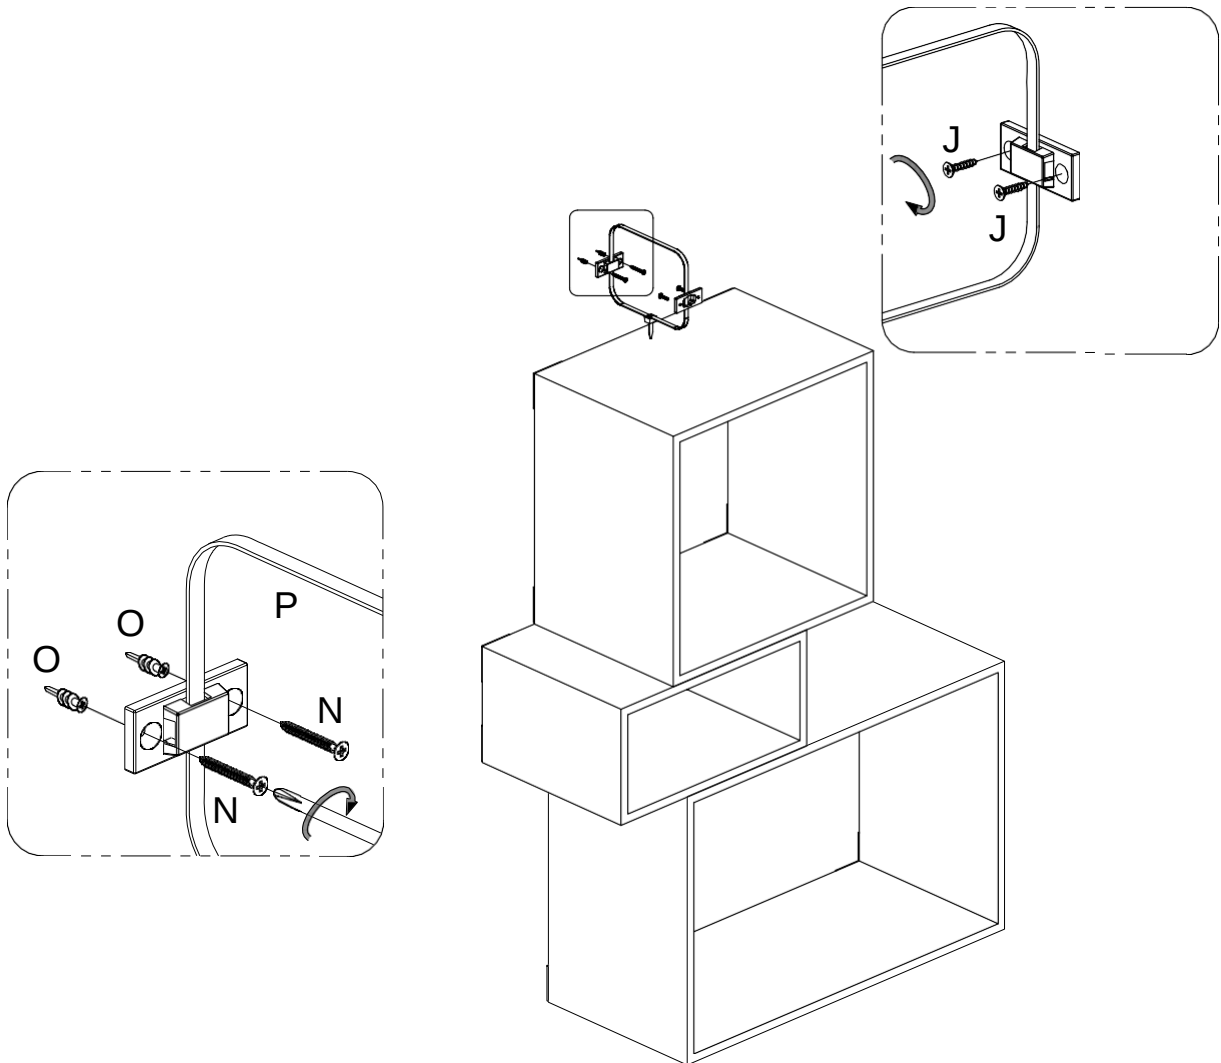

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be