

BAR:MID CENT BAR CABINET

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spill do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

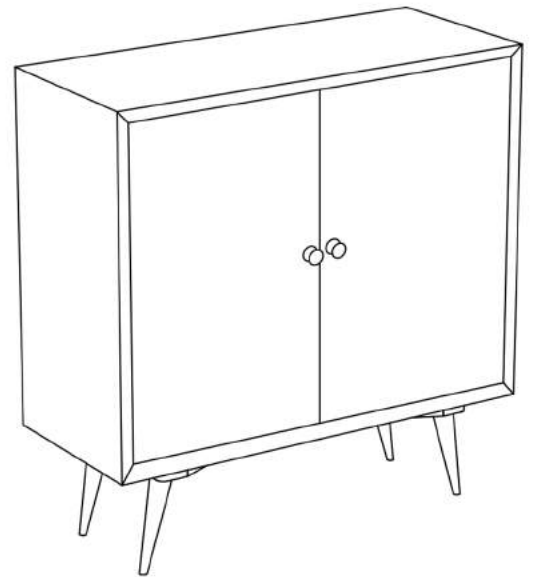

PART INCLUDED

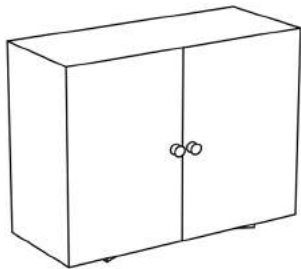

(A) Wooden Body
1x

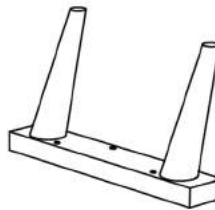

(B) Leg
2x



(C) Allen Bolt
[M8x40mm 6x]



(D) Allen key
1x

STEP 1 Put the wooden body upside down on a protective surface and align leg with body and tighten the screw as shown in the picture.

