

Butterfly Hook


Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED:
Drill, Phillips head screwdriver, Pencil

WARNINGS:
Do not discard packing materials and the carton until assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if any parts are missing.
Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:
Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

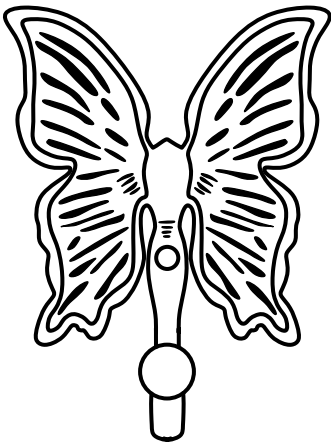

PARTS INCLUDED:

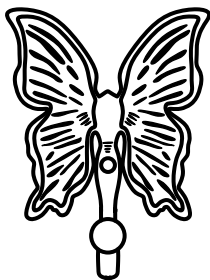

(A) Hook x 1
[4.2" x 1.50" x 4.90"]
or
[106 x 38 x 124 mm]



(B) Plastic Anchor x 1
[D0.35 " x 1.38 "] x1
or
[D9 x 35 mm] x1



(C) Screw x1
[D0.30" x 1.38"] x1
or
[D8 x 35 mm] x1

Butterfly Hook


Assembly Instructions

URBAN OUTFITTERS

STEP 1

Stud Installation:

Insert the screws (C) through the hook (A) into the wall and fasten it with Phillips head screwdriver or drill.

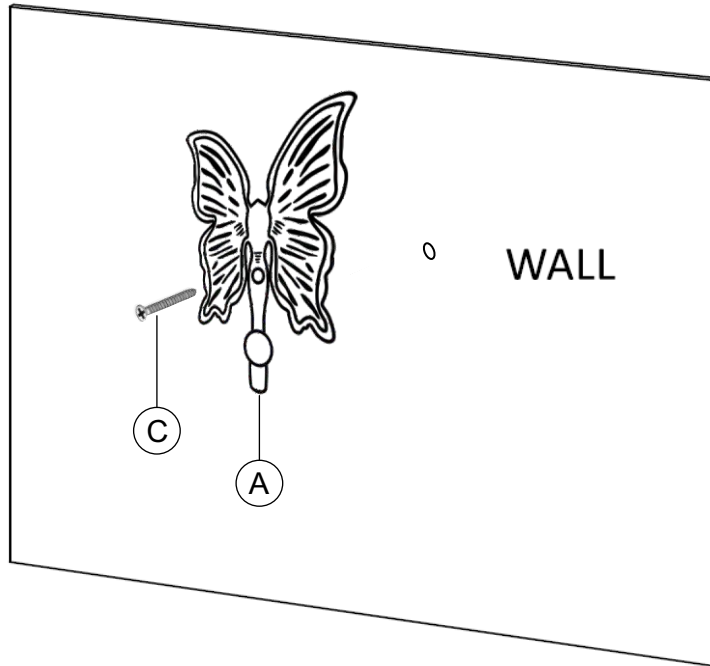

STEP 2

Drywall Installation:

Mark the location of the screw hole in the hook (A) on the wall. Insert anchor (B) into the wall at the marked locations using a drill and hammer. Insert screws (C) through the hook (A) into the anchors (B), then tighten with a Phillips head screwdriver or drill.

