Callan Shallow Bookshelf


URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED:
Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:
Do not discard packing materials and carton until assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if any parts are missing.
Assemble all parts on a clean, smooth surface.


CARE INSTRUCTIONS:
Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning events.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

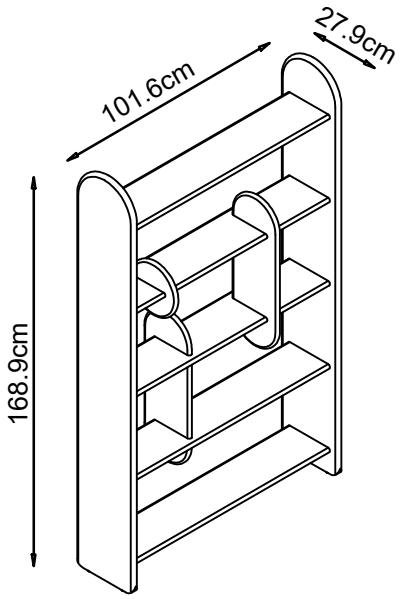


PARTS INCLUDED:

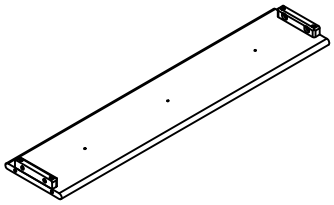


1) Top Shelf x 1

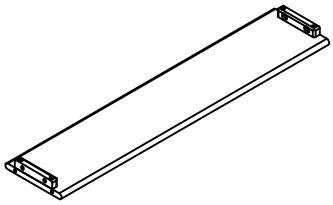


2) Middle Shelf x 1

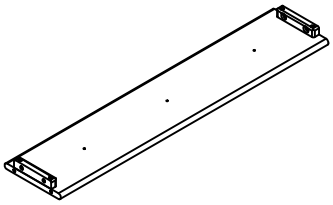


3) Bottom Shelf x 1

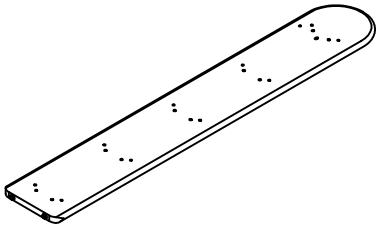


4) Left Side x 1

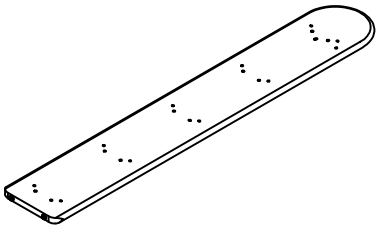

5) Right Side x 1

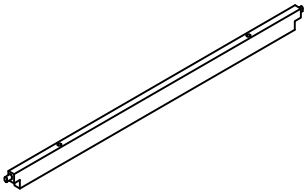

6) Stretcher x 2

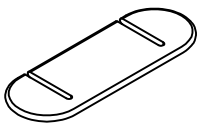

7) Divider x 2



8) Round Divider x 1

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

Callan Shallow Bookshelf

URBAN OUTFITTERS

Assembly Instructions



A) Bolt
(M□□□ x 1.38") x 20
or
(M□□ x 35 mm)




B) Spring Washer
(D 0.47 / 0.24 x 0.08") x 22
or
(D 12 / 6 x 2 mm)




C) Flat Washer
(D 0.63 / 0.24 x 0.08") x 24
or
(D 16 / 6 x 2 mm)



D) Allen Key
(D 0.16 x 2.32") x 1
or
(D 4 x 59 mm)



E) Bolt
(M□□□ x 0.59") x 2
or
(M□□ x 15 mm)




F) L Shaped Metal
(2.95 x 0.79 x 0.08") x 2
or
(75 x 20 x 2 mm)



G) Plastic Anchor
(D 0.35 x 1.38") x 2
or
(D 9 x 35 mm)



H) Screw
(M 0.16 x 1.38") x 6
or
(M 4 x 35 mm)



I) Dowel
(D 0.32 x 1.18") x 26
or
(D 8 x 30 mm)

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


Callan Shallow Bookshelf

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Insert the Dowels (I) to the Top Shelf (1), Bottom Shelf (3) and the Left side (4) as shown.

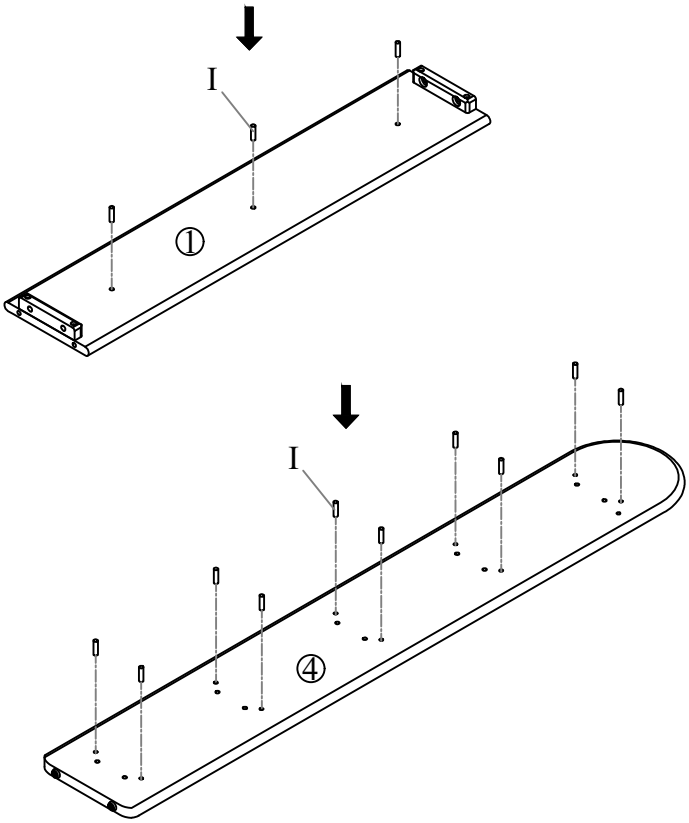

STEP 2

Assemble 1 Stretcher (6) to the Top Shelf (1) with Screw (H) using a Screwdriver as shown.
Repeat the process with the Bottom Shelf (3).

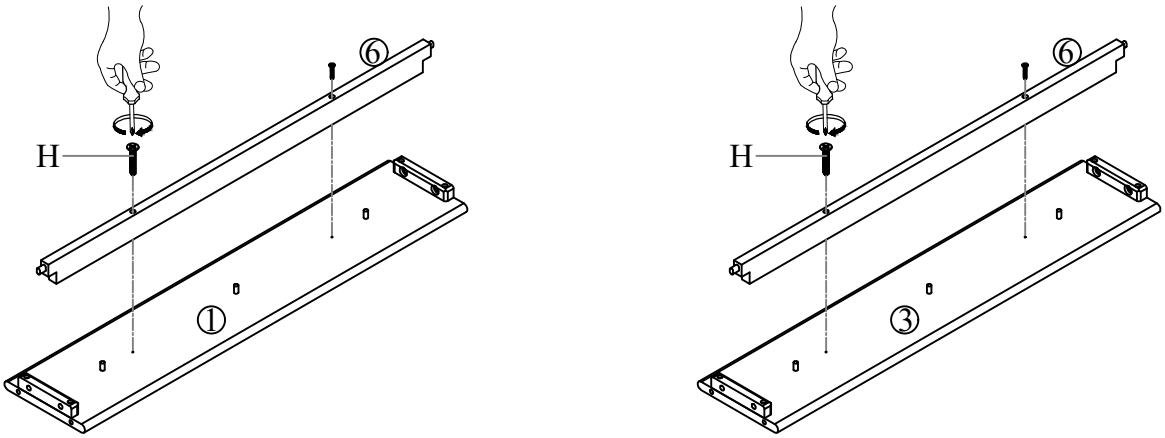

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


Callan Shallow Bookshelf

URBAN OUTFITTERS

Assembly Instructions


STEP 3

Attach all Top Shelf (1), Middle Shelves (2), Bottom Shelf (3) to the Left Side (4) with Bolts (A), Spring Washers (B), Flat Washers (C), using Allen Key (D) as shown.

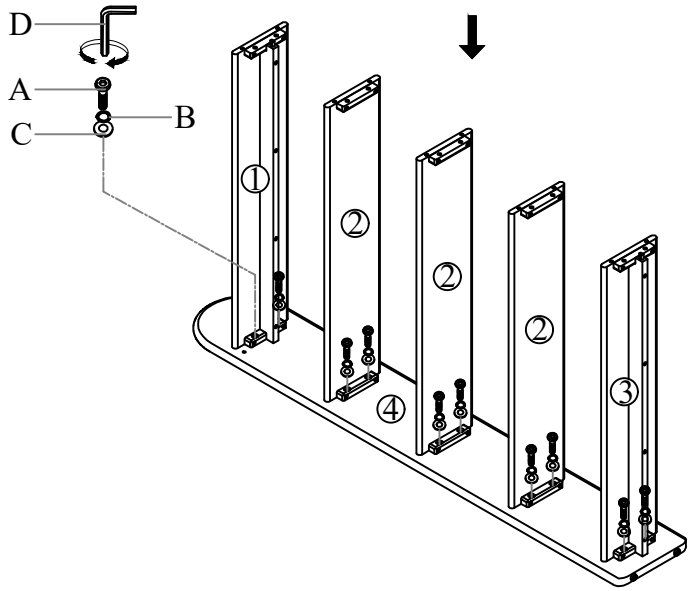


STEP 4

Attach the remaining Dowels (I) to the Top Shelf (1), Middle Shelf (2) and the Bottom Shelf (3) as shown.

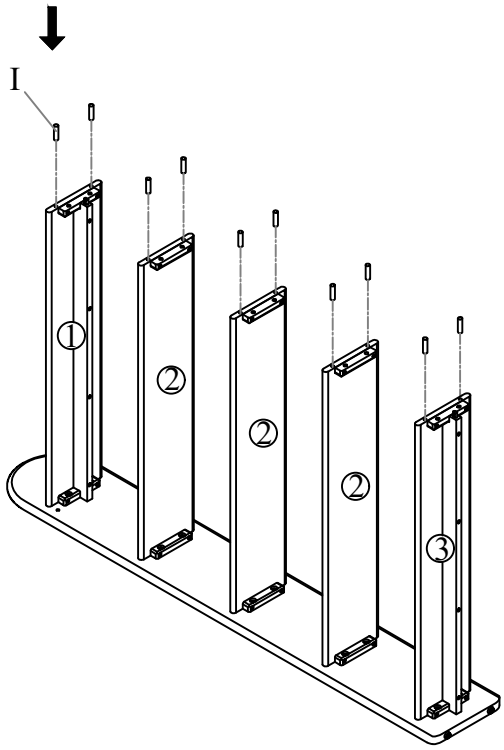

STEP 5

Attach the Right Side (5) as shown.

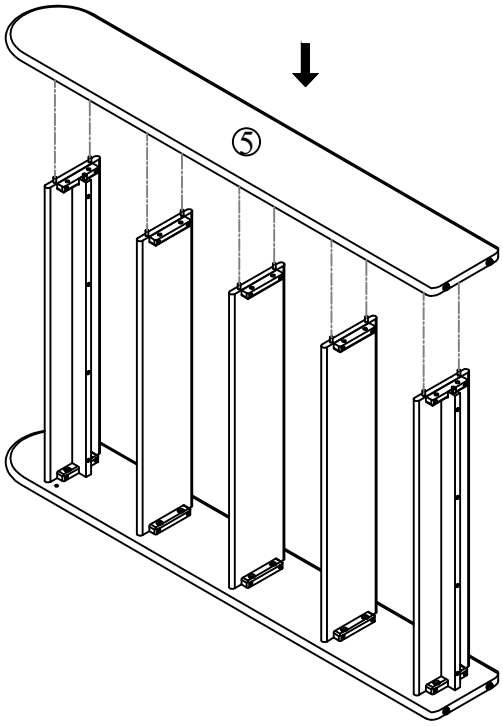

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


Callan Shallow Bookshelf

URBAN OUTFITTERS

Assembly Instructions


STEP 6

Assemble the Right Side (5) to the Top Shelf (1), Middle Shelves (2) and the Bottom Shelf (3) with Bolts (A), Spring Washers (B), Flat Washers (C), using Allen Key (D) as shown.

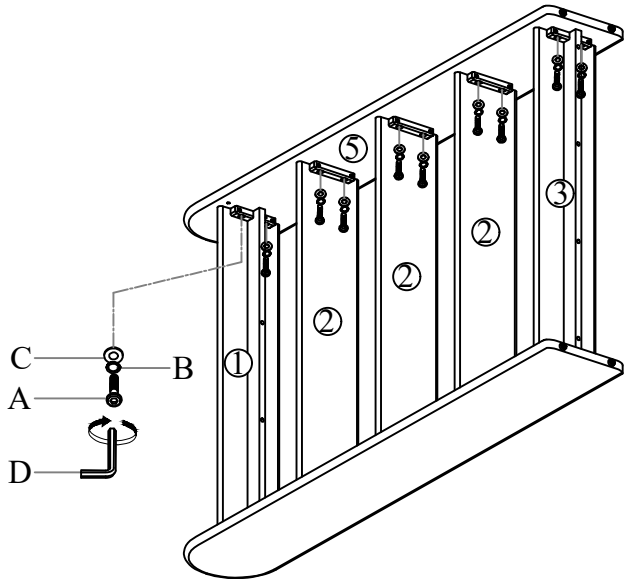

STEP 7

With help, turn the Bookshelf upright. Assemble the L Shaped Metals (F) to the Left Side (4) and the Right Side (5) with Bolts (E), Spring Washers (B), Flat Washers (C), using Allen Key (D) as shown.
Insert 2 Dividers (7) and the Round Divider (8) as shown.

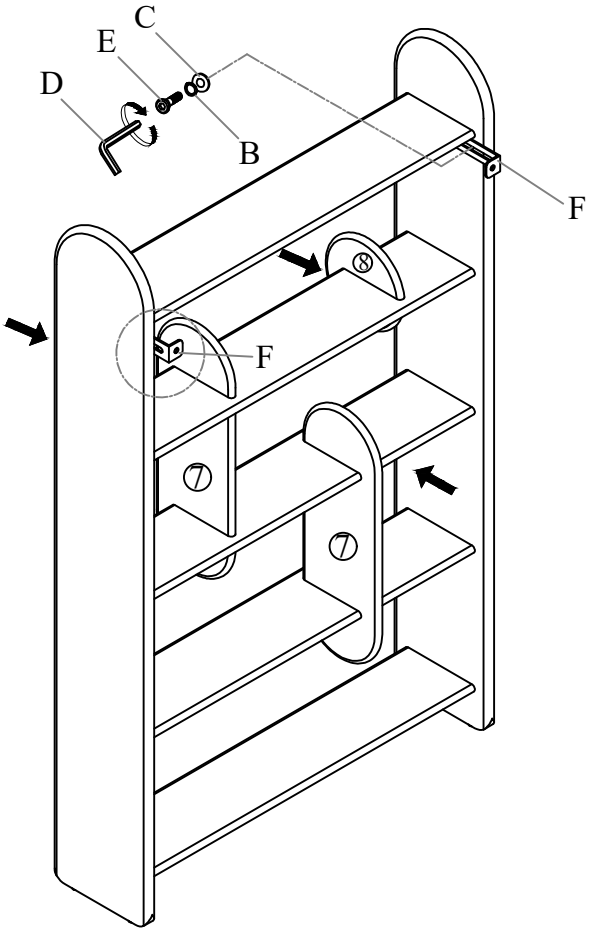


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

STEP 8


Place the furniture on the wall in its desired location. Ensure the furniture is level and mark the location of the mounting hole in the L shaped metal (F) on the wall. Pre-drill hole for the anchor (G) at the marked hole location using a drill and use a hammer to tap it into the wall. **If attaching directly to studs, you do not need to install the plastic Anchor (G).**

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

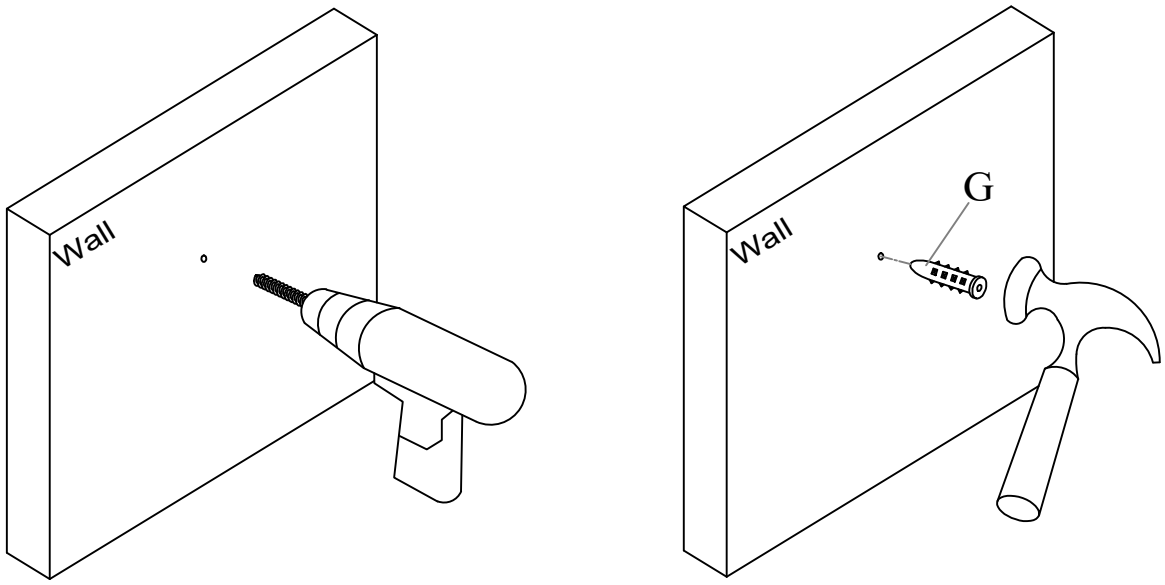

STEP 9

Place the furniture back over the Plastic Anchor (G) and insert Screw (H) with Flat Washer (C) as shown. Tighten with a Screwdriver to complete the installation. Adjust the Levelers to accommodate uneven floors.

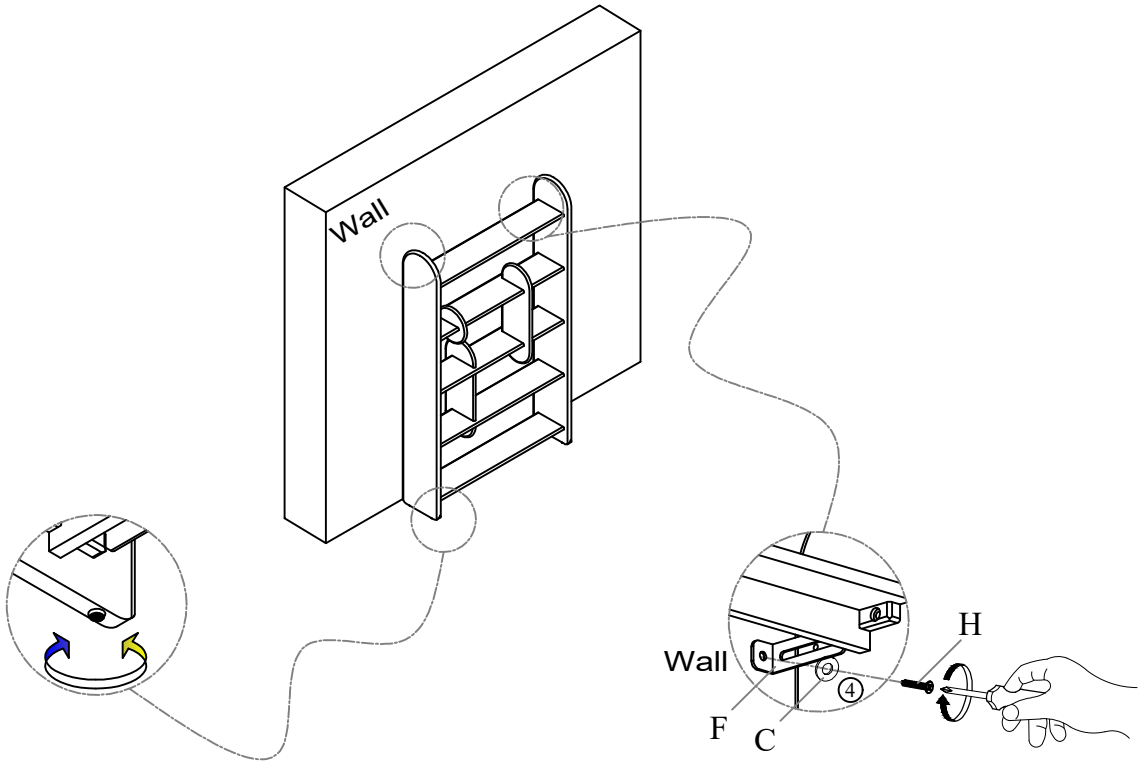

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.