

ZOE CONSOLE

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, #2 Phillips head screwdriver / bit, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or Air conditioning vents.

Dust your wood furniture often to prevent the buildup of dust.

Blot spills do not rub, with a clean white cloth.


Before cleaning any part test a small spot in a hidden area.

Natural Fiber products are designed to be used under cover.


Clean spills with a damp cloth with warm water only.

Do not use any harsh chemicals, abrasive cleaners or

silicone or alcohol-based agents on woven materials.

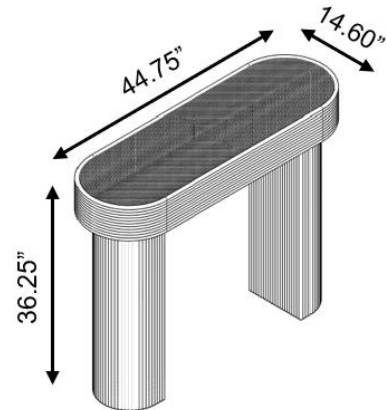

PARTS INCLUDED:



(A) Bolt
(M6 x 50mm) x8




(B) Spring Washer
(M6) x8




(C) Washer
(M6) x8



(D) Hex Key
(M4) x1




(E) Screw JF
(#6 x 3/4") x2




(F) Wall Screw JF
(#6 x 1-1/2") x2




(G) Plastic Anchor
(S6) x2



(H) Tipping Restrain
x2



(I) Bracket
x4

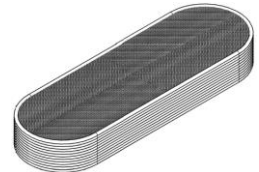


(J) Tabletop
x1



(K) Leg
x2

STEP 1

Flip the tabletop (J) upside down and insert the leg (K) into the tabletop (J) as shown. Insert bolt (A), spring washer (B), and washer (C) as shown, then tighten with hex key (D). With help, stand the console upright.

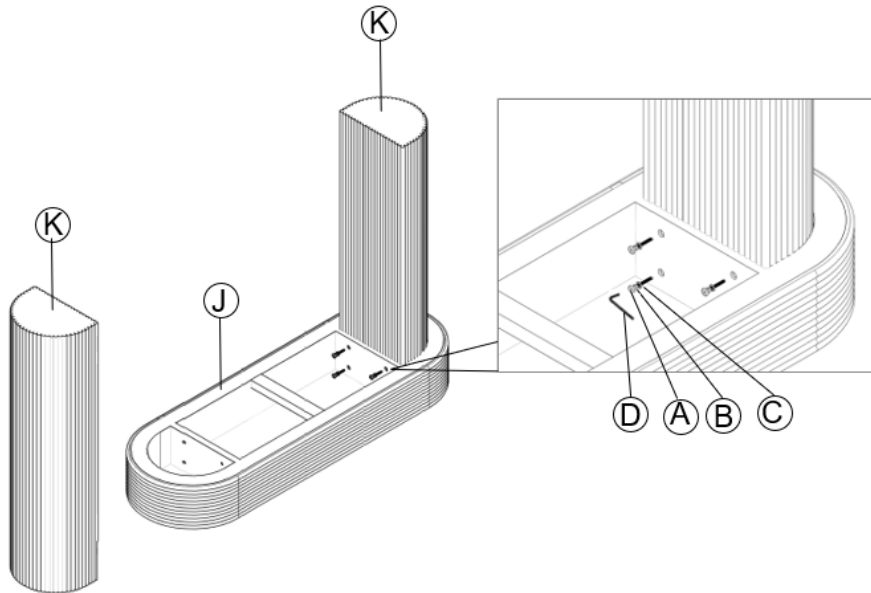

Assembly Instructions

STEP 2

Align two of the brackets (I) with the pre-drilled holes in the back of the tabletop (J), as shown. Insert screws (E) and tighten with a Phillips head screwdriver. With help, place the console against the wall in a preferred location. It is recommended to locate wood studs within your wall to attach the anti-tip brackets (I). Mark the location of the holes in the anti-tip brackets (I) on the wall. With help, move the console back away from the wall.

Wood or Stud Installation:

Place the wall screws (F) through the remaining anti-tip brackets (I) into the wall at the marked locations, then tighten the wall screws (F) with a Phillips head screwdriver or drill.

Drywall Installation:

Insert the drywall anchors (G) into the wall at the marked location using a drill and hammer. Place the wall screws (F) through the remaining anti-tip brackets (I) and into the drywall anchors (G), then tighten the wall screws (F) with a Phillips head screwdriver.

STEP 3

With help, move the console back against the wall in line with the anti-tip brackets (I). Feed the nylon straps (H) through the anti-tip brackets (I), then pull the nylon straps tight.

