

Brisbane Shoe Rack

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED: N/A



WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

PARTS INCLUDED:

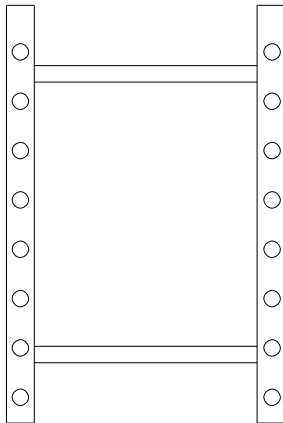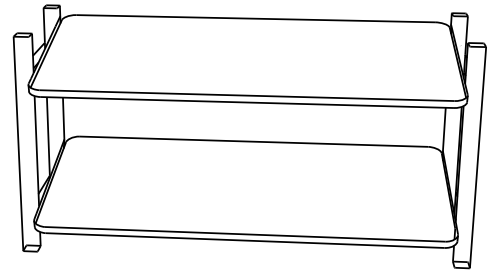


A) Wooden Stands
x2

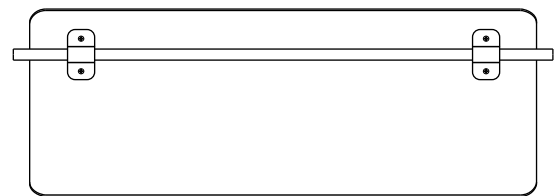


B) Wooden Shelf
x2



C) Metal Rod
x2



D) Allen Bolt
[M12 x 40mm] x8

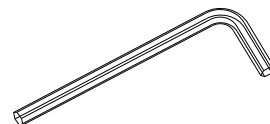

E) Allen Key


Brisbane Shoe Rack

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Align and insert the loose metal rods (C) and the metal rods attached to the wooden shelves (B) to the wooden stands (A).

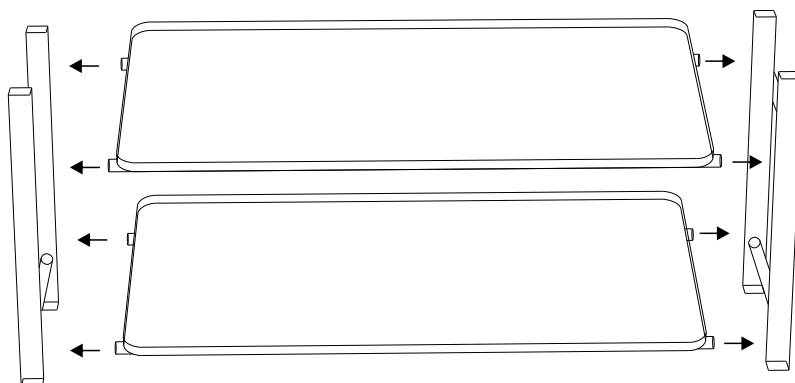

STEP 2

Insert the screws (D) through the wooden stands (A) and tighten with Allen key (E). Do not over-tighten!

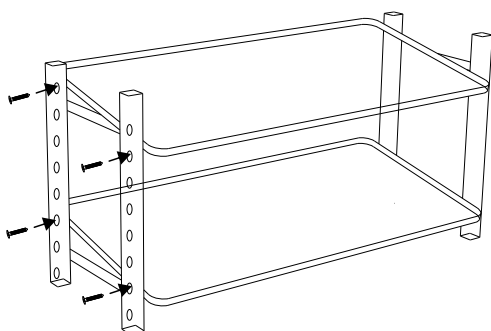

Assembled Product

