URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED: PHILLIPS HEAD SCREWDRIVER

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

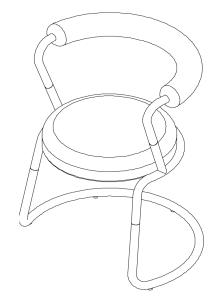

PARTS INCLUDED

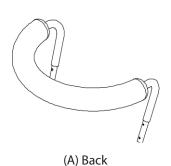

(A) васк 1х



(B) Seat 1x



(C) Base 1x



(D Bolt M6 x 10mm 8x



(E) Hex Key

Assembly Instructions

STEP 1. Align the Seat (B) with the Base (C) as shown. You may need to pull or push the rails apart or together to make them align with the base. Press firmly together. Insert Bolts (D) and hand tighten. Align the Back (A) as shown. Press firmly together. Insert Bolt (D). Once all bolts are installed you may tighten them with the supplied Hex Key (E).

