

FURNITURE KNOB

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Drill, Phillips head screwdriver driver, Pencil

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

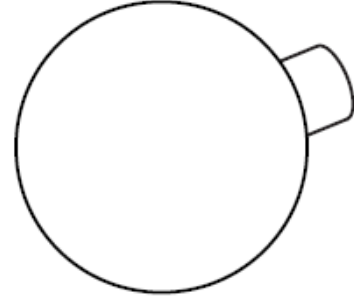

PARTS INCLUDED:

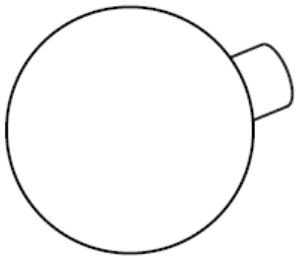

(A) Knob




(B) Screw - NOT INCLUDED
[#;THREAD x Thickness of drawer +1/4"]

Knob Installation:


STEP 1

Measure the thickness of the door or drawer front to determine the length of the screw to source. Determine a location for the knob (A) and use a pencil to mark the location. Use existing holes if possible.

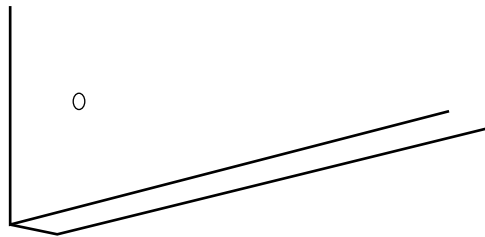

STEP 2

Use a drill bit ~1 mm larger than the screw (B) to make a hole in the door or drawer at the marked location if necessary.

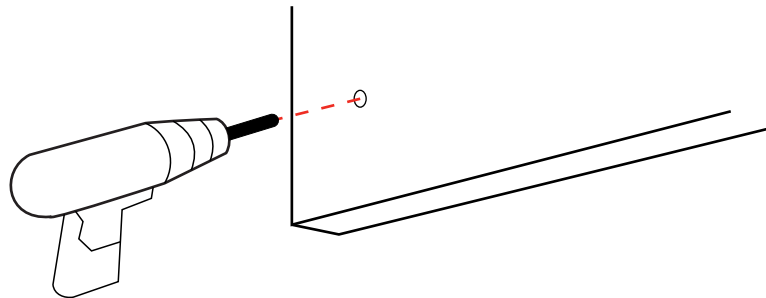

STEP 3

Use a Phillips head screw driver to fasten the Knob (A) to the door or drawer with screw (B). Do not over-tighten the screw (B).

