

SZ:BUTTERFLY SIDE TABLE

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot split do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re- tighten all bolts after initial use.

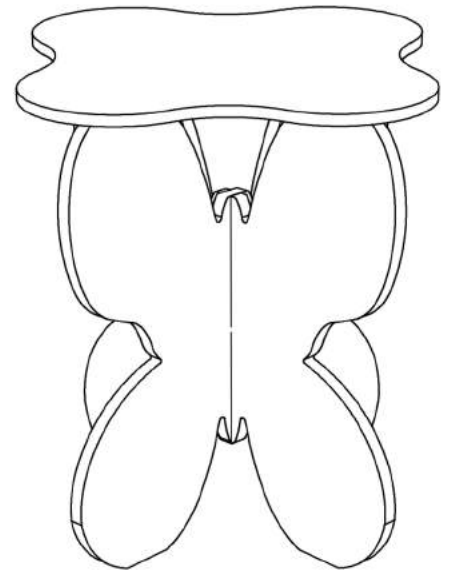

PART INCLUDED

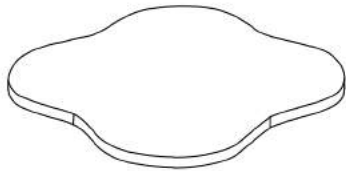

(A) Wooden Body
1x

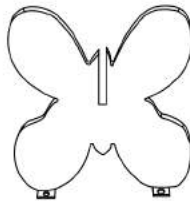

(B) Leg
2x




(C) Allen Bolt
[M8x16mm 8x]



(D) Allen key
1x

STEP 1 Attach leg with other leg by insert them into the slot.

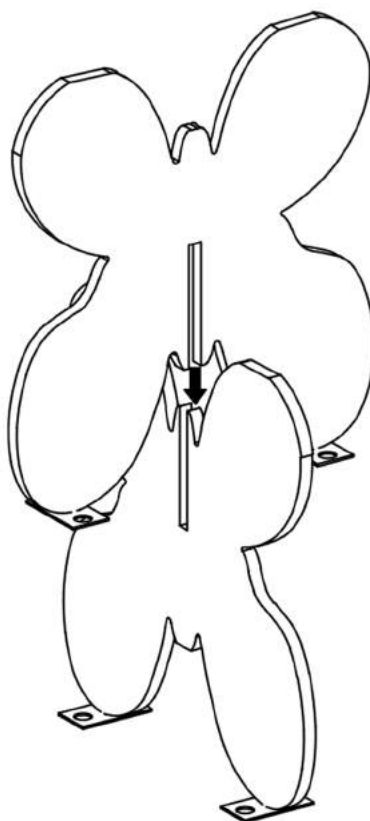

STEP 2 Now put the table top upside down on a protective surface and align leg with top and tighten the screw as shown in the picture.

