

KANE SIDE TABLE

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
Do not drag while moving.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

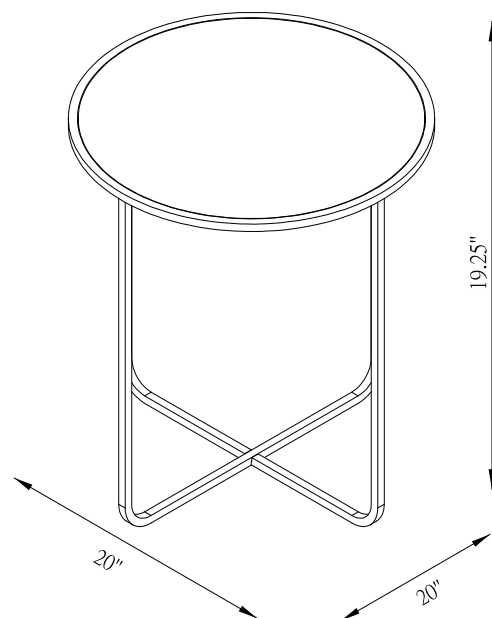


PARTS INCLUDED

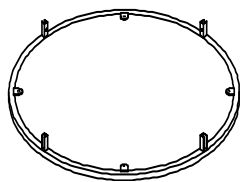


A) Wood top x1

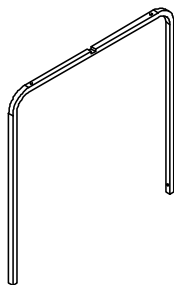

B) Metal Frame x1

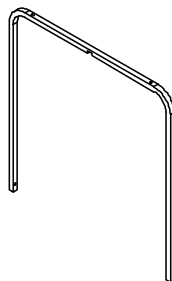

C) Metal Frame x1



D) Screw [M5xL10mm] x4



E) Allen Key x1

KANE SIDE TABLE

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal Frame (B) with Wood top (A). Make sure the hole is facing the correct way. Insert Bolts (D) and partially tighten with Allen key (E). Align Metal Frame (C) with Wood top (A). Insert Bolts (D) and partially tighten with Allen key (E). Once all screws are inserted and partially tightened, tighten all screws completely.

