

TOOLS REQUIRED BUT NOT INCLUDED: N/A


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

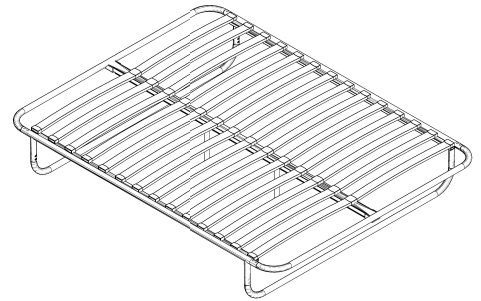


PARTS INCLUDED

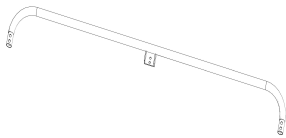


A) End
x2

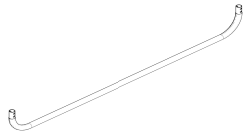


B) Foot
x2

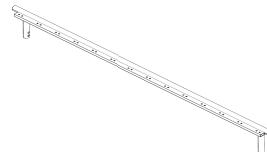

C) Siderail
x2

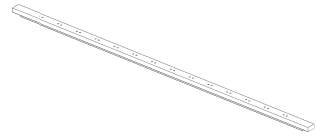

D) Center Rail
x1




E) Center Foot
x2



F) End Plastic Cap
x30



G) Center Plastic Cap
x15



H) Slat
x30



I) Bolt
[M6x40mm] x2



J) Bolt
[M6x70mm] x2




K) Nut
[M6] x2




L) Bolt
[M6x15mm] x16



M) Flat Washer
x20



N) Hex key
x1



O) Wrench
x1


STEP 1

Screw Bolts (I) into Center Feet (E) then screw Center Feet (E) onto Center Rails (D). Twist to tighten.




STEP 2

Slide Foot (B) onto Side Rails (C). Insert Bolts (L) into Flat Washers (M) and Side Rails (C) as shown. Tighten with Hex K (N). Repeat for additional Foot (B).

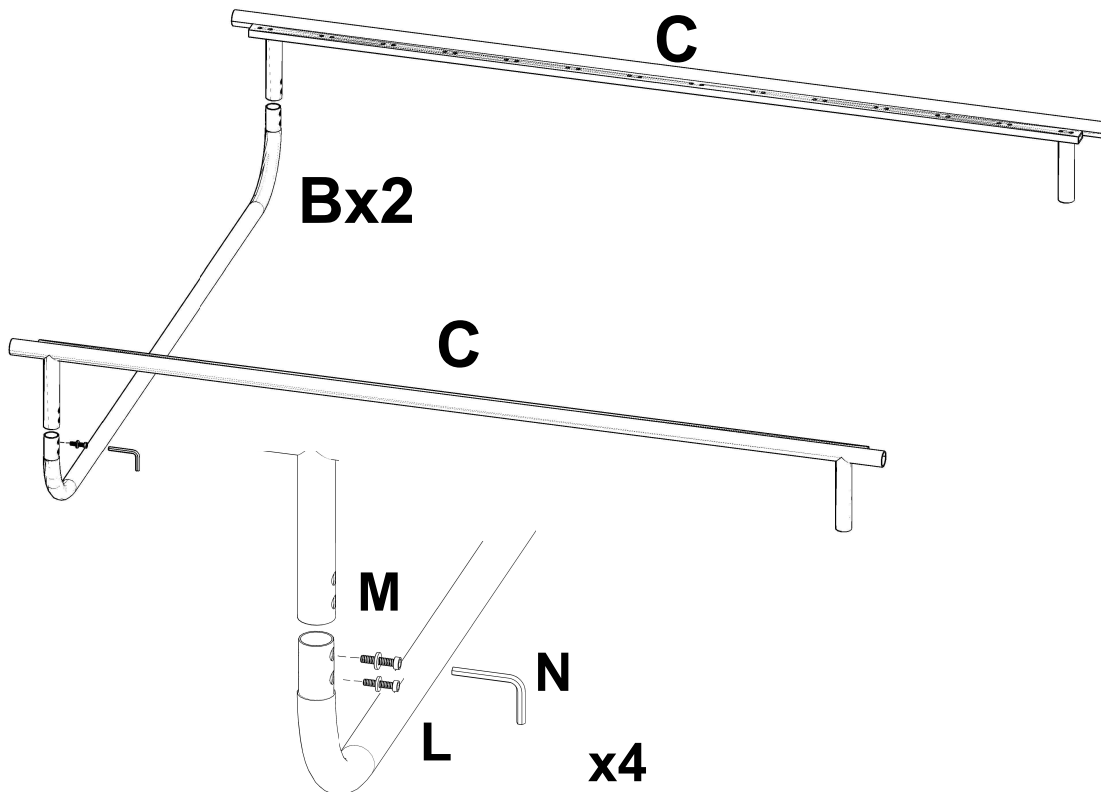


STEP 3

Slide End (A) onto Side Rails (C). Insert Bolts (L) into Flat Washers (M) and into Side Rails (C) as shown. Tighten with supplied Hex Key (N). Repeat for additional End (A).

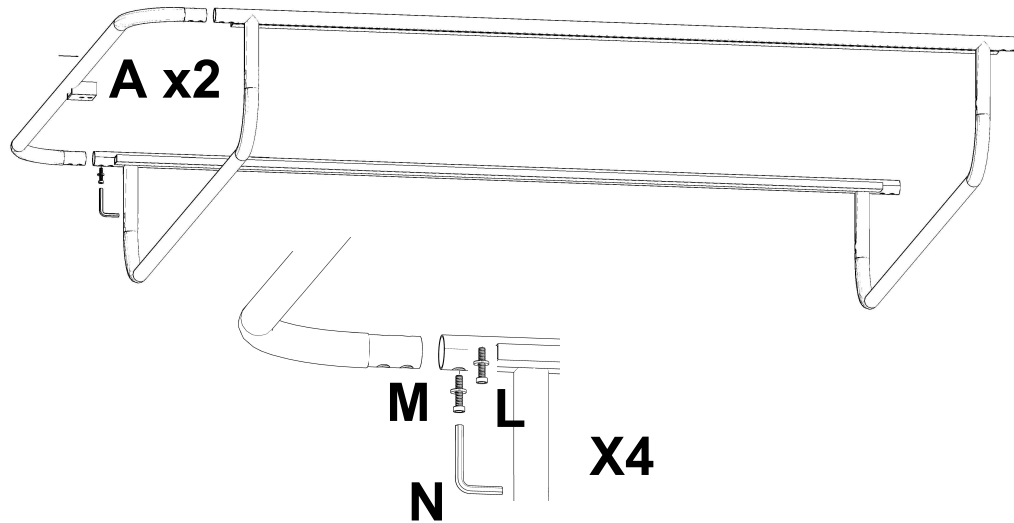


STEP 4

Insert Center Rail (D) onto the brackets at the center of Ends (A) as shown. Insert Bolts (J) into Flat washers (M) and into the brackets as shown. Tighten with supplied Hex Key (N) and Wrench (O).

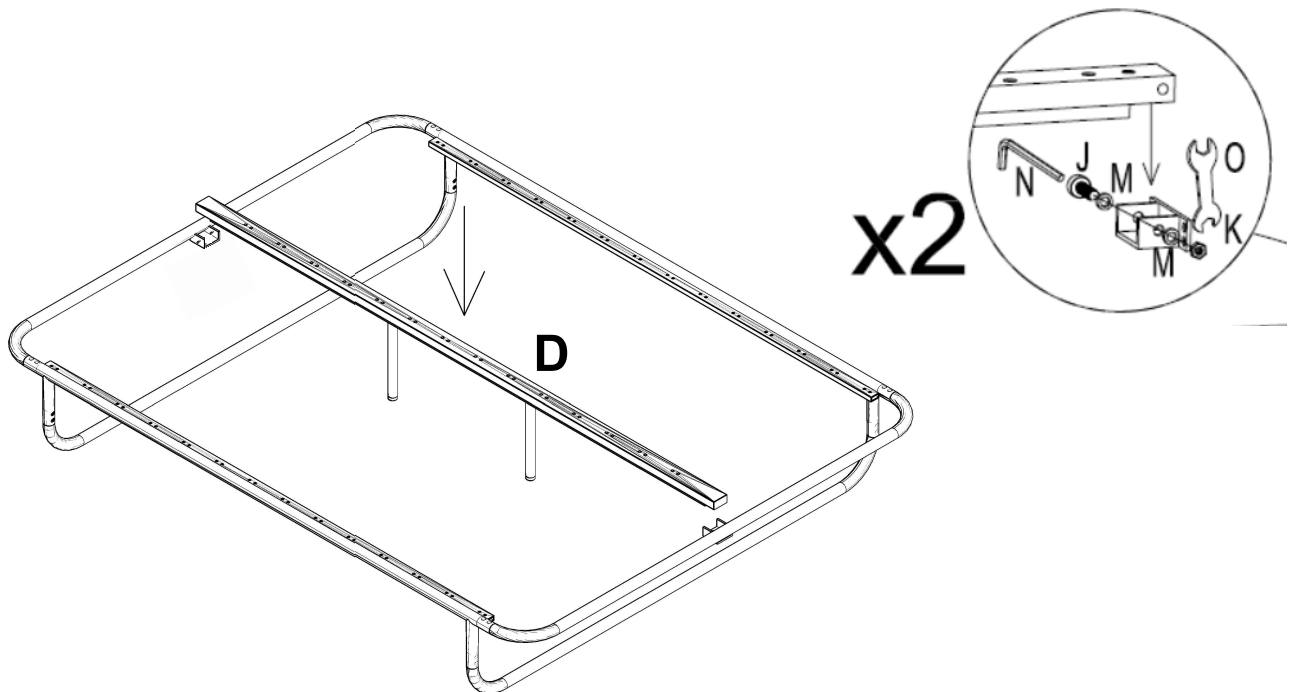

STEP 5

Firmly press Plastic Caps (F&G) onto Side Rails (B) and Center Rail (D) as shown.

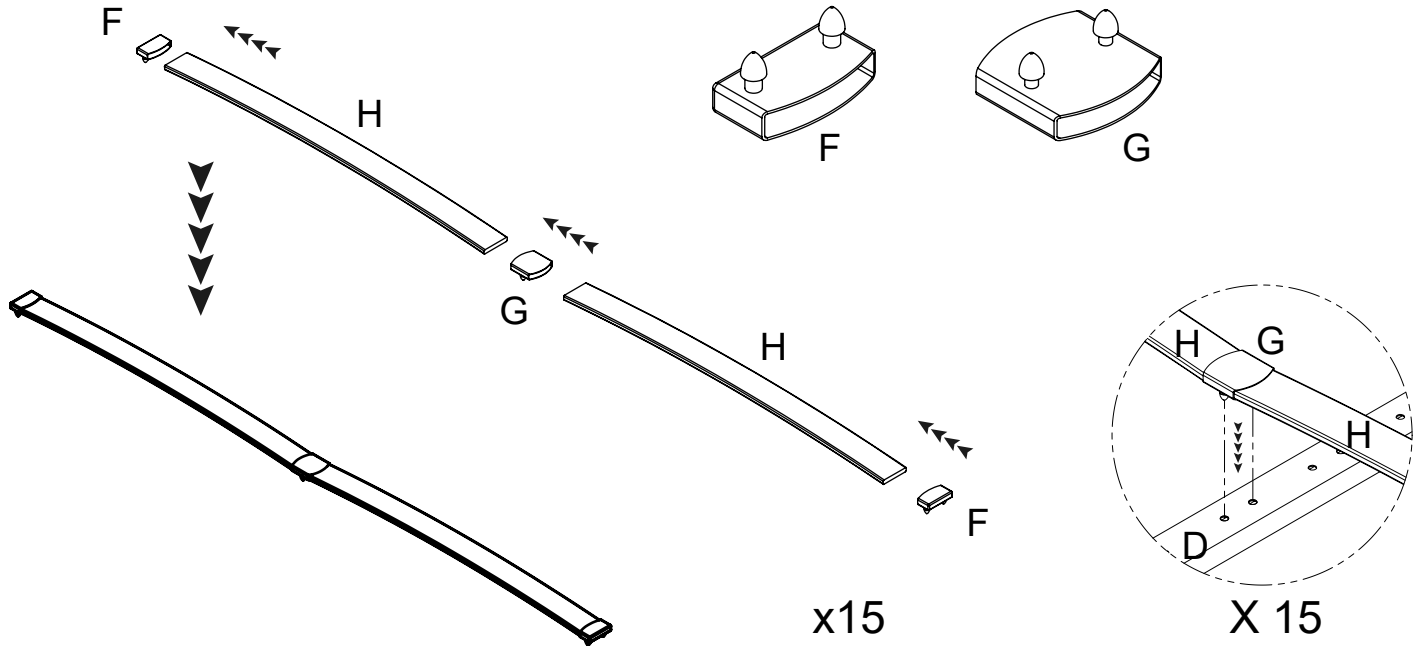

STEP 6

Continued.

