

RYAN CABINET

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED: N/A

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors.


Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

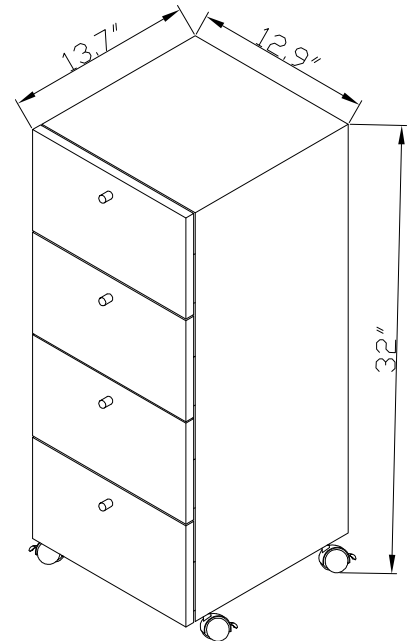

PARTS INCLUDED

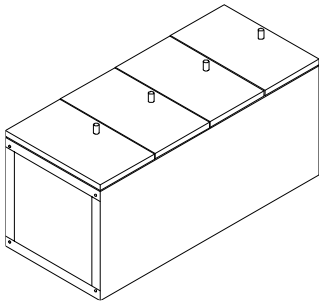

(A) Metal Cabinet
x1



(B) Plastic Locking Casters
x4



(C) Flat Washer
x4



(D) Open Wrench
x1

RYAN CABINET

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Gently place Metal Cabinet (A) on a clean smooth surface such as cardboard or carpet on its back. Insert flat washer (C) around plastic locking casters (B) as shown and screw into the Metal Cabinet (A) . Tilt upright to complete assembly.

