

CORA LACQUERED CREDENZA

URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean, smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills, do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

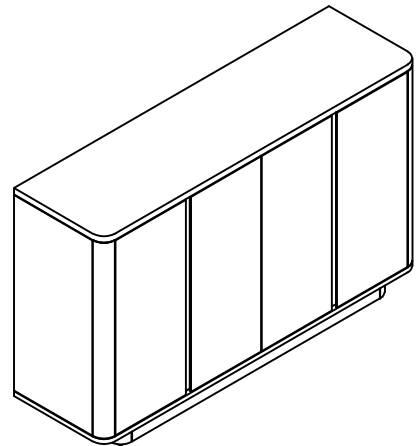

ANTI-TIP KIT



(2) Bracket
Quantity: 4pcs



(3) Nylon strip
M4 x 20mm
Quantity: 2pcs



(4) Screw
M4 x 20mm
Quantity: 4pcs



(5) Screw
M4 x 35mm
Quantity: 4pcs




(6) Wall plug
4 x L40
Quantity: 4pcs

CORA LACQUERED CREDENZA

URBAN OUTFITTERS

Assembly Instructions

STEP 1. Align the anti-tip brackets (2) to the top back of the case.
Insert Screws (4) and tighten completely. Do not overtighten.

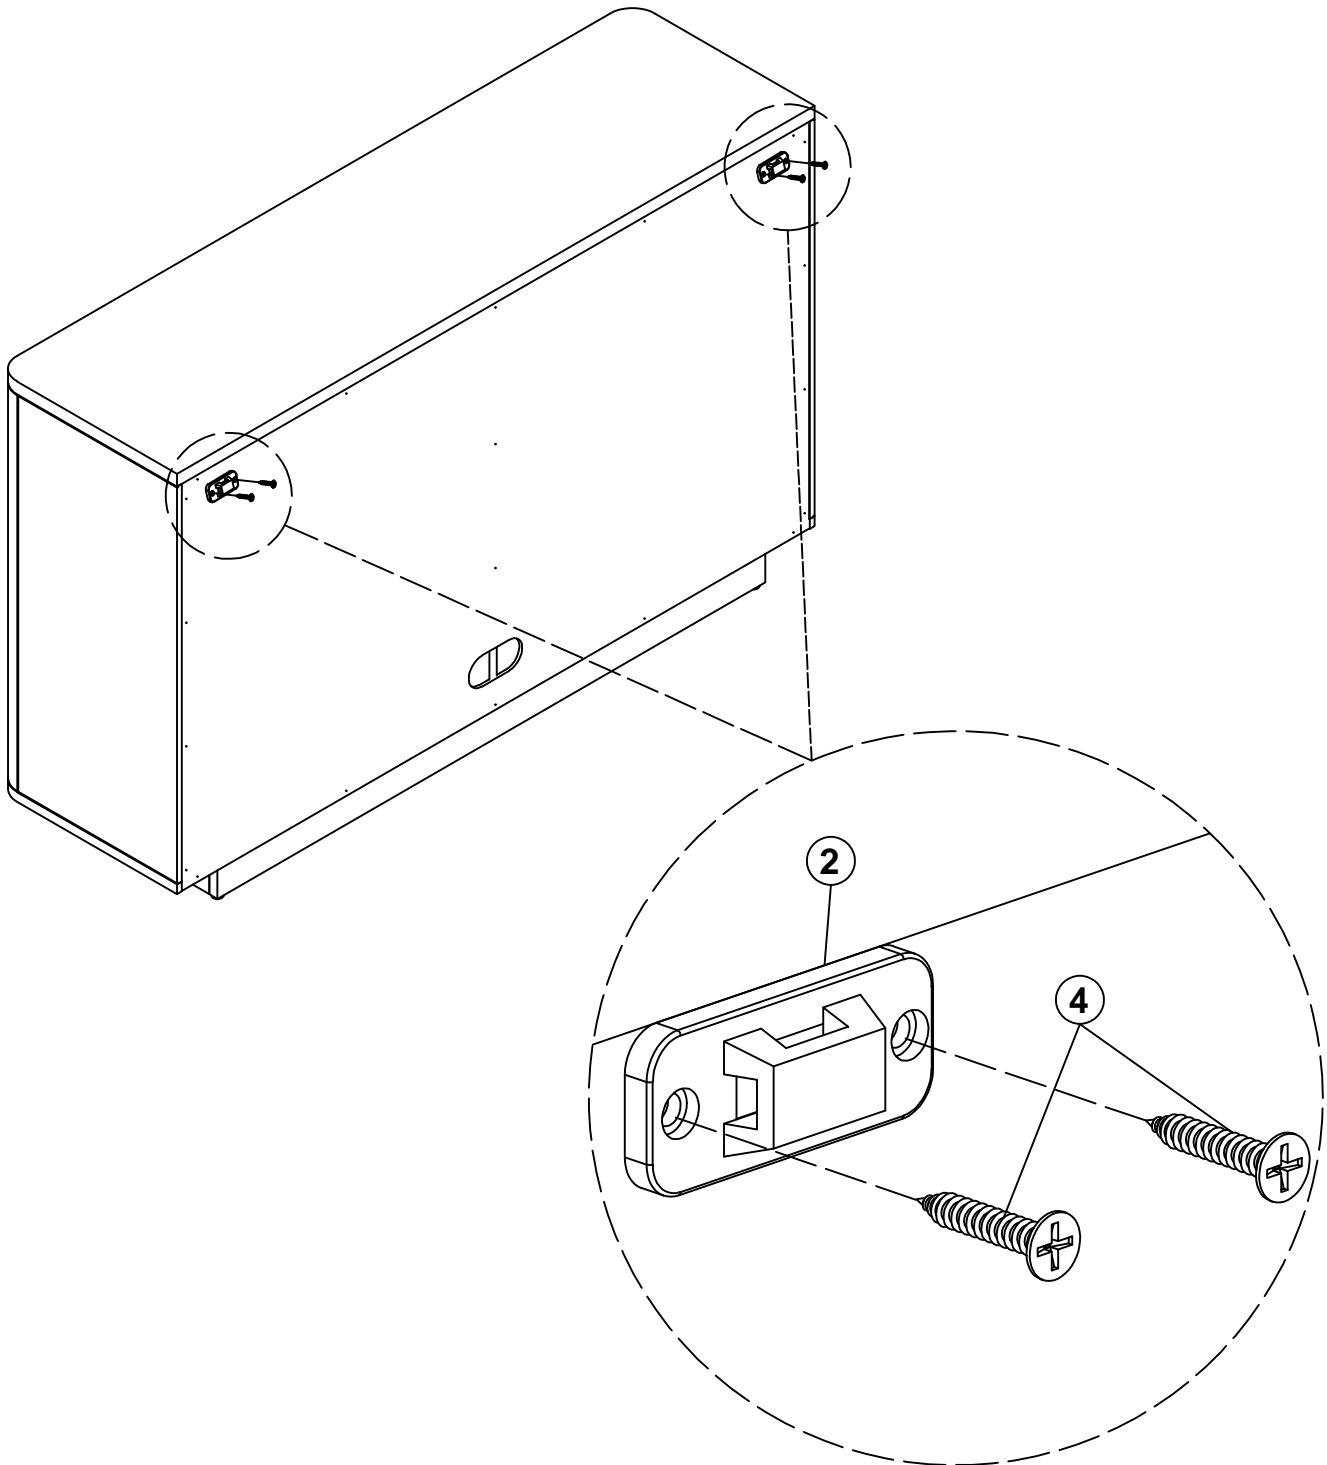


CORA LACQUERED CREDENZA

URBAN OUTFITTERS

Assembly Instructions

STEP 2. Contact your local hardware store to purchase the correct anchors for your wall-type. Align the brackets to the wall and make sure they line up with the brackets on the back of the case from step 1. Screw the brackets to the wall using the correct anchors. Slide the case to the wall, leaving a little bit of room between the case and the wall. Feed the Nylon Strap through both brackets and pull tight.

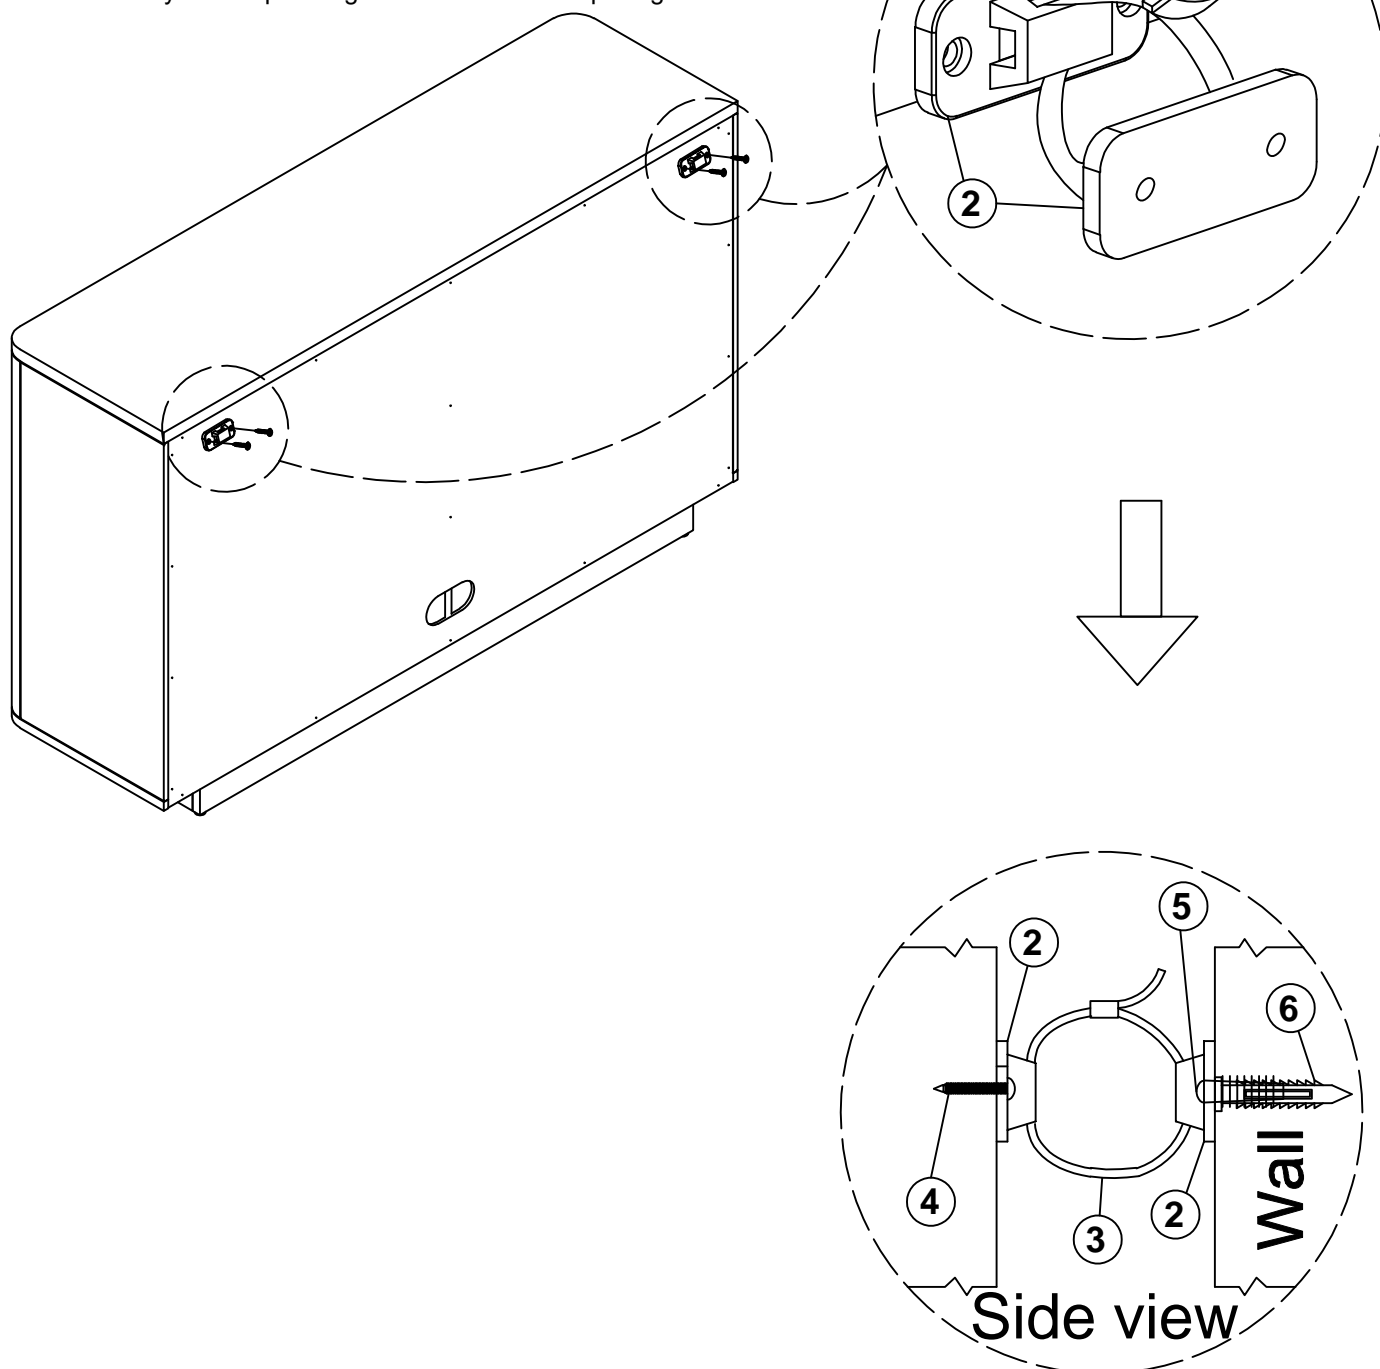

CORA LACQUERED CREDENZA

URBAN OUTFITTERS

Assembly Instructions

FINISH

