## **Eloise Toilet Paper Shelf**

### **Assembly Instructions**

## **URBAN OUTFITTERS**

### TOOLS REQUIRED BUT NOT INCUDED:

Drill, Phillips head screwdriver, Hammer, Pencil

### **WARNINGS:**

Do not throw away packing materials and carton until after assembly. Ensure all parts are present prior to assembly. Contact customer service immediately if parts are missing.

Accombia all parte en a clean amonth curfoce

Assemble all parts on a clean smooth surface.

### **CARE INSTRUCTIONS:**

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

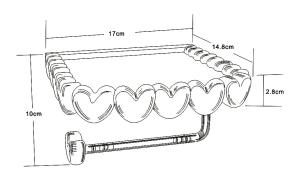

### PARTS INCLUDED:



(A) Shelf [6.69" x 5.83" x 3.93"] or [17 x 14.8 x 10 cm]



(B) Plastic Anchor [D0.35 " x 1.38 "] x2 or [D9 x 35 mm] x2



(C) Screw [D0.27 " x 1.38 "] x2 or [D7 x 35 mm] x2



(D) Metal Hardware [D2.08 " x 0.86"] x2 or [L53 x W22 mm] x2


# **Eloise Toilet Paper Shelf**

### **Assembly Instructions**

**URBAN OUTFITTERS** 

#### STEP 1


Place the Shelf (A) on the wall in a chosen location. Ensure the Shelf (A) is level and mark the corresponding locations for the metal hardware (D). Use the dimensions in the below diagram as reference.



### STEP 2


### Wood or Stud installation:

Insert the screws (C) through the metal hardware (D) then, use a Phillips head screwdriver to fasten the metal hardware (D) tightly to the wall at the marked locations. Ensure the metal hardware is aligned and level.

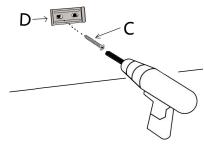

### Drywall installation:

Insert anchors (B) into the wall at the marked locations using a drill and a hammer as shown. Insert the screws (C) through the metal hardware (D) and into the anchors (B) then, use a Phillips head screwdriver to fasten the metal hardware (D) tightly to the wall. Ensure the metal hardware is aligned and level.

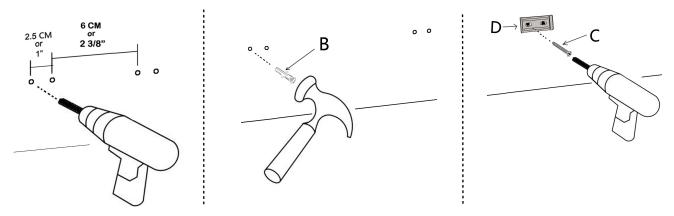

STEP 3

Gently hang the shelf (A) on the metal hardware (D). If the shelf (A) slopes downward, tighten the screws (C).

