

EZRA WIGGLE STORAGE MIRROR

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

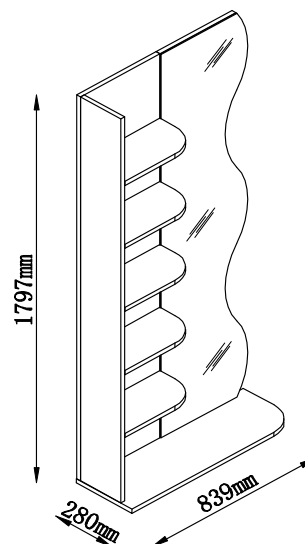


PARTS INCLUDED



(A) Shelf
x1



(B) Mirror
x1



(C) Bottom panel
x1




(D) Metal bracket
x1


HARDWARE LIST



(E) Hex key
x 1



(F) Bolt
[1/4" x 1-1/8"] x6



(G) Bolt
[1/4" x 2/3"] x12




(H) Spring washer
[1/4"] x18



(I) Flat washer
[1/4"] x18



(J) Nylon strip
x1

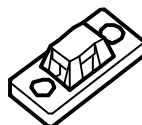

(K) Bracket
x2



(L) Screw
[M3 x 32mm] x2



(M) Screw
[M3 x 19mm] x2


EZRA WIGGLE STORAGE MIRROR

Assembly Instructions

URBAN OUTFITTERS


STEP 1

With help lay the Parts out onto a clean smooth surface such as carpet or cardboard. Align the Shelf (A) to the Mirror (B) and press firmly into place as shown. Align the Bottom Panel (C) to the partially assembled case as shown. Insert Flat Washer (I), Spring Washer (H) and Bolt (F). Tighten with supplied Hex Key (E). Do not over-tighten. Once complete carefully stand the Case upright without leaning it on the bottom as this can damage them.

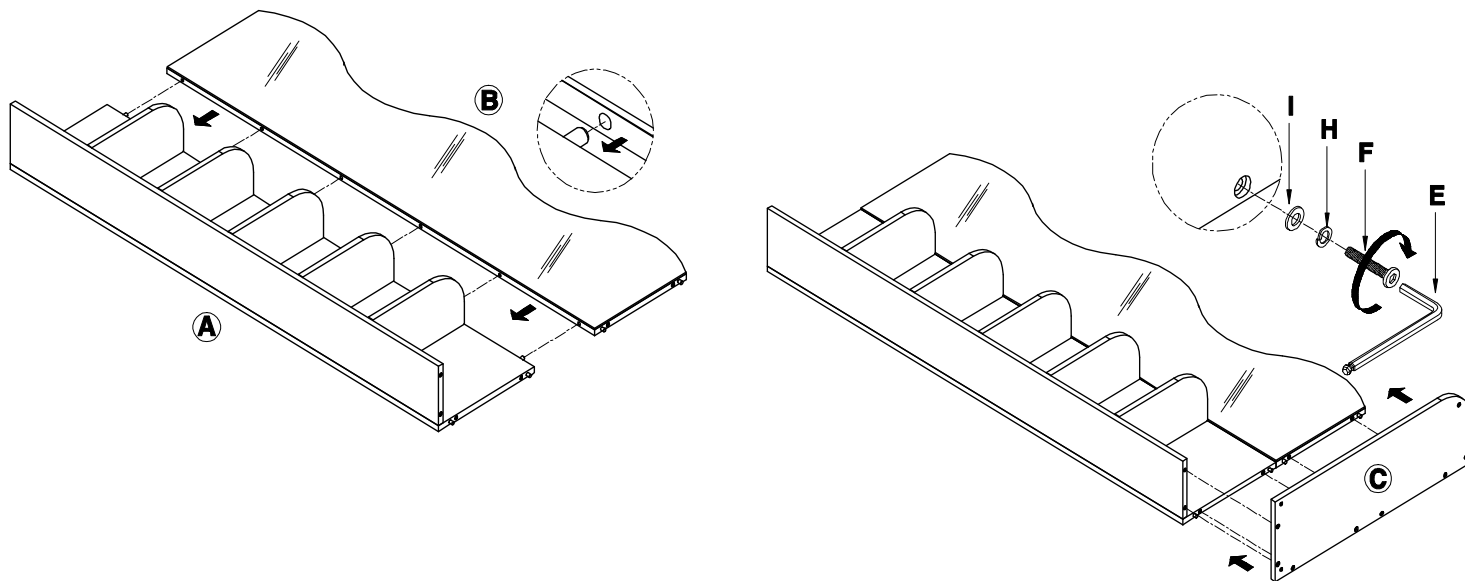

STEP 2

Place the Metal Bracket (D) on the back panel as shown. Insert Flat Washer (I), Spring Washer (H) and Bolt (G) as shown. Tighten with supplied Hex Key (E). Do not over-tighten. Turn the adjustable feet so the Case sits flat on the ground.

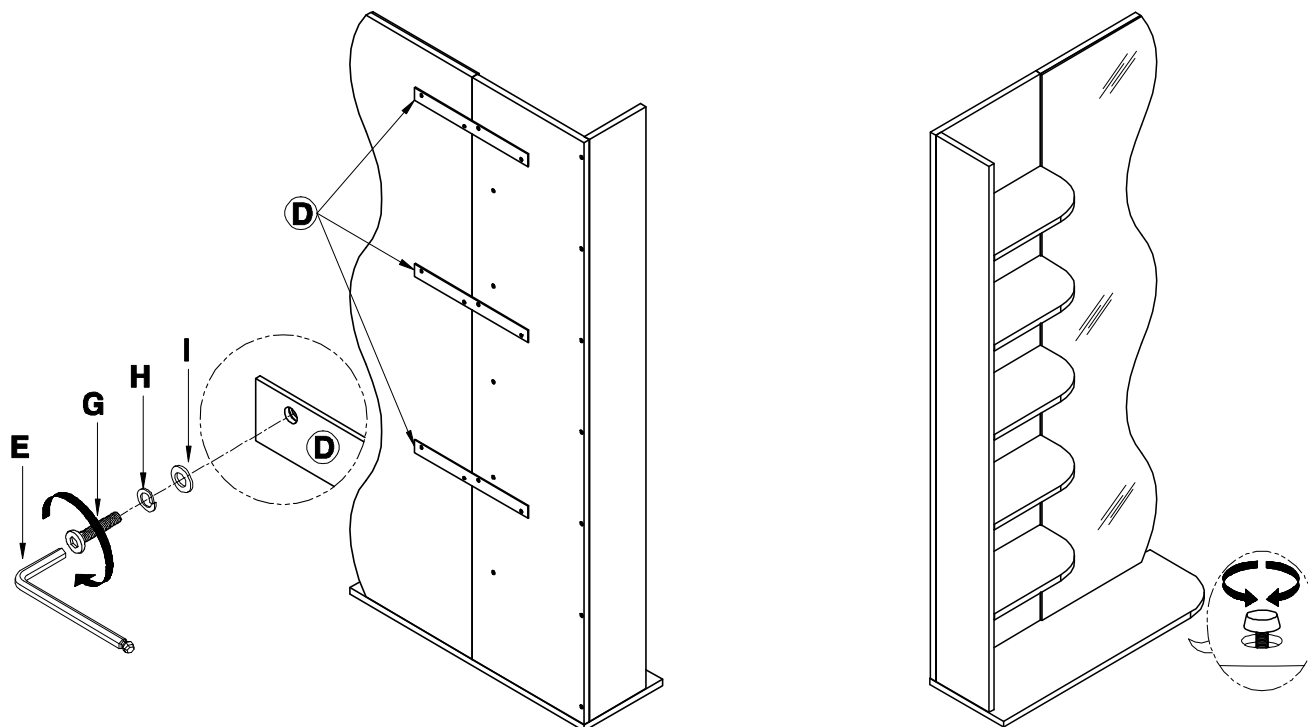

STEP 3

- Align the Anti Tip Brackets (K) to the Top back of the Case. Insert Screws (L) and tighten completely. Do not overtighten.
- Contact your local hardware store to purchase the correct anchors for your wall-type.
- Align the brackets to the wall and make sure they line up with the brackets on the back of the case from step (a).
- Screw the brackets to the wall using the correct anchors.
- Slide the case to the wall. Leaving a little bit of room between the case and the wall.
- Feed the Nylon Strap through both brackets and pull tight.

