

TABITHA HOOK / KNOB

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips Head Screw Driver, Hammer

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

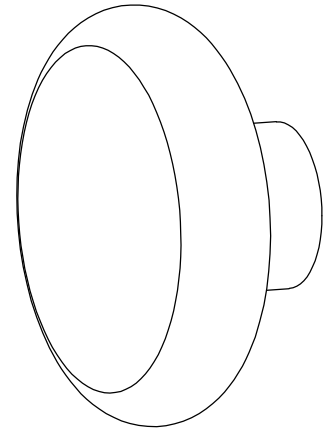

PARTS INCLUDED




(A) Hook / Knob

Quantity: 1pc


HARDWARE LIST




(1) Bolt
M6 x 40mm
Quantity: 1pc



(2) Threaded wall bolt
M6 x 50mm
Quantity: 1pc



(3) Wall plug
6 x 55mm
Quantity: 1pc



(4) Allen key
4 x 55mm
Quantity: 1pc


TABITHA HOOK / KNOB

URBAN OUTFITTERS


Assembly Instructions

HOOK - WALL MOUNTED ATTACHMENT


STEP 1:

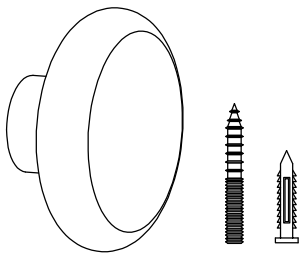


STEP 2:

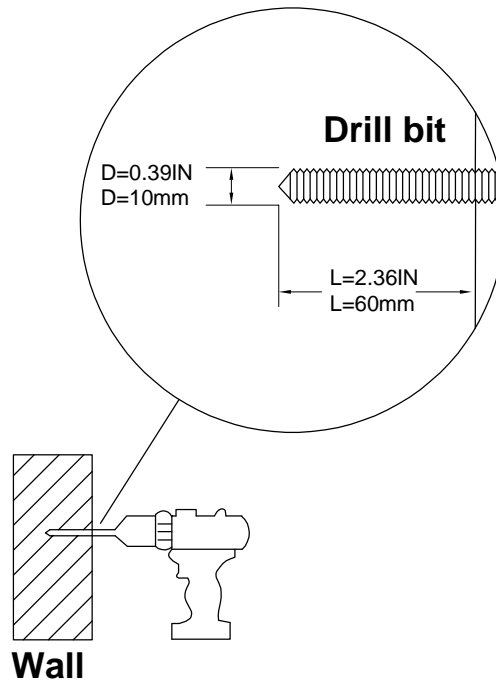


STEP 3:

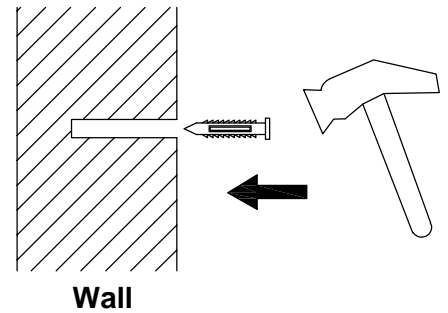


STEP 4:

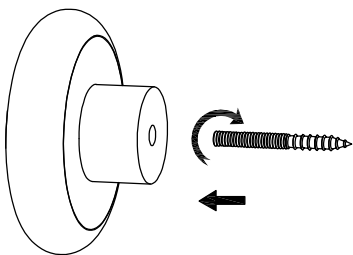

STEP 5:

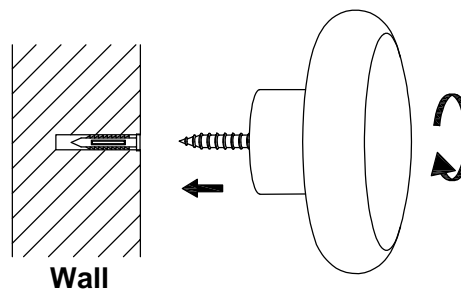

STEP 6:

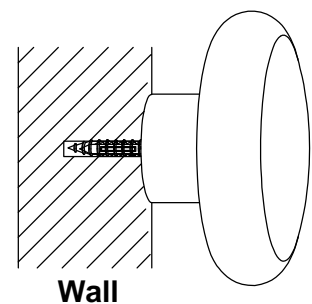


TABITHA HOOK / KNOB

URBAN OUTFITTERS


Assembly Instructions

KNOB - BOLTED ATTACHMENT

STEP 1:

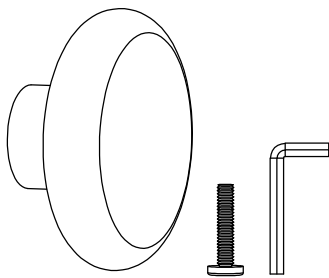

STEP 2:

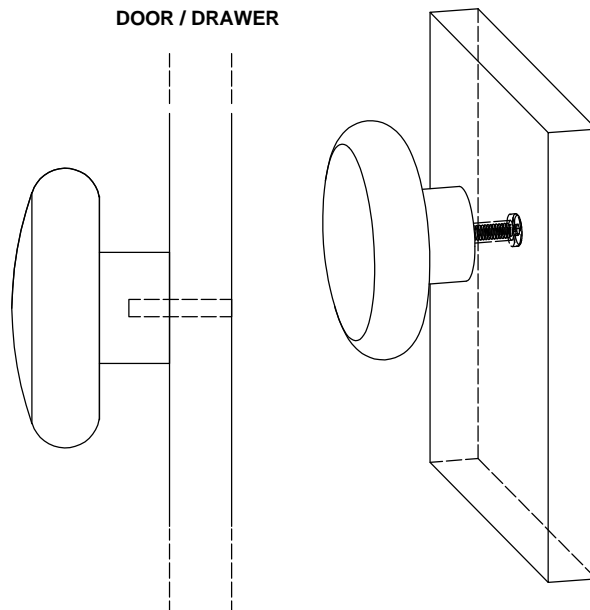

STEP 3:

