


JOANNA PRESSED METAL WALL SHELF URBAN OUTFITTERS

Assembly Instructions


PARTS REQUIRED BUT NOT INCLUDED:




Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean, smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Blot spills, do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.
Use Phillips head screw 8.5mm

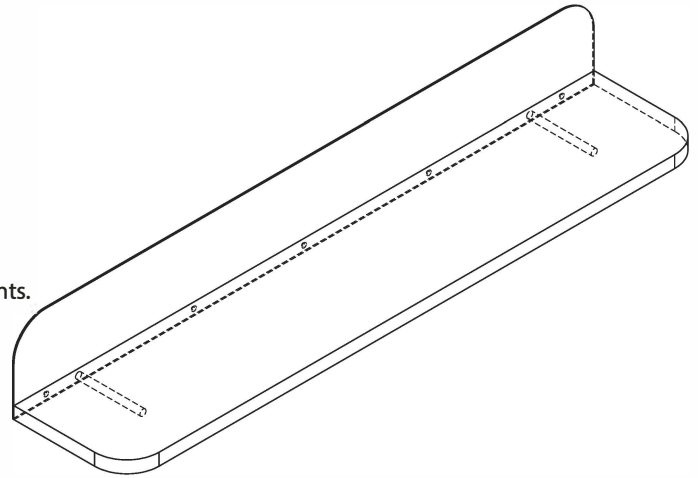


PARTS INCLUDED

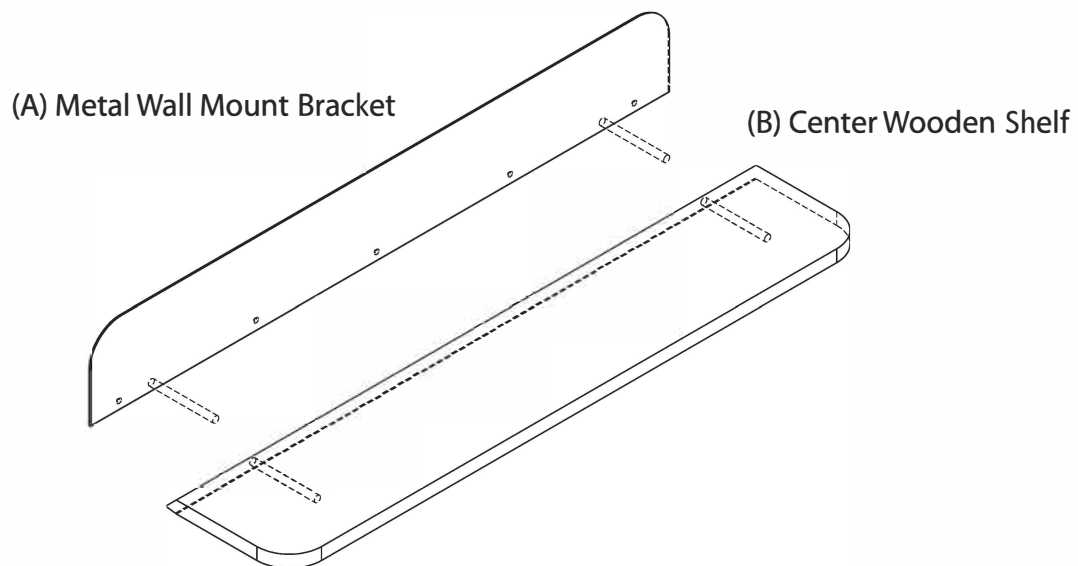

JOANNA PRESSED METAL WALL SHELF **URBAN OUTFITTERS**


Assembly Instructions

STEP 1

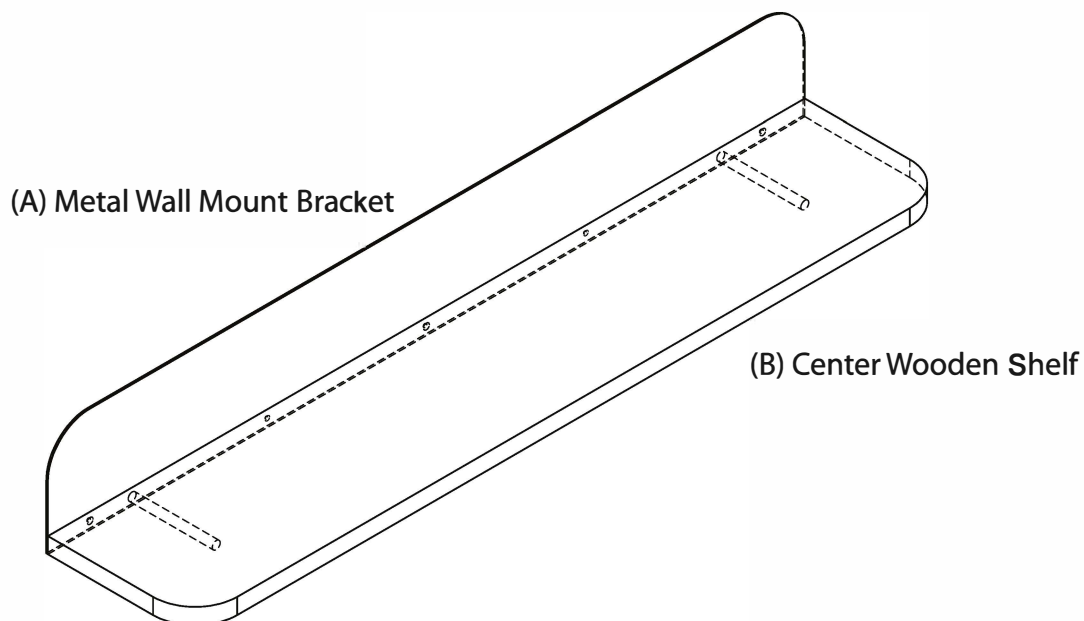

STEP 2

Unscrew the small set screws in the bottom of the shelf to remove the Center Wooden Shelf from Metal Wall Mount Bracket

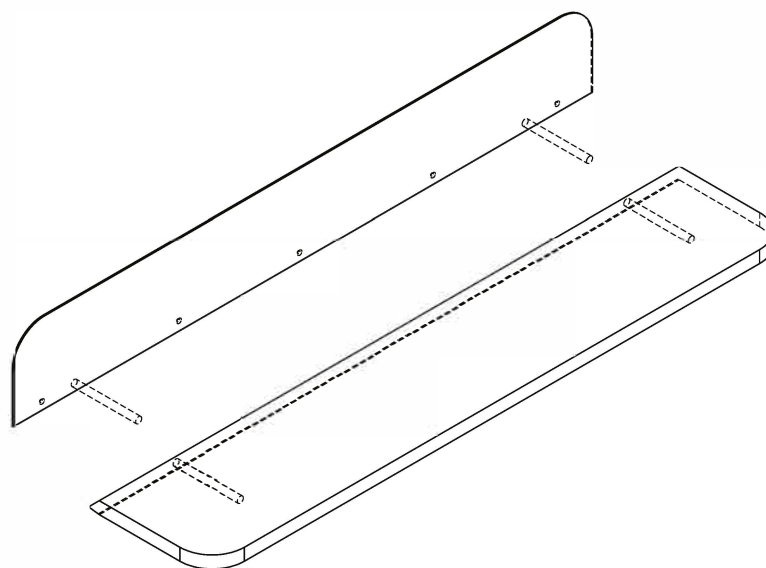


JOANNA PRESSED METAL WALL SHELF **URBAN OUTFITTERS**

Assembly Instructions


STEP 3

Contact your local hardware store to purchase the correct anchors for your wall type. Mark the location of the 3 screw holes on the wall and insert anchors. Align metal wall mount and insert screws. Tighten with screwdriver (not Included).

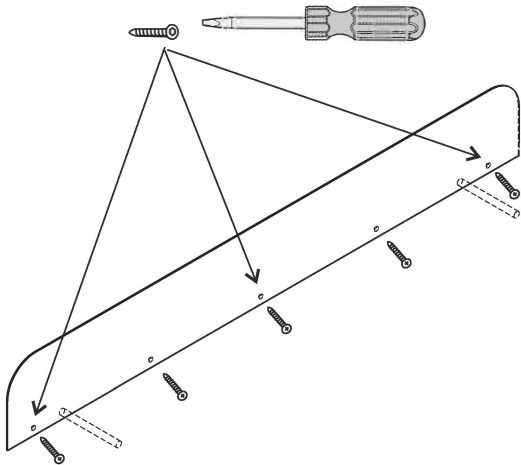

STEP 4

Align wooden shelf onto metal bars. Press firmly into place making sure all holes are aligned. Insert screws into the bottom and tighten with screwdriver.

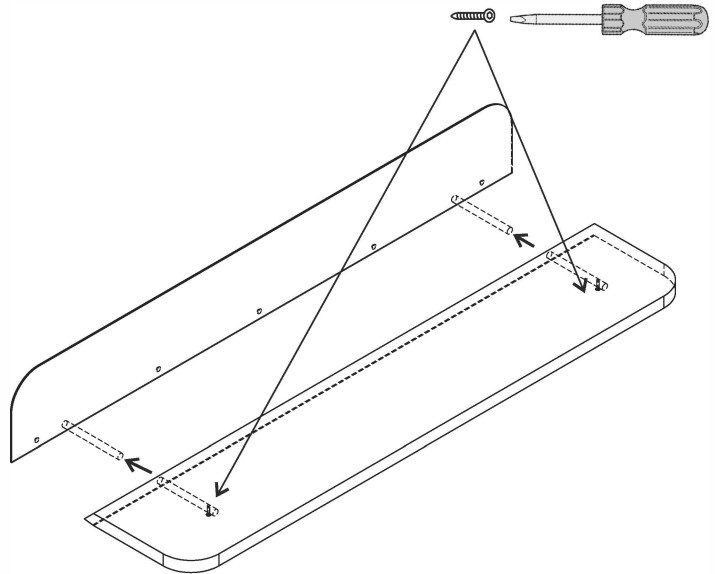

STEP 5

Complete Product

