

Maeve Catch-all Shelf

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver driver, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

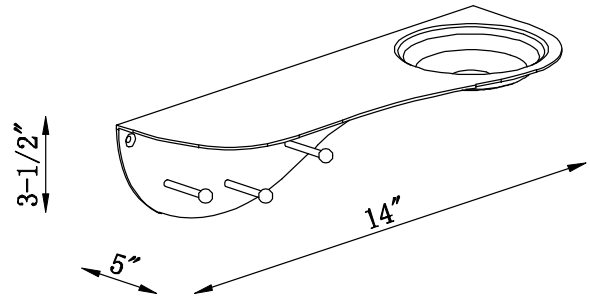

PARTS INCLUDED:



(B) Wall Anchor
x2



(C) Machine Screw
[M4 x 22mm] x2

Maeve Catch-all Shelf

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Place the shelf in a preferred location on the wall, ensure the shelf is level and mark the position. Use the diagram below to mark the corresponding locations for the wall anchors (B) and machine screws (C) (holes are 311mm or 12.24" apart). If the marks align with studs, screw the shelf directly to the wall with machine screws (C). If the mark aligns with drywall, attach the wall anchors (B) to the wall at the marked locations. Ensure the wall anchors (B) are flush with the wall, then screw the shelf into the anchors (B) with machine screws (C)

