

CRYSTAL HEART SCONCE

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use a MAX 4W LED Type T4 or G9 bulb.

Do not use bulb that exceeds recommended wattage.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.


Before cleaning any part, test a small spot in a hidden area.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.



PARTS INCLUDED:

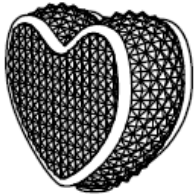

(A) Lamp Shade



(B) Socket



(C) Screws
[M4x25mm] x2



(D) Anchors x2

CRYSTAL HEART SCONCE

URBAN OUTFITTERS

Assembly Instructions

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2

Insert the specified light bulb into socket (B). DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 3

Place the lamp shade (A) onto the socket (B) and screw the parts together until tight.

STEP 4

Place the assembled Sconce on the wall in a chosen location. Ensure the Sconce is level and mark the location for the screw holes on the wall.

Wood or Stud installation:

Use a Phillips head screwdriver to fasten the screws (C) directly into the wall at the marked locations. Leave 1/2" between the top of the screws (C) and the wall.

Drywall installation:

Insert Anchors (D) into the wall at the marked locations using a drill and a hammer. Insert screws (D) into the anchors, then tighten with a Phillips head screwdriver (not included). Leave 1/2" between the top of the screw (D) and the wall.

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

STEP 5

Hang the Sconce on the screws (C). If the Sconce leans forward, remove it from the wall, and tighten the screws (C) slightly then, hang the sconce back on the screws (C).

STEP 6

Plug into outlet, turn on switch, and enjoy your new lamp.

Use a MAX 4W LED Type T4 or G9 bulb. Do not use bulb that exceeds recommended wattage.

