

Casper Bed

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing. Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.







Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

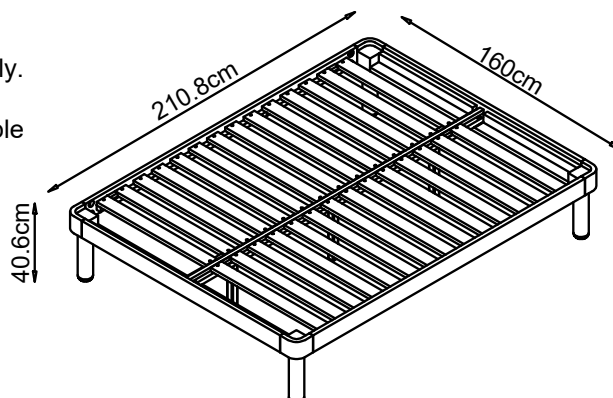


PARTS INCLUDED:

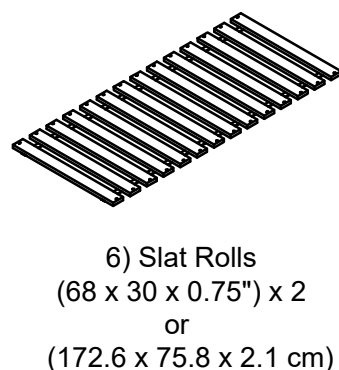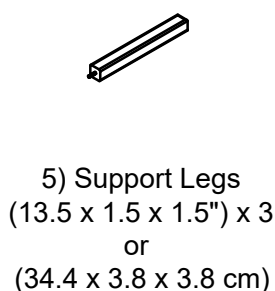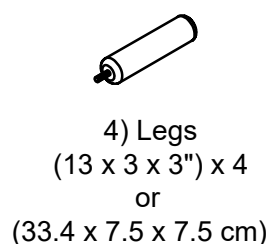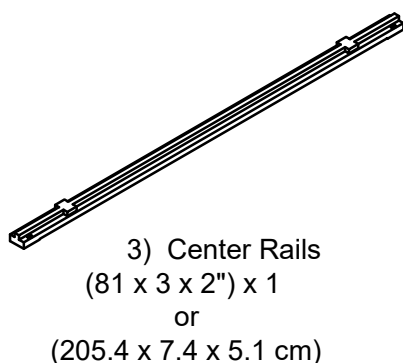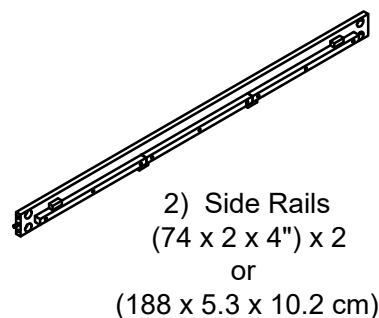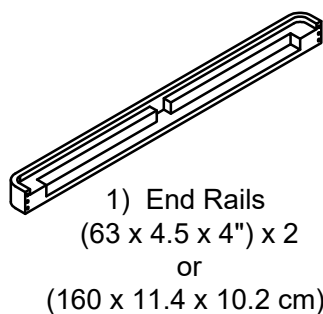



A) Thread Rod
(D 0.4 x 3.0") x 8
or
(D 10 x 75 mm)



B) Wrench
(# 0.47 x 3.5") x 1
or
(D 12 x 90 mm)



C) Nut
(# 0.40 x 0.47 x 0.25") x 8
or
(D 10 x 12 x 6 mm)



D) Crescent Washer
(D 1.38 / 0.59 x 0.3") x 8
or
(D 35 x 15 x 8 mm)



E) Screw
(D 0.16 / 0.98") x 56
or
(D 4 x 25 mm)



F) Bolt
(D 0.47 / 0.24 x 1.38") x 4
or
(D 12 / 6 x 35 mm)



G) Spring Washer
(D 0.47 / 0.24 x 0.08") x 4
or
(D 12 / 6 x 2 mm)



H) Flat Washer
(D 0.63 / 0.24 x 0.08") x 4
or
(D 16 / 6 x 2 mm)



I) Allen Key
(D 0.16 x 2.32") x 1
or
(D 4 x 59 mm)


Casper Bed

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Screw the threaded rods (A) into the end rails (1). Align the end rails (1) with side rails (2) as shown and insert the threaded rods (A) into the holes in the side rails (2). Note the **tops** of the rails indicated below.

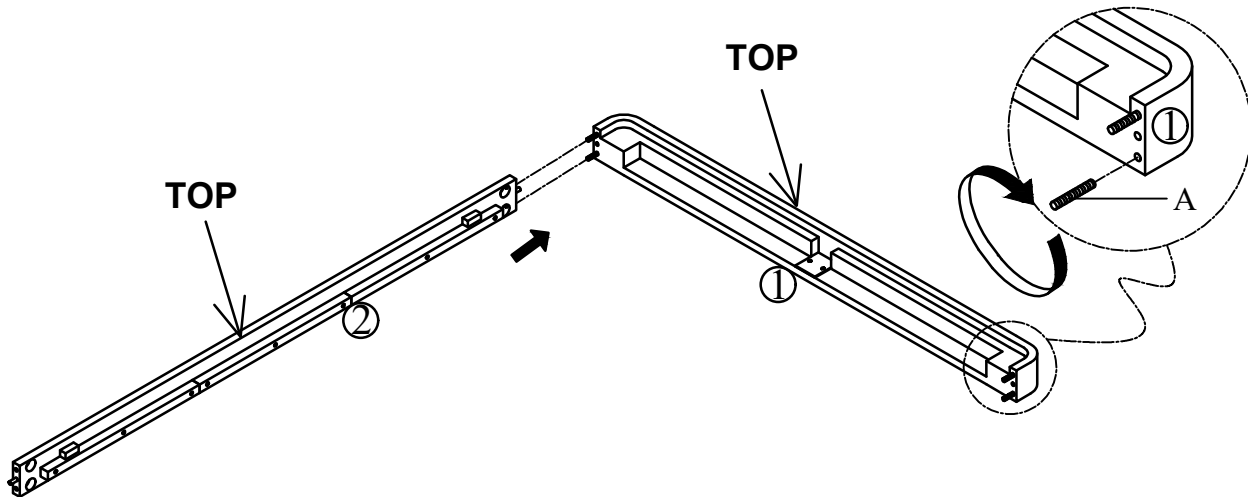

STEP 2

Insert the crescent washers (D) and nuts (C) into the side rails (2) and onto the threaded rods (A) as shown. Partially tighten the nuts (C) using the wrench (B). Once all nuts (C) are partially tightened, fully tighten the nuts (C).

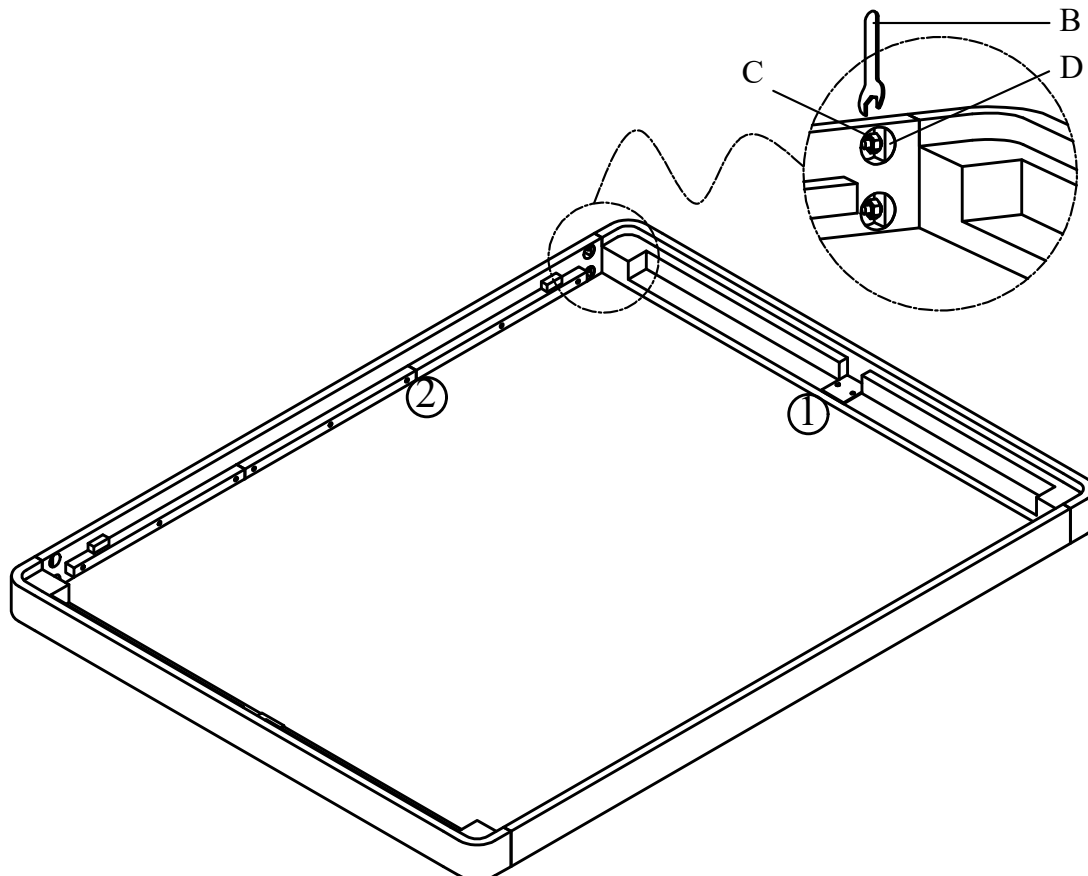

Casper Bed


Assembly Instructions

URBAN OUTFITTERS

STEP 3

With help, flip the bed frame upside down. Carefully screw legs (4) clockwise into the end rails (1) as shown. Then, with help, flip the bed upright, onto its legs.


Do not over-tighten the legs (4).

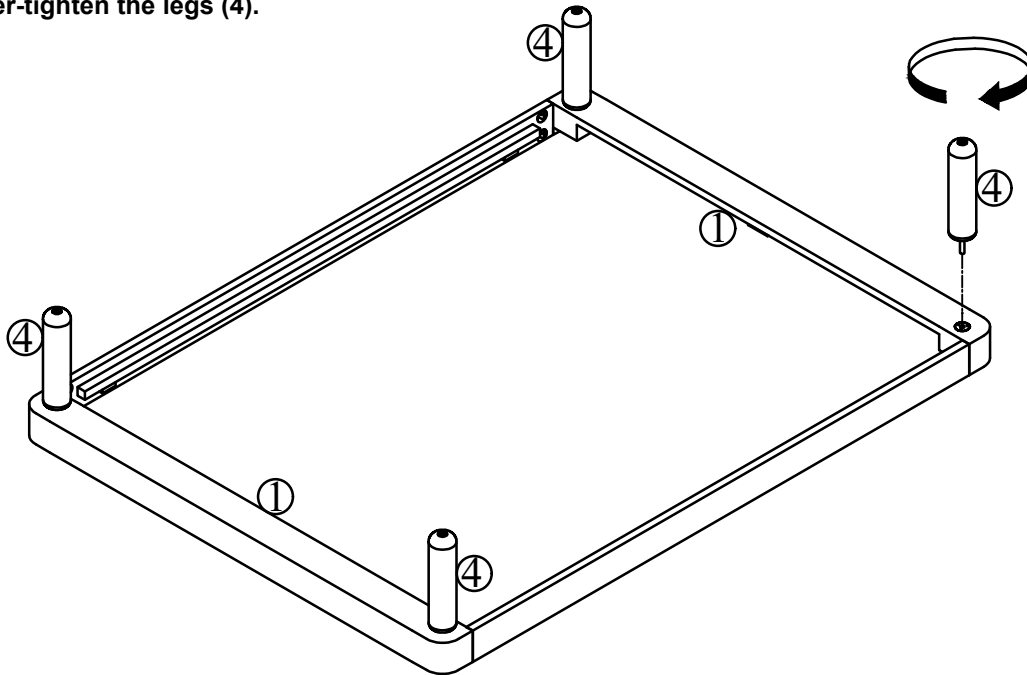

STEP 4

Screw the support legs (5) clockwise into the bottom of the center rail (3).

Do not over-tighten the support legs (5).

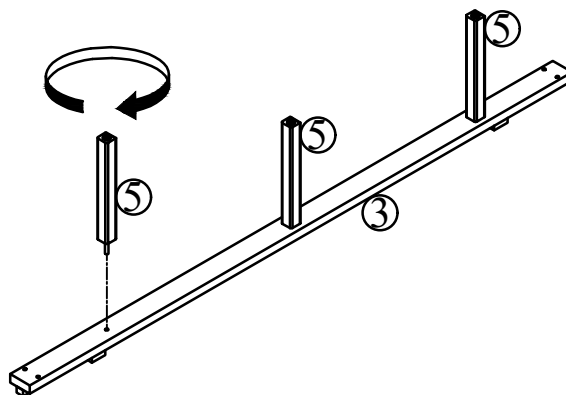


Casper Bed

Assembly Instructions

URBAN OUTFITTERS

STEP 5

Align the center rail (3) and the end rail (1) as shown. Insert bolt (F), flat washers (H) and spring washers (G) as shown then, fully tighten the bolts using Allen Key (I).

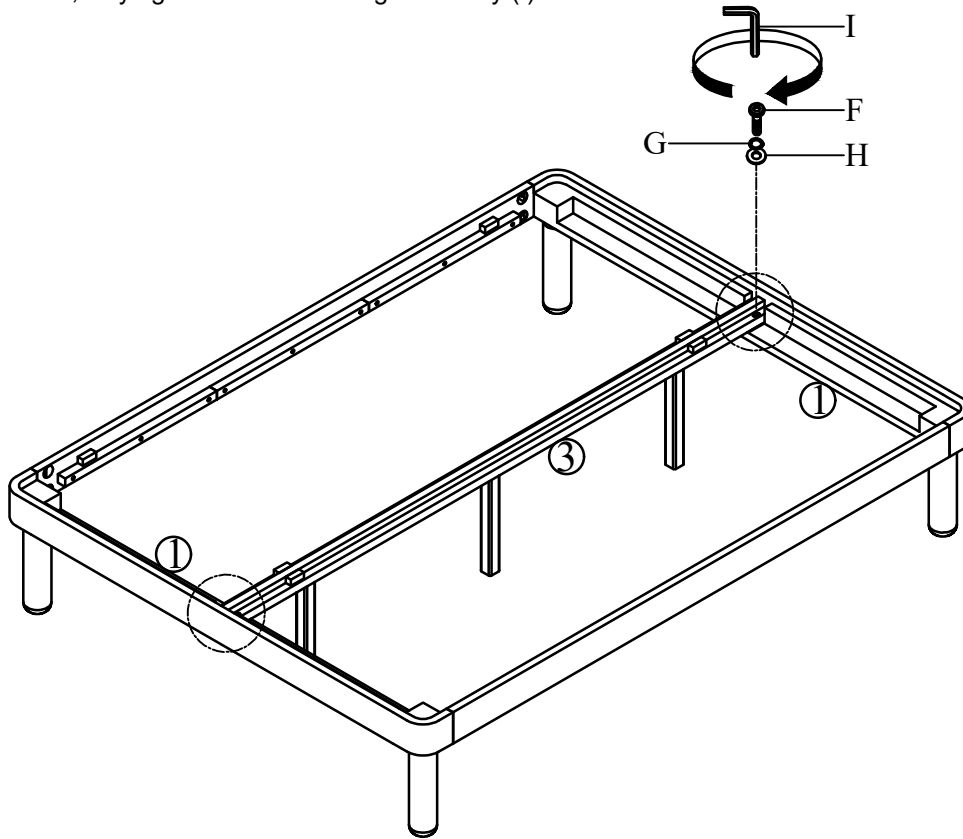

STEP 6

With help, lay the slats (6) down onto the bed frame. Ensure the last slat locks over the blocks on the side rails (2) and center rail (3). Fasten the slats (6) to the bed frame with the screws (E) using a Phillips head screwdriver.

