

Anti-Tip Hardware

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screw driver, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended.

This Anti-Tip kit is only a deterrent. It is not a substitute for proper adult supervision.


Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps.

When properly installed, this restraint provides protection against unexpected tipping of furniture.


The included hardware is intended for attachment to drywall, or a stud.

Contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.


PARTS INCLUDED:



(A) Bracket
x2



(B) Screw
x4



(C) Strap



(D) Plastic Anchor
x4

STEP 1

- A) Align the bracket (A) to the back of the cabinet at its top, as shown. Insert screws (B) and tighten with a phillips head screwdriver (not included). Place the second bracket (A) against the wall directly behind the cabinet in its intended position. Choose a location nearby a stud, if possible.

B) Stud installation:


Insert the screws (B) through the second bracket (A). Use a phillips head screwdriver to fasten the screws (B) directly into the stud.

Drywall installation:

Mark the location for the plastic anchors (D) on the wall through the holes in the bracket. Pre-drill holes for the plastic anchors (D) using a drill (not included) at the marked locations. Use a hammer (not included) to tap the plastic anchors (D) into the holes in the wall. Insert the screws (B) through the second bracket (A) and into the anchors, then tighten with a phillips head screwdriver (not included).

- C) Place the cabinet against the wall aligning the brackets (A). Run the Strap (C) through both brackets (A) and into the hole at its end then, pull it tight to secure the cabinet.

Bracket /
Screw

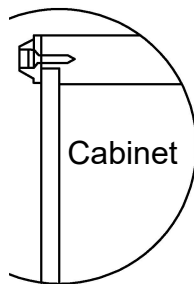

Cabinet

