

# TATTED BEAR LAMP

URBAN OUTFITTERS

## Assembly Instructions

---

NO ADDITIONAL TOOLS REQUIRED:

### WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use a MAX 2W LED Type T22 / C7 bulb.**

**Do not use bulb that exceeds recommended wattage.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Blot spills with a clean, white cloth; do not rub.

Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

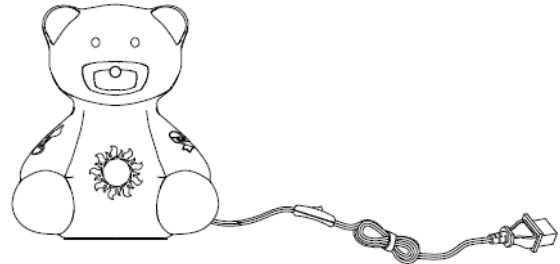

### PARTS INCLUDED:

---



(A) Lamp Body



(B) Nut x 2

# TATTED BEAR LAMP

## Assembly Instructions

---

URBAN OUTFITTERS

### STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

### STEP 2

Unscrew the nuts (B) then, insert the specified light bulb into the socket. Place the socket and bulb back into the tatted bear then, screw the Nut (B) back on to secure the socket as shown.

### STEP 3

Plug the lamp into an outlet, turn on switch, and enjoy your lamp.

**Use a MAX 2W LED Type T22 / C7 bulb. DO NOT USE A BULB THAT EXCEEDS THE SPECIFIED WATTAGE.**

