

OLLIE ENTRYWAY UNIT

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED

Phillips head screwdriver

WARNINGS:

At least two people recommended for assembly

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place overheat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

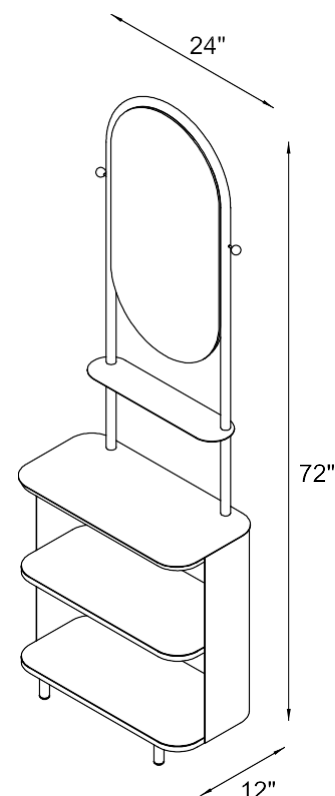


PARTS INCLUDED

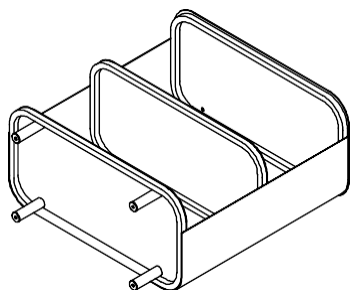

A) Base

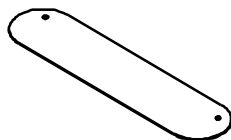


B) Metal Shelf

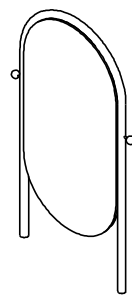


C) Mirror




D) Studded Metal tube x2



E) Adjustable Leveler x 4




F) Bolt [M8xL30mm] x 2



G) Wall Screw [4x32] x2



H) Drywall Anchor x2



I) Anti-tip Bracket



J) Nylon Strap



5mm

K) Allen Key


OLLIE ENTRYWAY UNIT

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Screw adjustable levelers (E) into the base as shown. With help, flip the base upright.

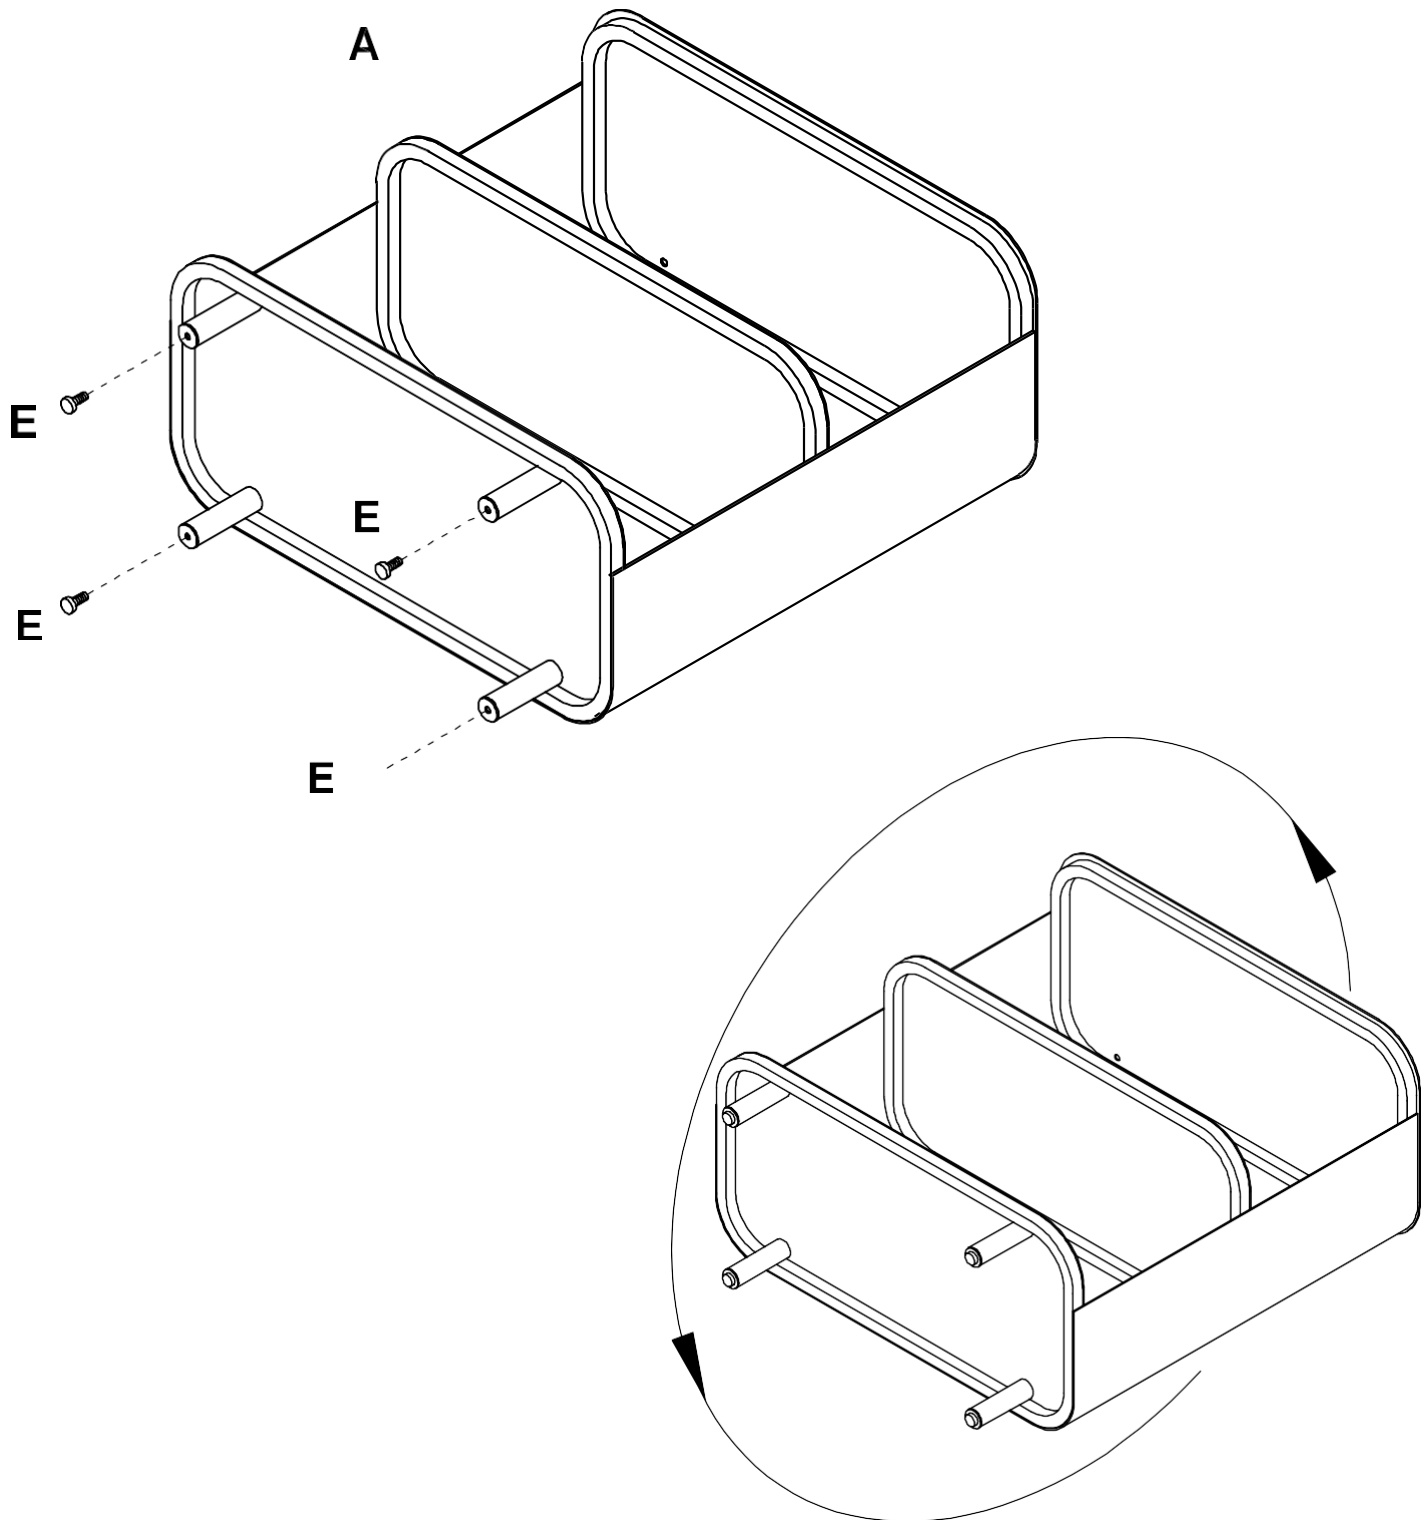

STEP 2

One at a time, insert studded metal tubes (D) through the metal shelf (B) and screw them into the mirror (C). Align the assembled mirror with the base (A) as shown. Insert bolts (F) through the base into the bottom of the mirror and fully tighten the bolts with allen key (K).

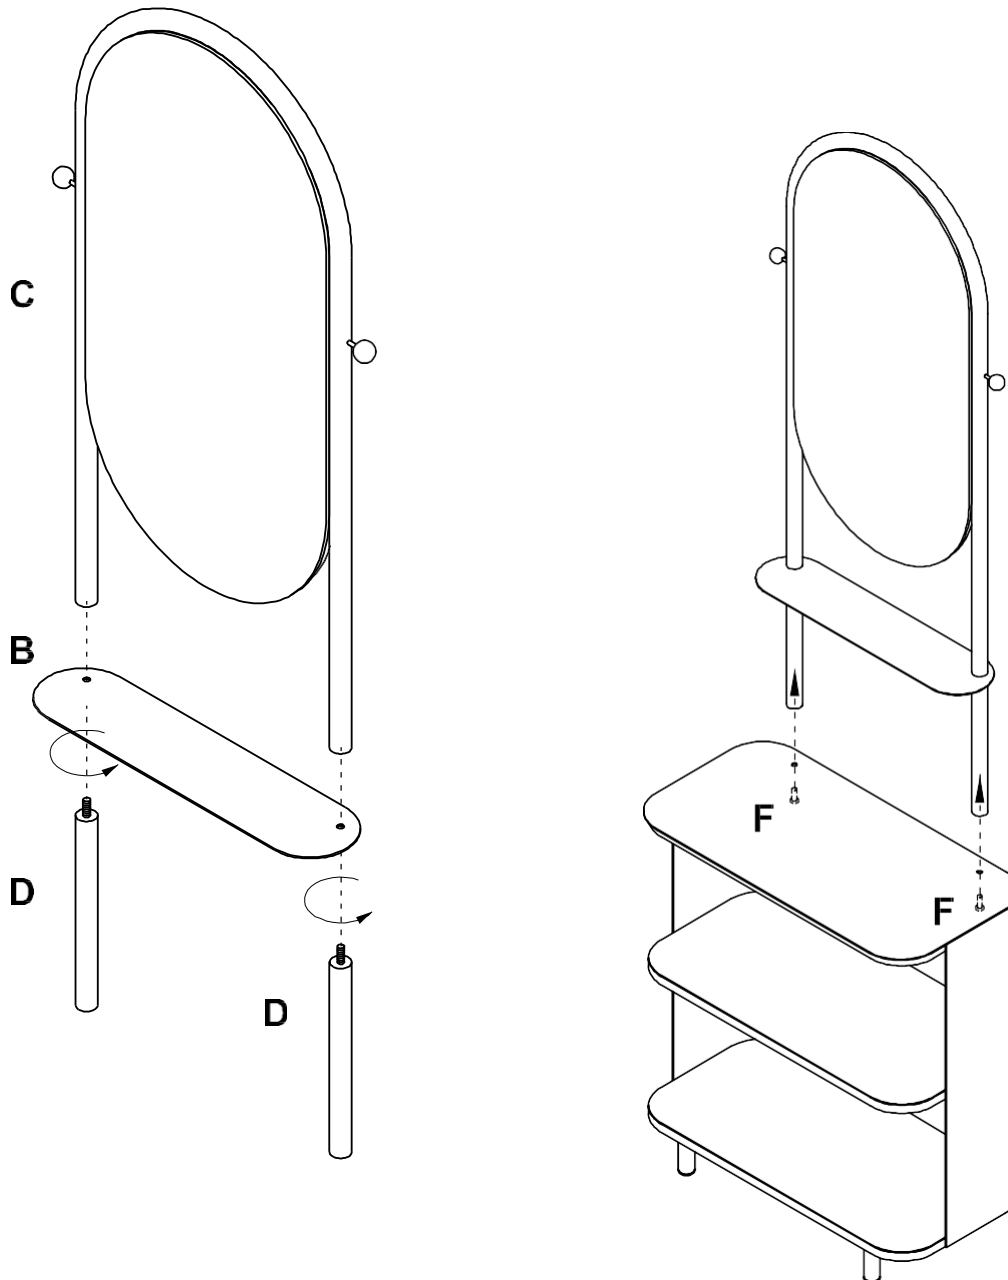

STEP 3

Place the entryway unit against the wall in its desired location then, place the anti-tip bracket (I) on the wall behind the mirror, and mark the location of the hole in the anti-tip bracket (I) on the wall.

Wood or Stud Installation:


Insert screws (G) through the anti-tip bracket (I) into the wall and tighten with a Phillips head screwdriver.

Drywall Installation:

Attach the drywall anchors (J) to the wall at the marked location using a drill and hammer. Insert screws (H) through the anti-tip bracket (I) into the drywall anchors (H) and tighten with a Phillips head screwdriver.

STEP 3

Feed the Nylon strap (J) through the anti-tip bracket (I) and around the desk then, pull the nylon strap tight.

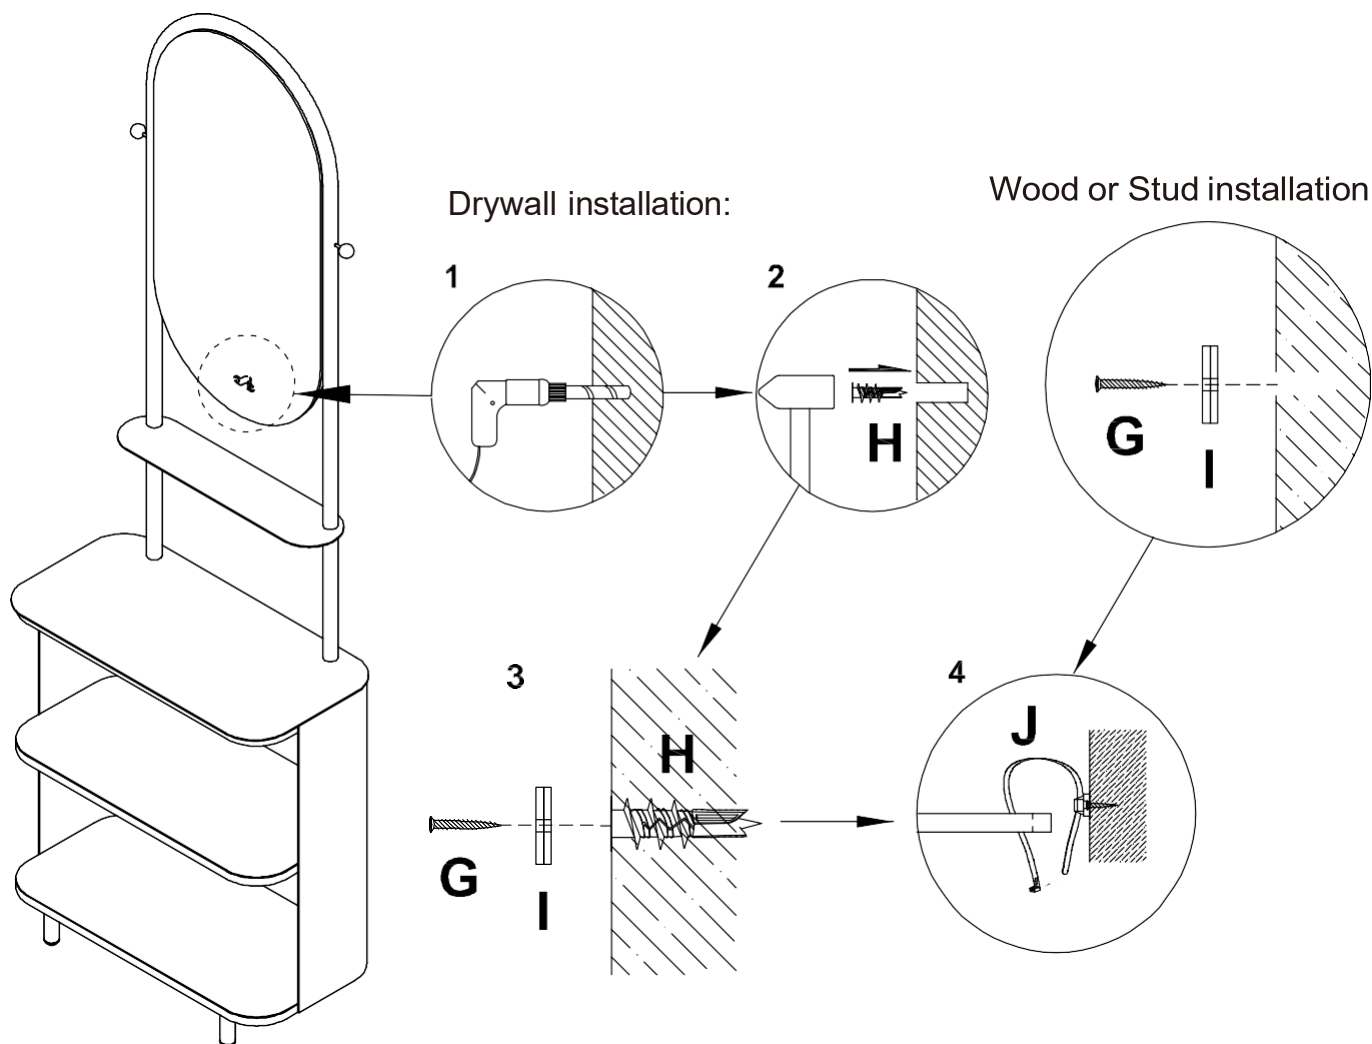

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. The tipping restraint is only a deterrent it is not a substitute for proper adult supervision.