

OLLY PAPER LAMP

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
Do not exceed 9 watt LED; 13 watt compact florescent; 60 watt incandescent bulb

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

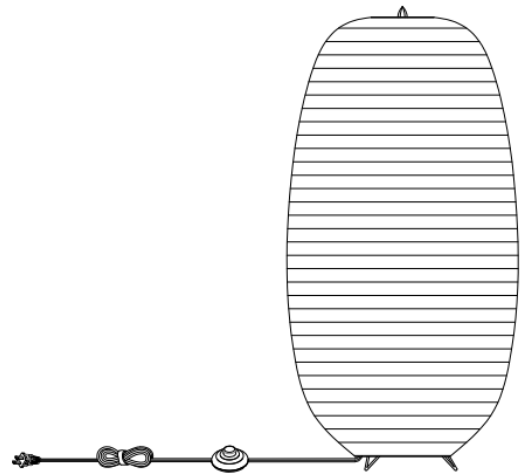

PARTS INCLUDED:



A) Top Final
x1



B) Shade
x1



C) Metal Tubes
x2



D) Recommended bulb
(NOT INCLUDED)
9 watt LED
13 watt compact florescent
60 watt incandescent bulb
x2



E) Clip
x2



F) Spring
x1



G) Flat Washer
[D30xD10.5MM] x1



H) Butterfly Nut
x1



I) Plug Cover
x1

Assembly Instructions

STEP 1

- Attach the Metal tubes (C)
- Place the Shade (B) onto the metal tubes (C) and then screw the Top finial (A) onto the metal tubes (C).
- Screw in (x2) of the recommended bulb (D).
- Attach the cord to the metal tube using the clips (E).
- Insert Spring (F) and Flat Washer (G) onto the bottom of the metal tube (C) and then screw on the Butterfly Nut (H) to attach the shade (B).
- Remove the plug cover (I) and plug in the lamp.

