

KODHI PLUG IN SCONCE

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

Drill, Phillips head screwdriver, Hammer, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use a MAX 2W LED Type G40 or C7 bulb.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

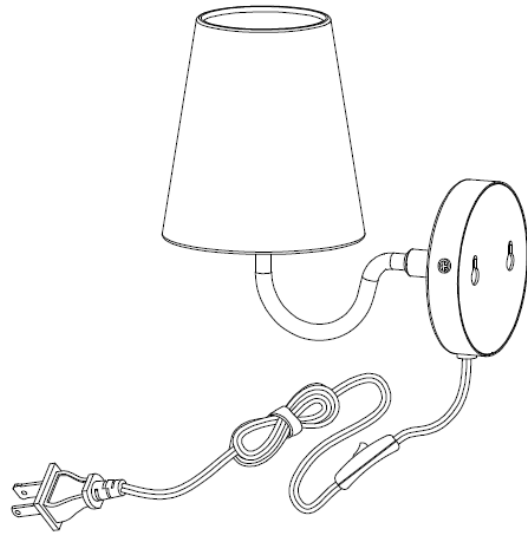


PARTS INCLUDED:



(A) Anchors x2



(B) Screws
[M4x25mm] x2

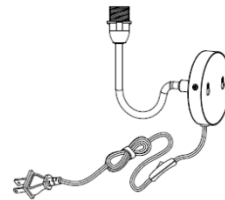

(C) Lamp body



(D) Lamp Shade



(E) Socket Ring



(F) Socket Ring Tool

KODHI PLUG IN SCONCE

Assembly Instructions

URBAN OUTFITTERS

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2

Place lamp shade (D) onto lamp body (C). Screw socket ring (E) clockwise onto lamp body (C) with tool (F) to secure the lamp shade (D).

STEP 3

Place the assembled sconce on the wall in a chosen location. Ensure the sconce is level and mark the location for the screw holes on the wall.

Stud installation:

Use a Phillips head screwdriver to fasten the screws (B) directly into the wall at the marked locations. Leave 1/2" between the top of the screws (B) and the wall.

Drywall installation:

Insert Anchors (A) into the wall at the marked locations using a drill and a hammer. Insert screws (B) into the anchors, then tighten with a Phillips head screwdriver. Leave 1/2" between the top of the screw (B) and the wall.

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

STEP 4

Hang the Sconce on the screws (B). If the Sconce leans forward, remove it from the wall, and tighten the screws (B) slightly then, hang the sconce back on the screws (B).

STEP 5

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 6

Plug into outlet, turn on switch, and enjoy your new lamp.

Use a MAX 2W LED Type G40 or C7 bulb. Do not use bulb that exceeds recommended wattage.

