

ALONZO 6 DRAWER DRESSER

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


EX. 'Phillips head screwdriver, Level, Hammer' (do not include graphic)

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface


CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.


PARTS INCLUDED:

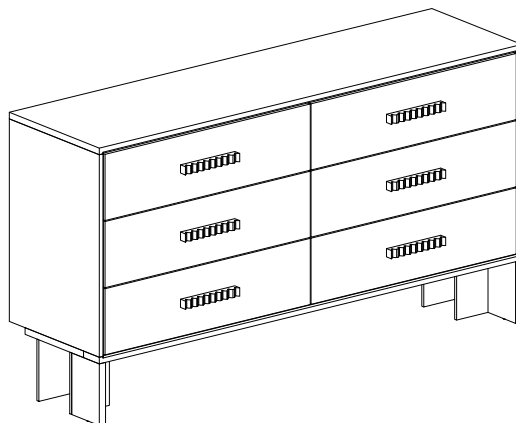


A) Dresser x1
(Wrapped in green tape)

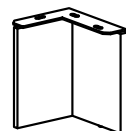

B) Legs x4
(Wrapped in green tape)

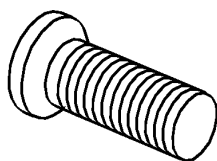

C) Allen Bolt
[8M x 20MM] x12

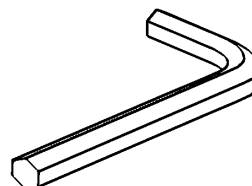

D) Allen Key x1


ALONZO 6 DRAWER DRESSER

Assembly Instructions

URBAN OUTFITTERS

STEP 1

With help flip the Dresser (A) over onto a clean smooth surface. Align Legs the holes in leg (B) matching the labels to the holes in the dresser Dresser (A). Insert Bolts (C) and tighten with supplied Allen Key (D). With help flip the Dresser upright making sure that you do not lean it on the legs as this will weaken their connection to the dresser.

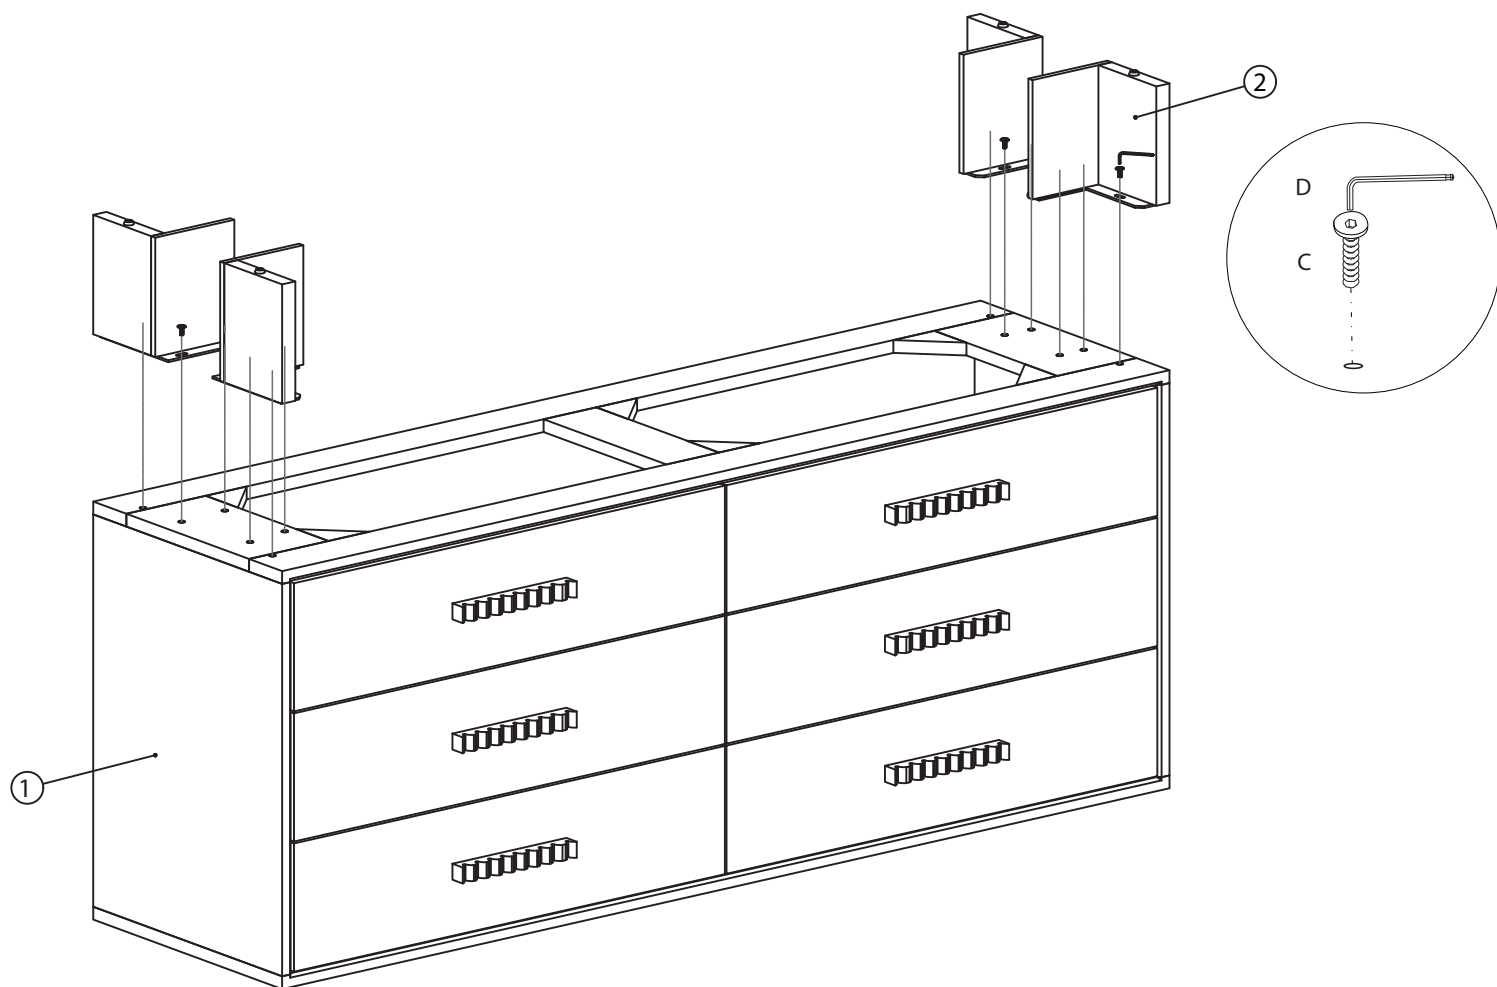

ALONZO 6 DRAWER DRESSER

Assembly Instructions

URBAN OUTFITTERS

ASSEMBLED

