

CHRISTIE STORAGE CART

URBAN OUTFITTERS

Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

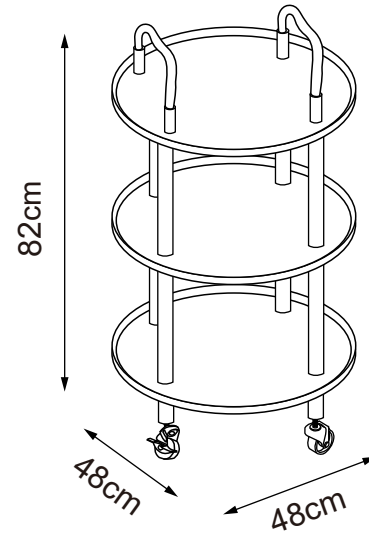

PARTS INCLUDED:

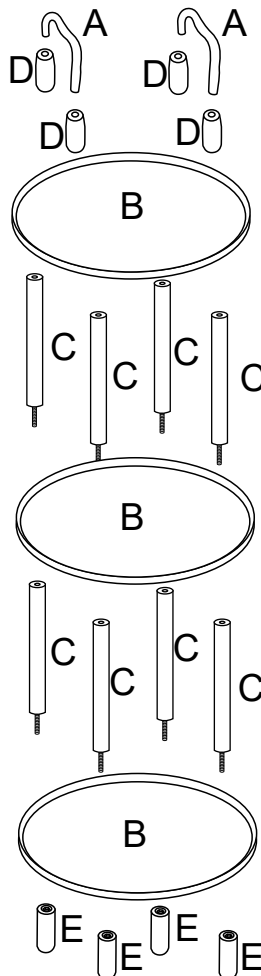

CHRISTIE STORAGE CART


URBAN OUTFITTERS

Assembly Instructions

PARTS INCLUDED:



(A) X2

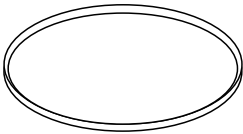

(B) X2




(C) X8



(D) X4



(E) X4



(F) Universal Wheel
x4pcs



(G) Stud Bolt
x4pcs




(G) Spanner
x1pc

CHRISTIE STORAGE CART

URBAN OUTFITTERS

Assembly Instructions

STEP 1

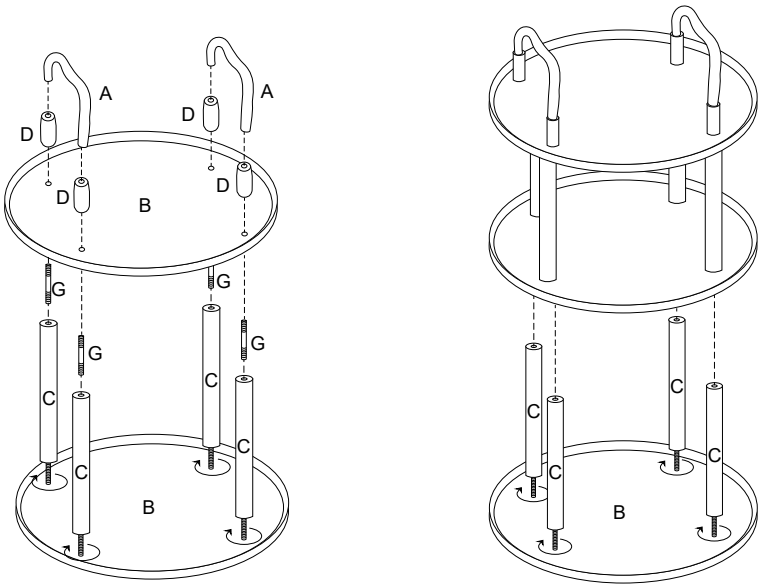

STEP 2

