Willow Bookshelf


URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCUDED:
Phillips head screwdriver, Pencil

WARNINGS:
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:
Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub. Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

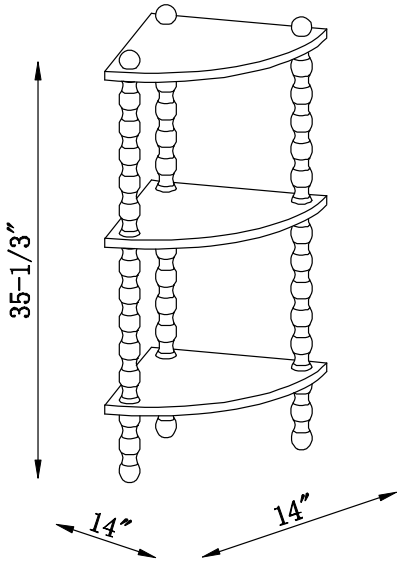


PARTS INCLUDED:




(A) Shelf
x3



(B) Spindle
x3




(C) Spindle
x6




(D) Spindle
x3




(E) Nylon strip
x1

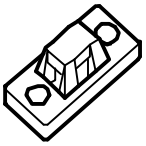

(F) Bracket
x2



(G) Screw
[M3 x 32mm] x2



(H) Screw
[M3 x 19mm] x2


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


Willow Bookshelf

Assembly Instructions

STEP 1


Lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the spindles (D) with the shelf (A) and insert as shown.

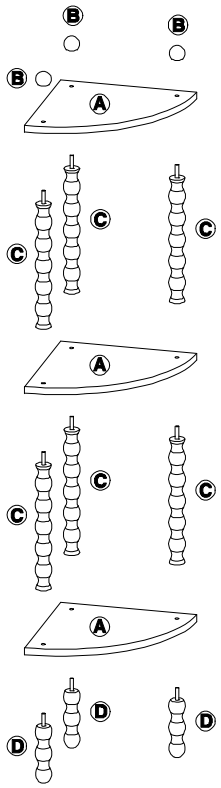


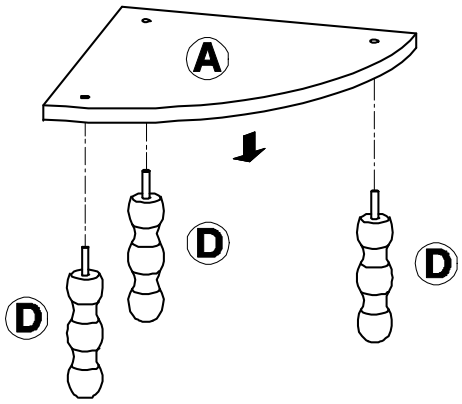

STEP 2

Align the spindles (C) with the threaded studs in the end of spindles (D) as shown below. Screw together clockwise until tight. Repeat this process to attach the additional shelf (A) and spindles (C).

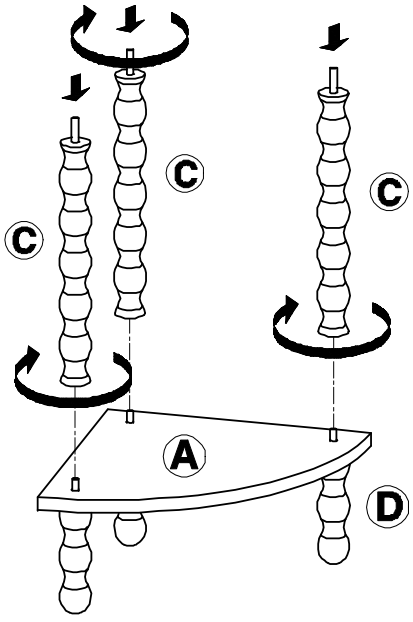


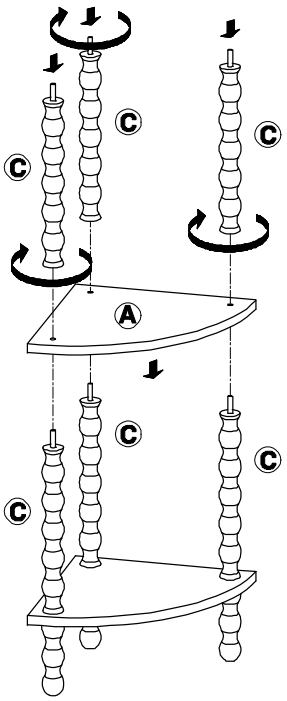


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO,
Inc. All rights reserved, including all applicable copyright, design and patent rights.
Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

STEP 3


Place the final shelf (A) onto the spindles (C). Then, screw the balls (B) clockwise onto the threaded inserts sticking through the shelf (A) until tight. Turn the adjustable feet so the shelf sits flat on the ground.

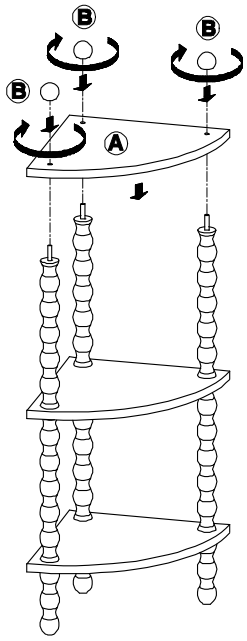

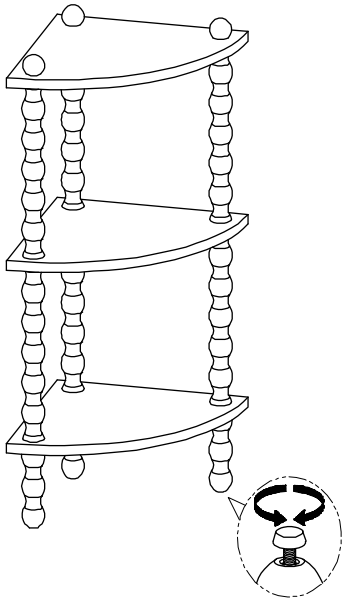

STEP 4

a) Align the Anti Tip Brackets (F) to the Top back of the Shelf. Insert Screws (G) and tighten completely. Do not over-tighten.
b) Contact your local hardware store to purchase the correct anchors for your wall-type.
c) Align the second Anti Tip Bracket (F) to the wall and make sure it lines up with the bracket on the back of the Shelf from step (a).
d) Screw the bracket to the wall using the correct anchors.
e) Slide the shelf toward the wall leaving a little bit of room between the shelf and the wall.
f) Feed the Nylon Strap through both brackets and pull tight.

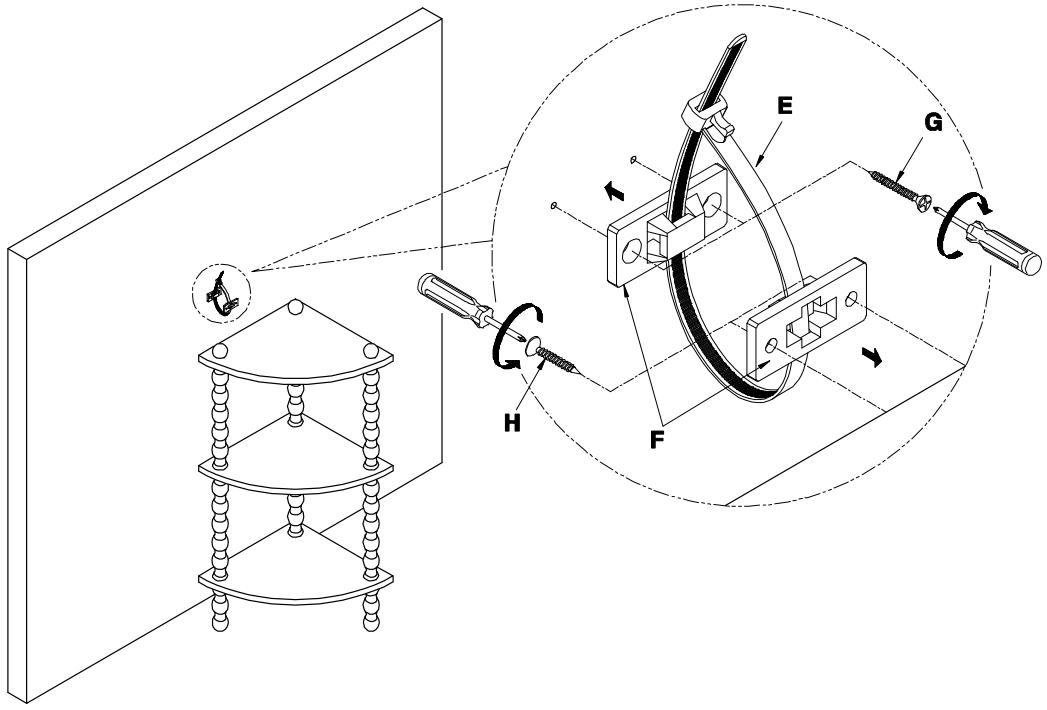

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO,
Inc. All rights reserved, including all applicable copyright, design and patent rights.
Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.