

# HOLLY FLOOR LAMP

URBAN OUTFITTERS

## Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use a MAX 60W Type A bulb.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

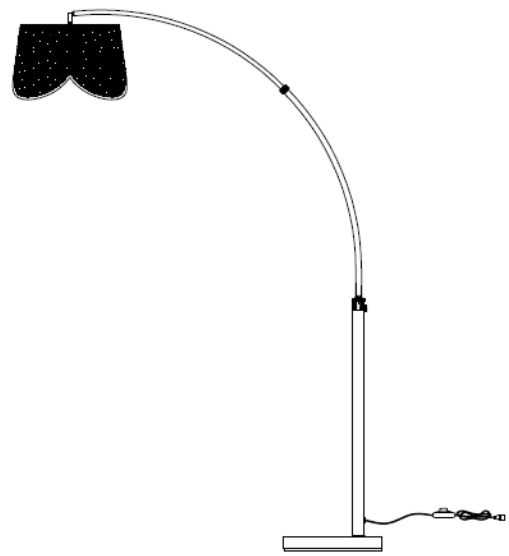

### PARTS INCLUDED:



(A) Socket Ring

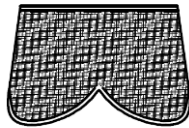


(B) Lamp Shade



(C) Upper Pole



(D) Middle Pole

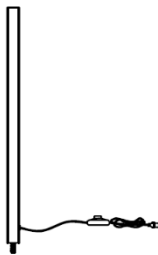

(E) Lower Pole



(F) Knob



(G) Base



(H) Washer  
[D32xT1.5mm]



(I) Hex Nut  
[1/4-18Tx15mm]



(J) Wrench

# HOLLY FLOOR LAMP

URBAN OUTFITTERS

## Assembly Instructions

### STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

### STEP 2

Screw the Upper Pole (C) onto the Middle Pole (D). Insert the Middle Pole (D) into Lower Pole (E). Secure the Middle Pole (D) and Upper Pole (C) by screwing the Knob (F) into the Lower Pole (E) as shown.

### STEP 3

Insert the Lower Pole (E) through the hole in Base (G) as shown. Insert the Washer (H) the Hex Nut (I) and use the Wrench (J) to fully tighten the Hex Nut (I).

### STEP 4

Place the Lamp Shade (B) onto the socket, then screw the Socket Ring (A) onto the socket to secure the shade.

### STEP 5

Insert the specified light bulb into the socket. **DO NOT EXCEED THE SPECIFIED WATTAGE.**

### STEP 6

Plug into outlet, turn on switch, and enjoy your new lamp.

**Use a MAX 60W Type A bulb. Do not use bulb that exceeds recommended wattage.**

