

TAVI CONSOLE

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Do not throw away packing materials and carton until after assembly.


Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.


Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

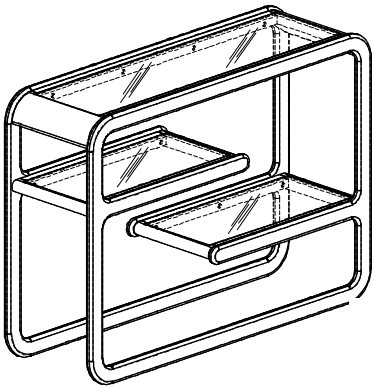


PARTS INCLUDED

G



X 1

H



1/4" x 1- 3/4" Bolt 20 x

I



1/4 flat washer 20 X

J




1/4 spring washer 20 X

K




X1

L

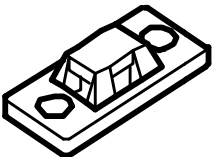


X 2

M



3 x 32mm screw X 2

N



3 x 19mm screw X 2

Philips Screwdriver (Not included)




TAVI CONSOLE

Assembly Instructions

URBAN OUTFITTERS

STEP 1


With help lay the console over onto a clean smooth surface such as carpet or cardboard. Locate the holes in the leg (A). Align the shelf (C) and shelf (D) to the leg (A) and press firmly into place as shown. Insert flat washer (J), spring washer (I) and bolt (H) Tighten with supplied hex key (G). Do not over tighten.

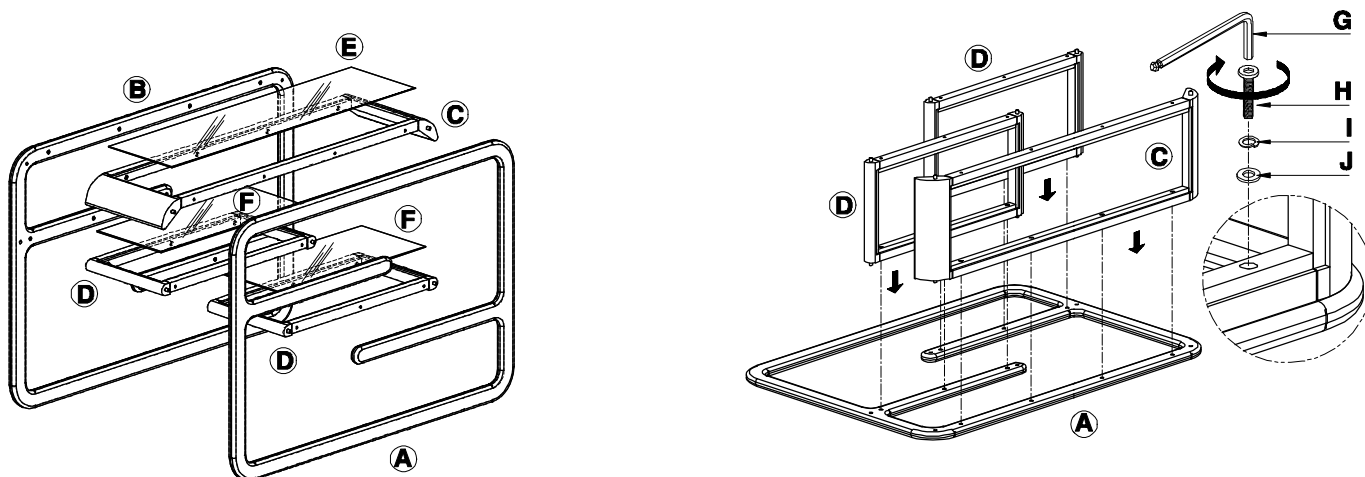

STEP 2

Align the leg (B) as shown below. Insert flat washer (J), spring washer (I) and bolt (H) Tighten with supplied hex key (G). Do not over tighten. Once complete carefully stand the console upright without leaning it on the legs as this can damage them.

Align the glass shelf carefully into the frames as shown below. You may need to adjust the legs to accommodate for uneven flooring.

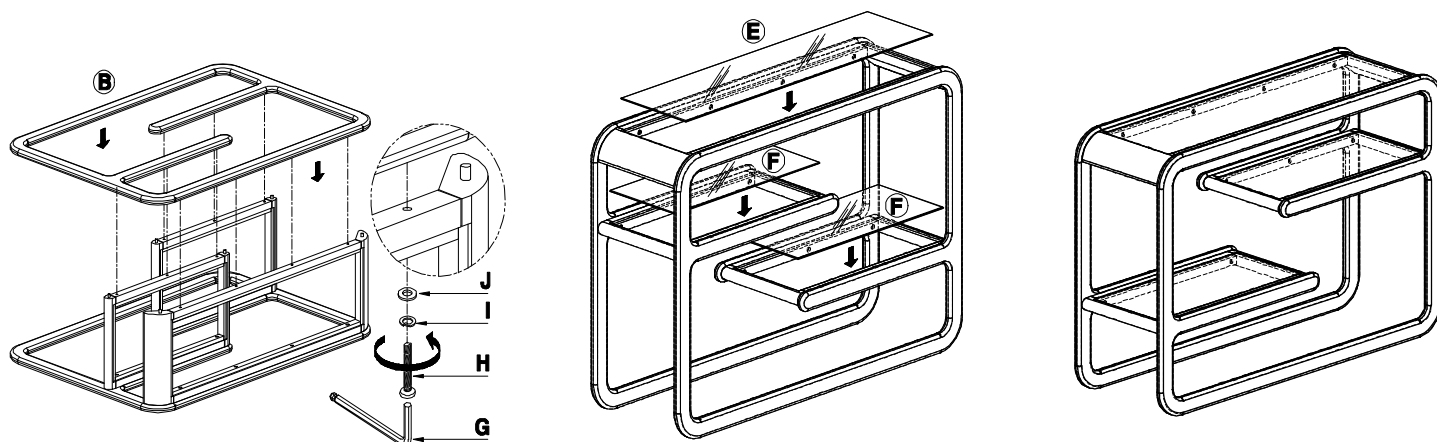

STEP 3

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.
© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be

Assembly Instructions

To prevent injury and property damage from unexpected tipping of furniture

1. Attached the mounting bracket horizontally to the top back edge of the furniture. Insert the short screws through the holes in the bracket and tighten securely using screwdriver. Please contact your local hardware store to get the correct anchor for your wall type.
2. Determine where the furniture is to be placed and mark location on the wall for the other mounting bracket crew holes. It should be placed approximately 2" below the bracket mounted to the furniture.
3. Attached the mounting bracket vertically to the wall by inserting the long screws provided through the hole in the bracket and tightening securely using screwdriver. Please contact your local hardware store to get the correct anchor for your wall type.
4. Place the furniture so the bracket on the back edge are in line with the brackets on the wall.
5. Lace an end of the nylon restraint strap down through each bracket. Bring both ends together and slide the thin end of the strap through the receiving end of the strap until snug.
6. Check to make sure the strap is securely laced and locked to the bracket.

