

ASTRID SIDE TABLE

Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

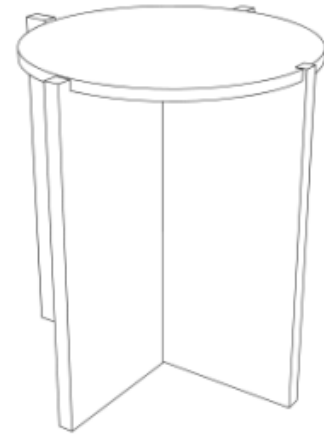


PARTS INCLUDED




(A) Bolt
[M4 x 12mm] x4




(B) TOP
1x

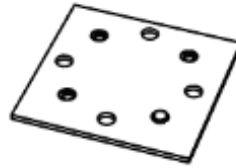

(C) Mounting plate
x1

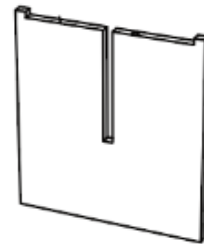

(D) Base panel
x1



(E) Base panel
x1


ASTRID SIDE TABLE

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Slide panel (E) onto panel (D) as shown.

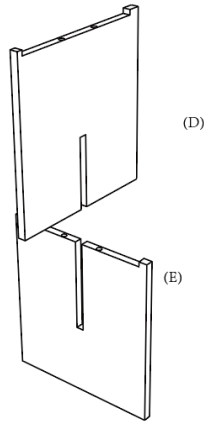

STEP 2

Align the Metal Plate (C) with Base. Insert Bolt (A) into the Base Panels through Metal Mounting Plate (C) as shown. Do not over-tighten.

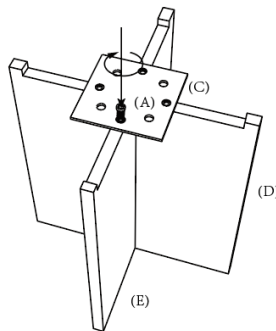

STEP 3

Lay the Top (B) over onto a clean smooth surface such as carpet or cardboard and align the assembled base as shown. Insert Bolts (A) through Mounting Plate (D). And tighten with with a Phillips head screwdriver. Do not over-tighten.

