

Juliette Platform Bed

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

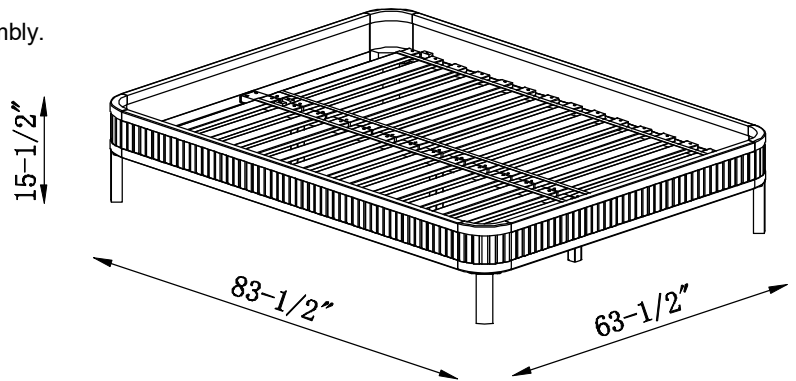

PARTS INCLUDED:




(H) Hex key
x1



(I) Bolt
[1/4" x 3/4"] x20



(J) Spring washer
[1/4"] x20



(K) Flat washer
[1/4"] x20



(L) Screw
[4 x 30mm] x60


Juliette Platform Bed

Assembly Instructions

URBAN OUTFITTERS


STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Locate the center rail (E) and insert the center legs (F). Screw together clockwise until tight.

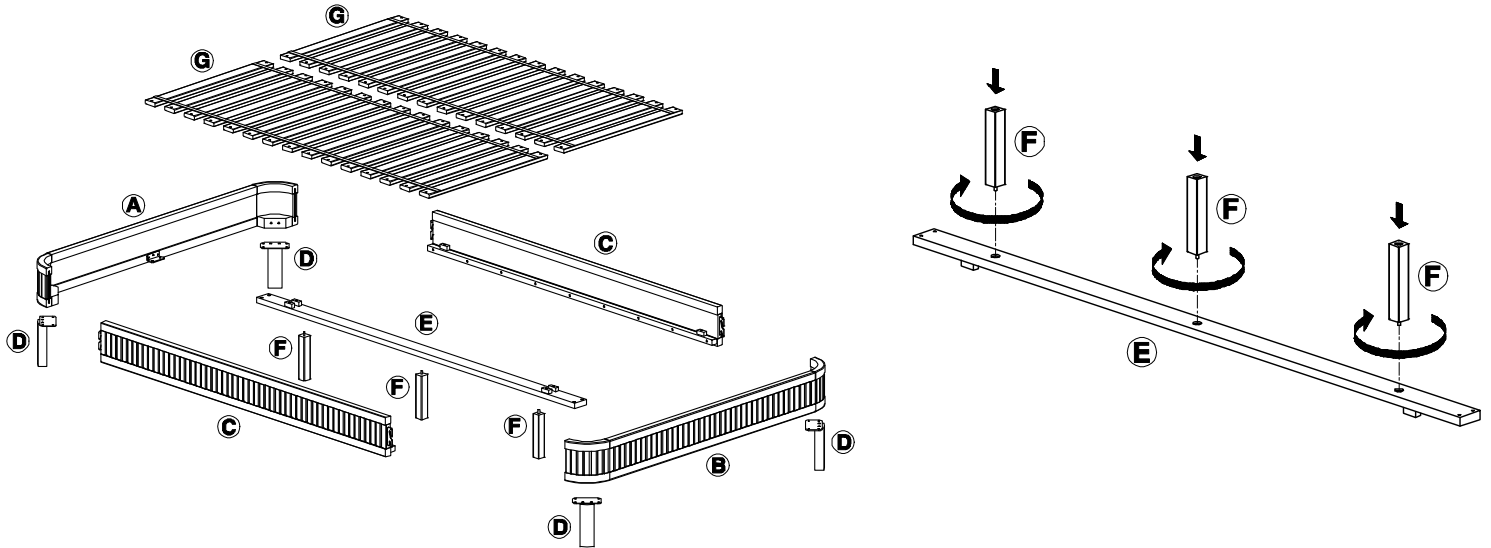

STEP 2

Align the legs (D) to headboard (A) and footboard (B) as shown below. Insert flat washer (K), spring washer (J) and bolt (I). Tighten with supplied hex key (H). Do not over tighten.

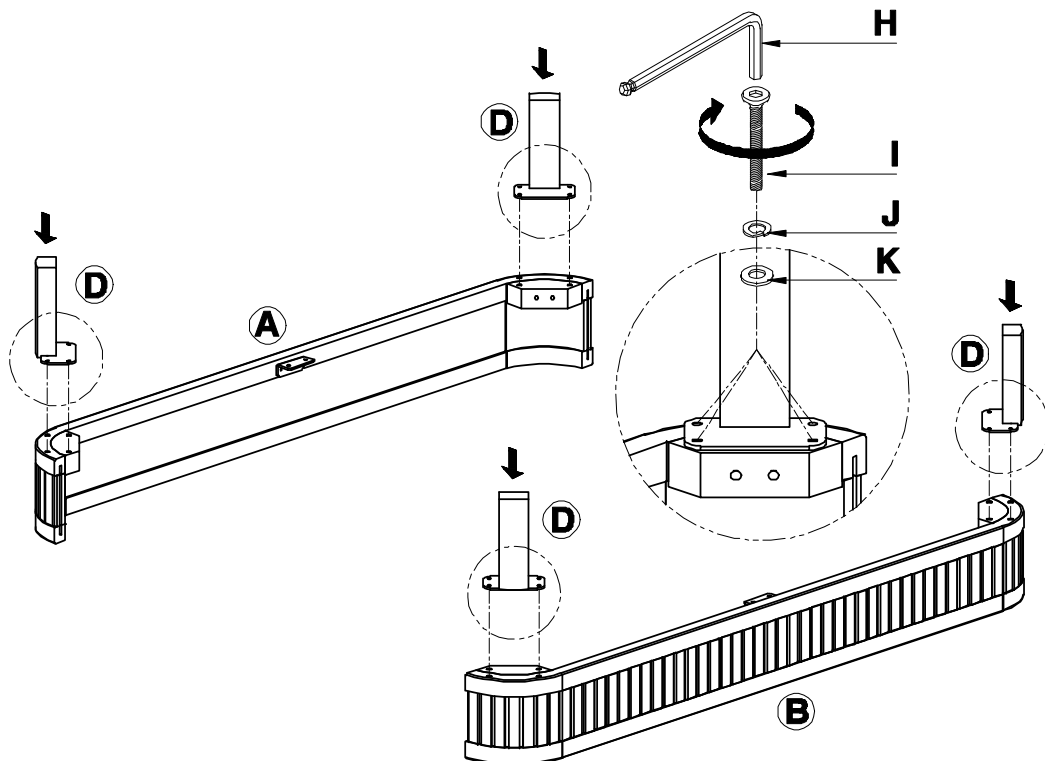


Juliette Platform Bed

Assembly Instructions

URBAN OUTFITTERS

STEP 3

With help, stand the headboard (A) upright and align the side rails (C) as shown below. Slide them into the headboard (A) and press down to lock. Repeat this process to attach the footboard (B).

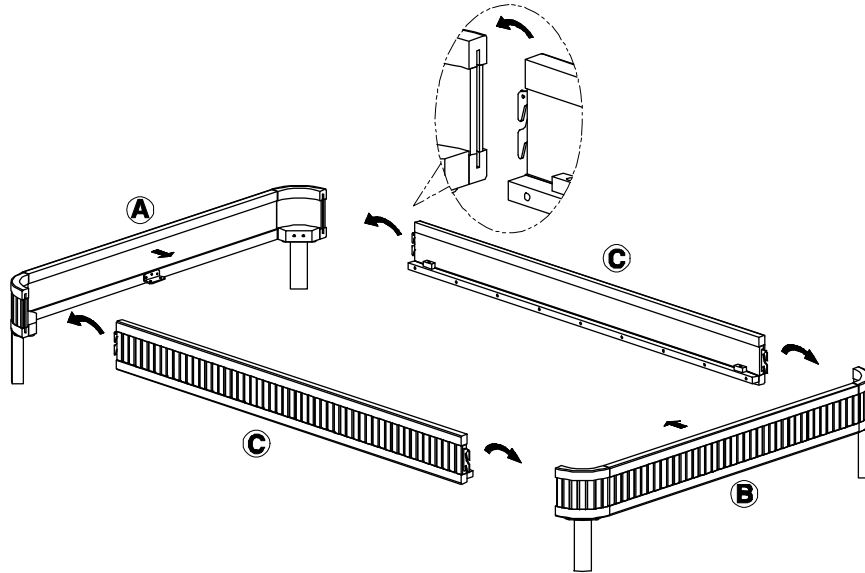

STEP 4

Align the center rail (E) as shown. Insert flat washer (J), spring washer (I) and bolt (G). Tighten with supplied hex key (F). Adjust center leg levelers to touch the floor. With help, lay down the roll slats (G) as shown. Make sure the last slat locks over the blocks on the side rails and they are in the center of each section. Insert the screws (L) through the holes in the roll slats (G) as shown. Tighten with a Phillips head screwdriver (not included). Do not over-tighten!

