URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

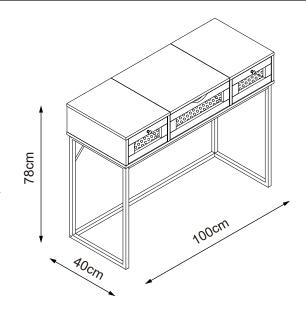

PARTS INCLUDED

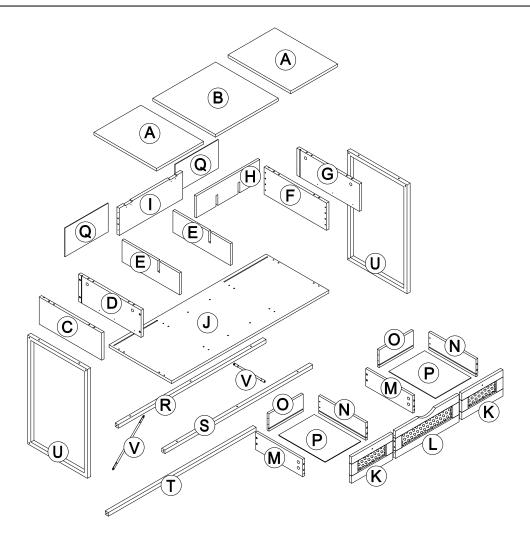

Assembly Instructions

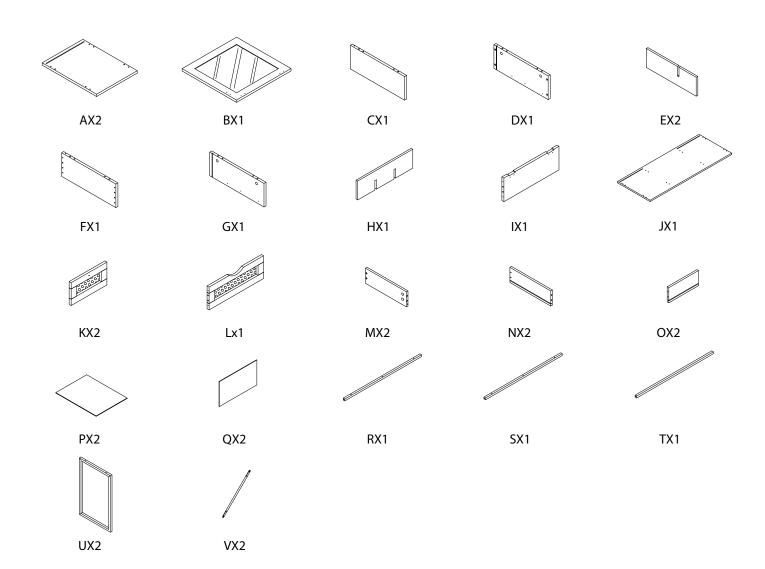

Assembly Instructions



(a) Cam bolt [M6x35mm] x16pcs



(b) Cam lock [M15x9mm] x16pcs



(c) Wooden Dowel [Ø6x30mm] x28pcs



(d) Screw [M4x35mm] x24pcs



(e) Screw [M3x12mm] x32pcs



(f) Handle x2pcs



(g) Bolt x2pcs



(h) Bolt

(i) Bolt [M6x12mm] x4pcs [M6x30mm] x10pcs



(j) Bolt [M6x40mm] x6pcs



(k) Hex Key x1pc



(I) Hinge x2pcs



(m) Pneumatic Rod х1рс



(n) Screw [M3.5x12mm] x5pcs



(o) Protection Pad x2pcs



(p) Wedge x8pcs

(q) Screw [M3x14mm] x8pcs





(CL) Outer Drawer Runner x2pcs



(CR) Outer Drawer Runner x2pcs





(DL) Outer Drawer Runner x2pcs





(DR) Outer Drawer Runner x2pcs


Assembly Instructions

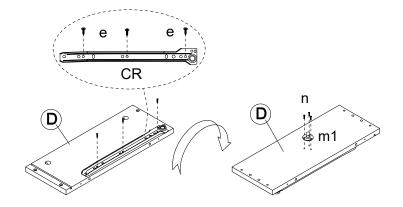

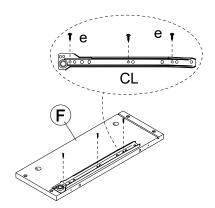

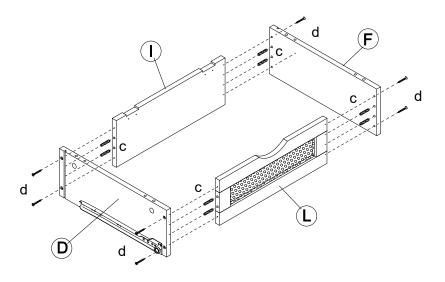


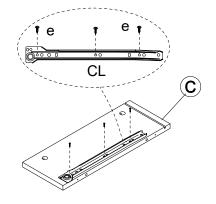

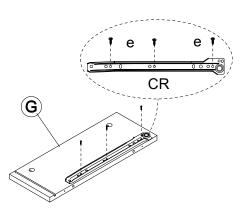


Assembly Instructions




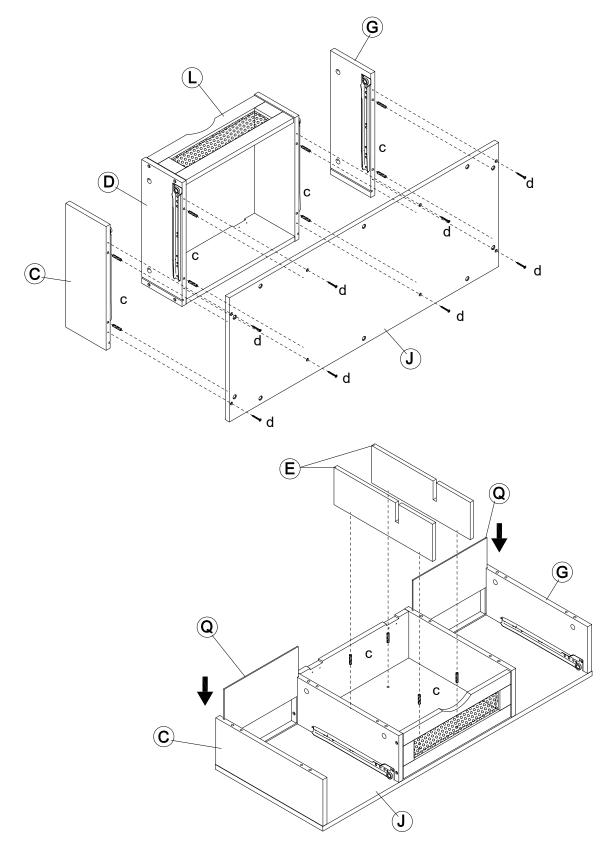

Assembly Instructions


STEP 3

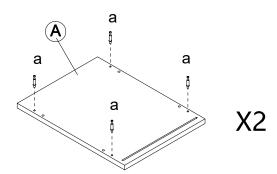


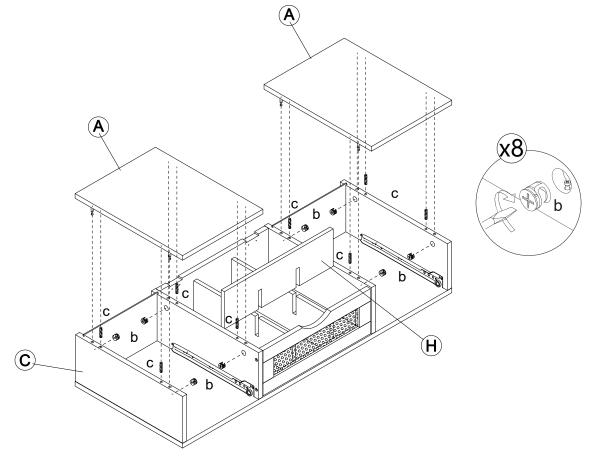

Assembly Instructions


STEP 5

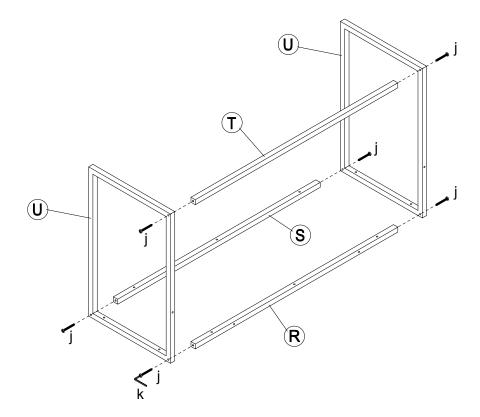


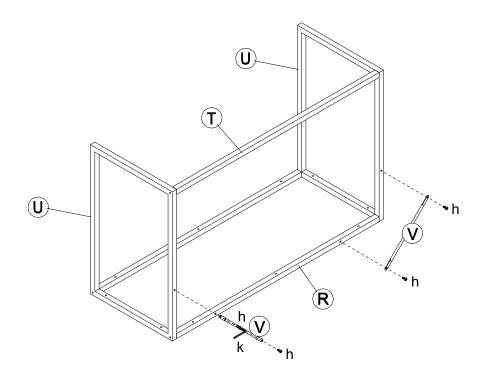


Assembly Instructions

STEP 7

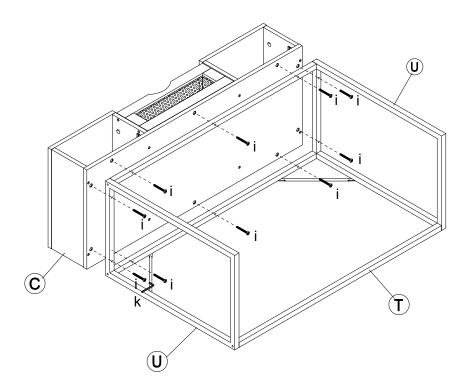


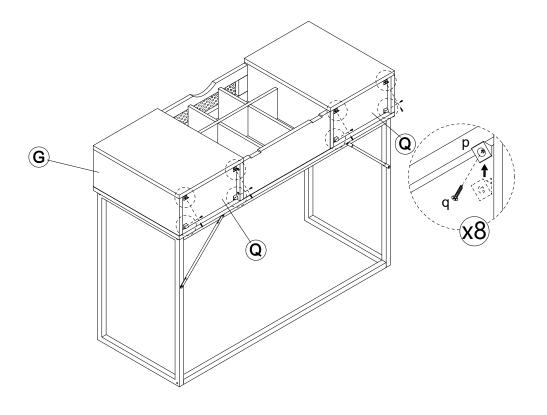


Assembly Instructions

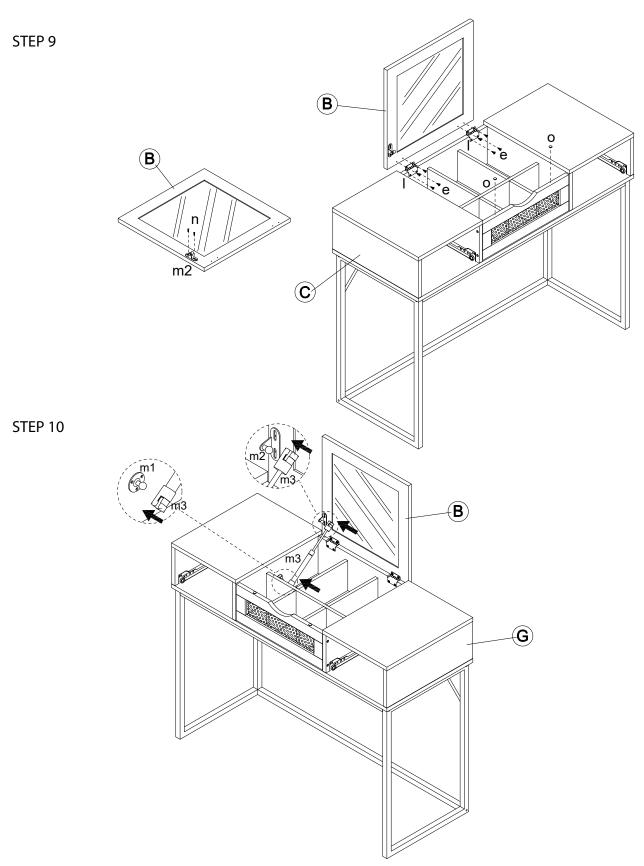

STEP 11

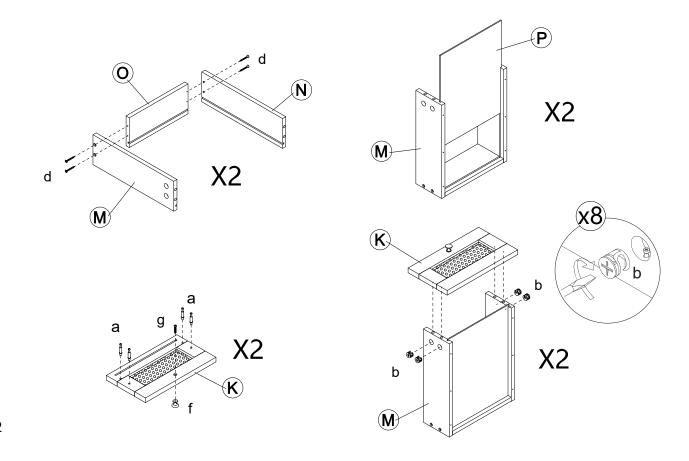

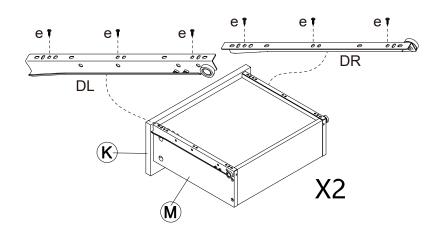

Assembly Instructions

