


SQUIGGLE MIRROR

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED:
Drill, Phillips head screwdriver / bit, Hammer, Level, Pencil

WARNINGS:
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.


CARE INSTRUCTIONS:
Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

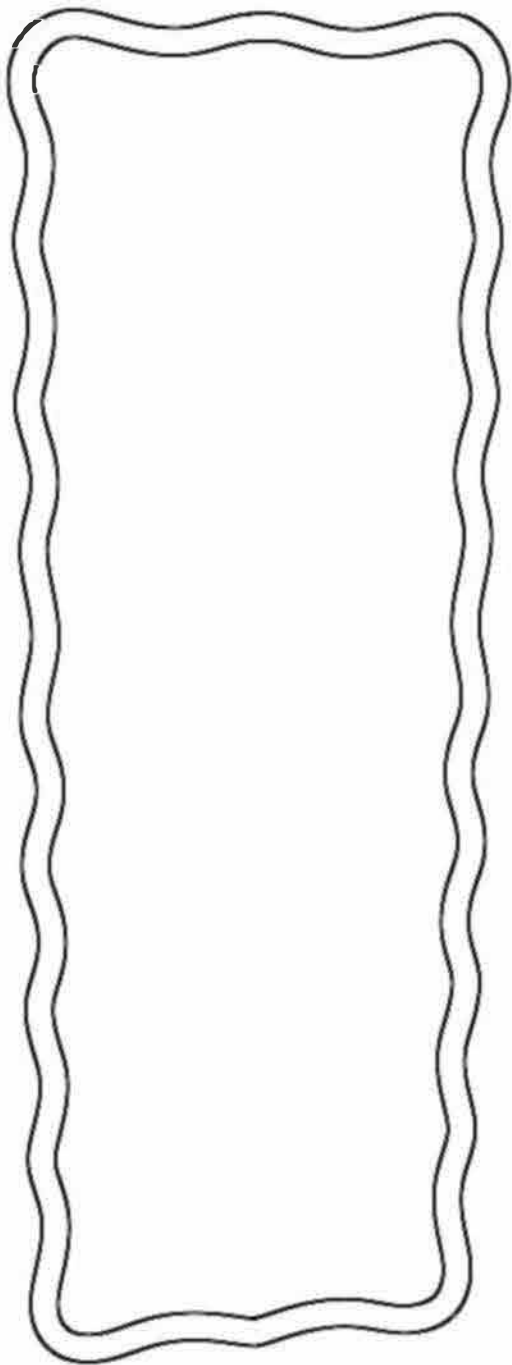

PARTS INCLUDED:

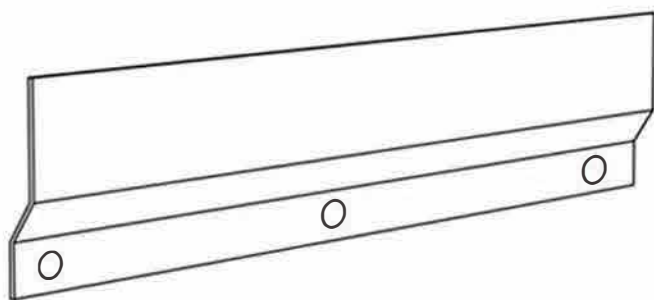


(A) Wall bracket

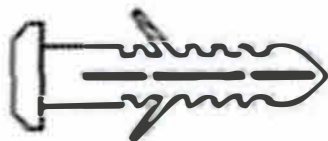

(B) Drywall Anchor
[10X50] x3



(C) Wall Screws
[4X50] x3

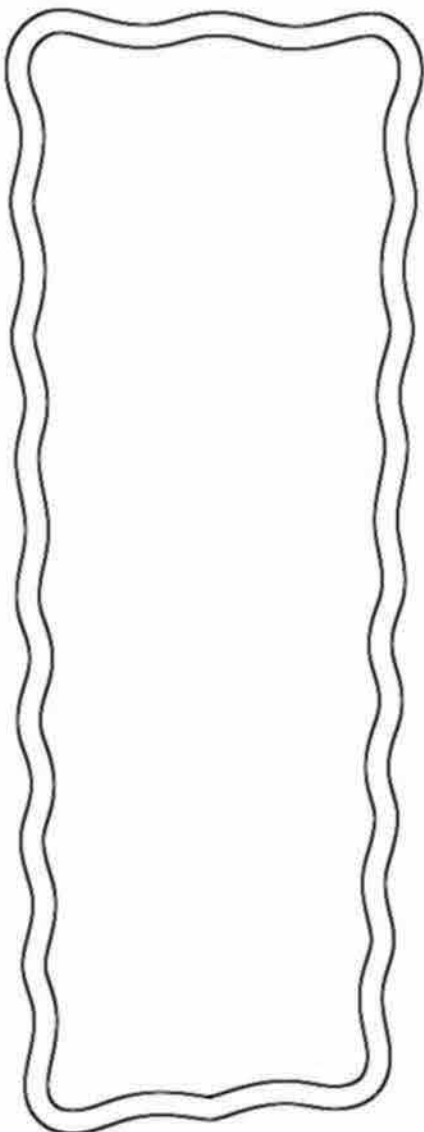

(D) Mirror

SQUIGGLE MIRROR

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Determine the desired location of the Mirror. If attaching to drywall, place the Wall Bracket (A) in the desired position on the wall and mark the location of the holes in the bracket with a pencil. Use a level to ensure the bracket is not crooked. Remove the bracket from the wall and attach the Drywall anchors (B) to the wall in the marked location using a Hammer and a Phillips head screwdriver (not included). Place the Wall Bracket (A) back on the wall over the Drywall Anchors (B) and insert the Screws (C) through the bracket as shown. Tighten the screws with a Phillips head screw driver (not included). **If attaching to studs, you do not need to use the Drywall anchors (G). Screw the Wall Bracket (A) directly to the stud using the Screws (C).** Hang the mirror on the Wall Bracket (A) as shown to complete the installation.

