

Chamberlin Chair

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:


Philip Head Screwdriver

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing. Assemble all parts on a clean smooth surface.
Two people recommended for assembly.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

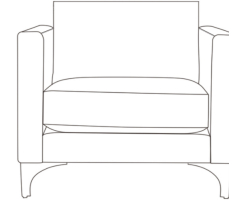

PARTS INCLUDED:

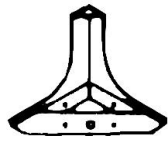

(A) Metal Leg x8



(B) Philip Head Screws
(#10 x 1-1/2) x16

STEP 1

Align legs (A) to the corners of the chair frame as shown in the image below. Ensure the holes in legs (A) align with the pre-drilled holes in the chair frame. Insert screws (B) one by one and partially tighten with a phillips head screw driver (not included). Once all screws are inserted and partially tightened, fully tighten the screws.

