

SKYE STORAGE CABINET

URBAN OUTFITTERS

Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

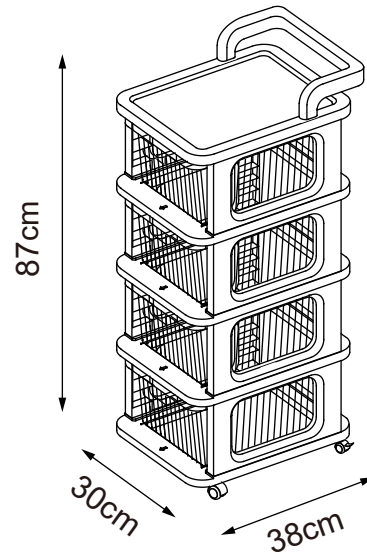

PARTS INCLUDED:

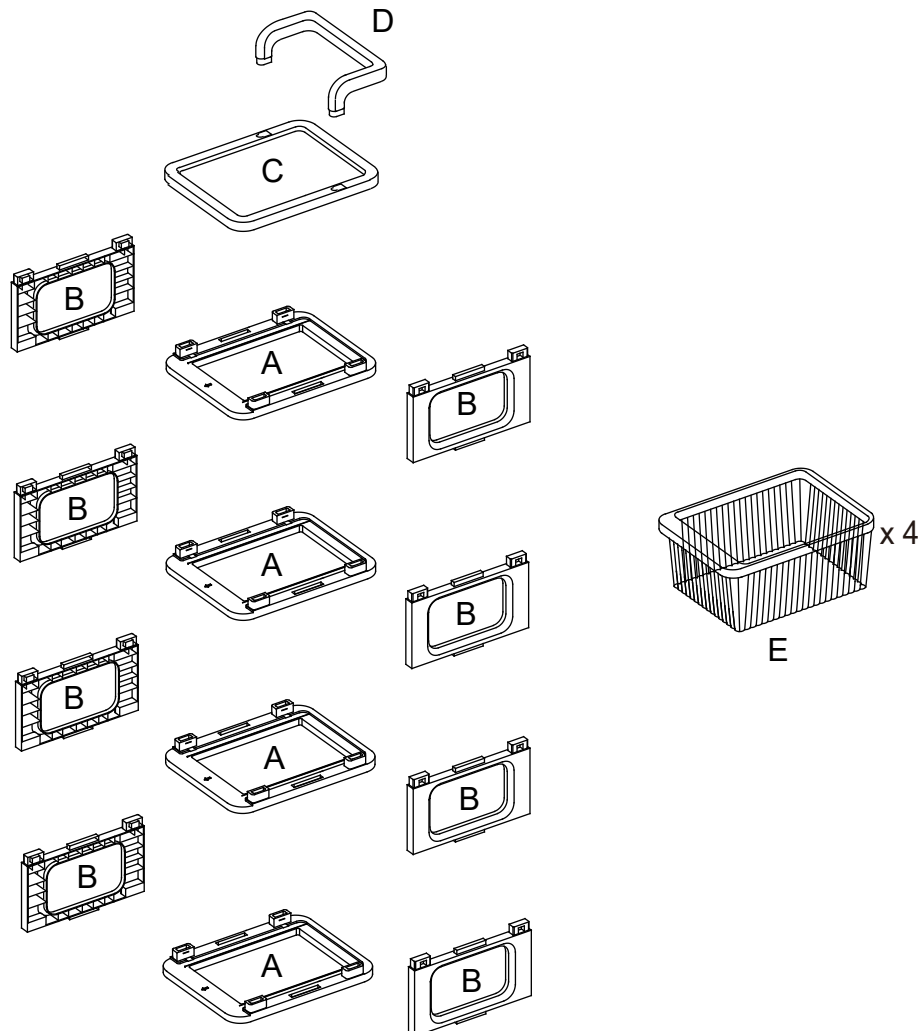


SKYE STORAGE CABINET


Assembly Instructions

URBAN OUTFITTERS


PARTS INCLUDED:

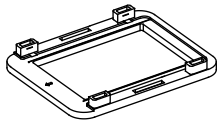

A) X4

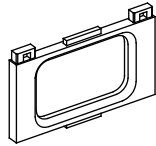


B) X8




C) X1




D) X1

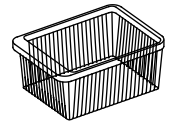

E) X4



F) Universal Wheel
x2pcs




G) Universal Wheel
x2pcs

SKYE STORAGE CABINET


URBAN OUTFITTERS

Assembly Instructions

STEP 1

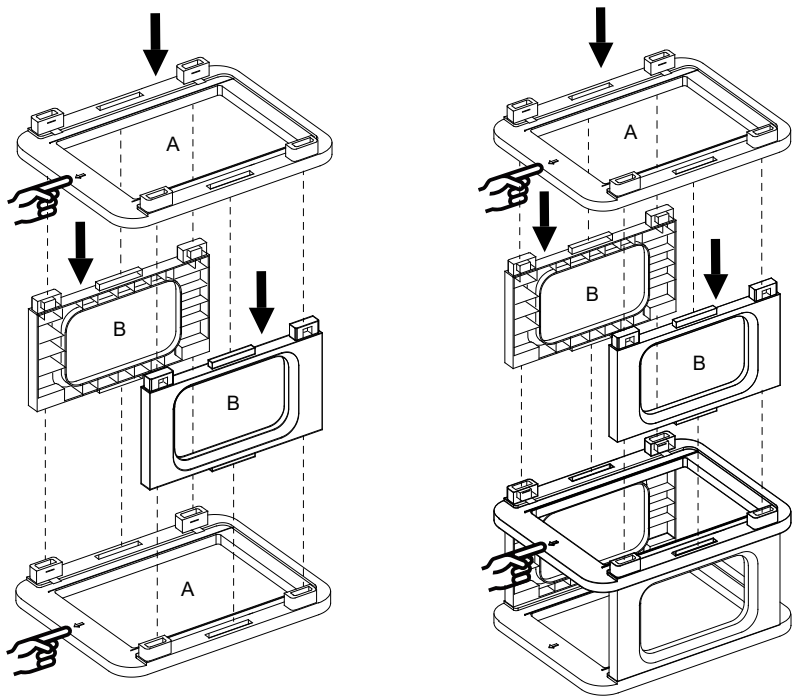

STEP 2

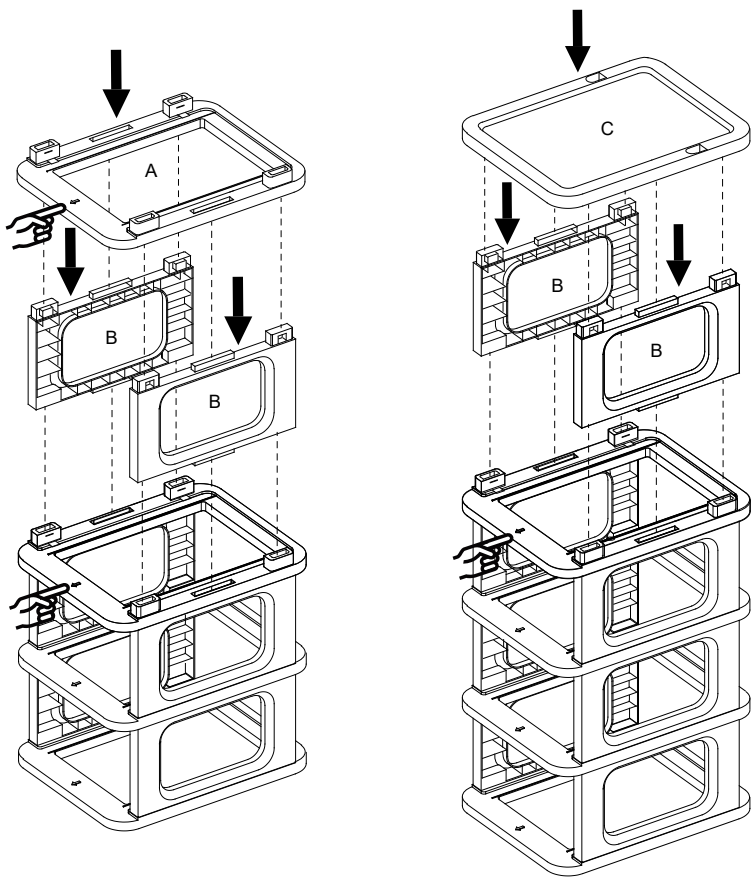


SKYE STORAGE CABINET

Assembly Instructions

URBAN OUTFITTERS

STEP 3

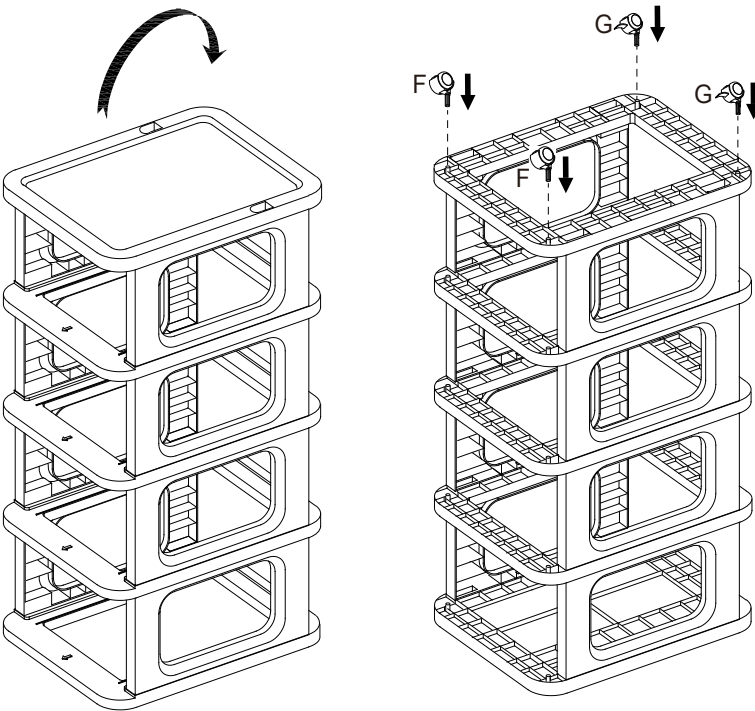

STEP 4

