URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCUDED:

Hammer, Drill

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.

Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

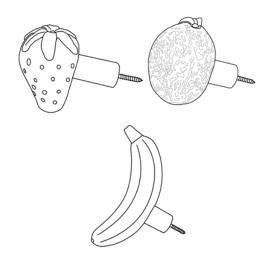

PARTS INCLUDED:



(A) Anchor (S8) x1

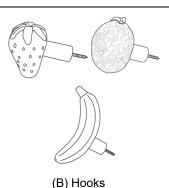

STEP 1

If you are attaching directly to a stud, screw the hook (B) directly into the wall in your desired location. If you are screwing the hook into drywall, pre-drill a hole for the wall anchor (A) at your desired location using a drill (not included). Insert the anchor into the wall using a hammer then, carefully screw the hook (B) into the wall anchor (A), do not over tighten!

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

