

# CANE CHAIR

## Assembly Instructions

URBAN OUTFITTERS

### TOOLS REQUIRED


Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean smooth surface

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

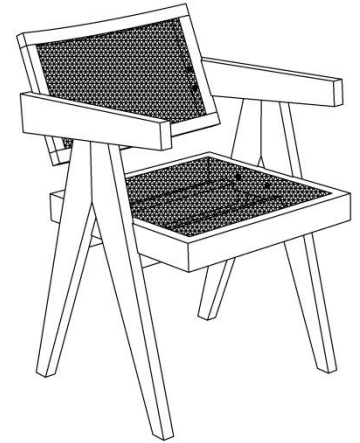


### PARTS INCLUDED

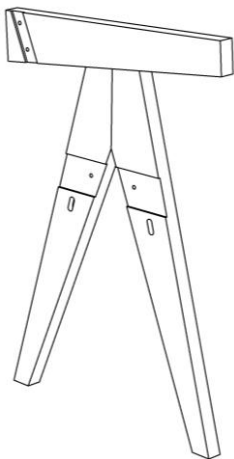


(A) Leg 2x

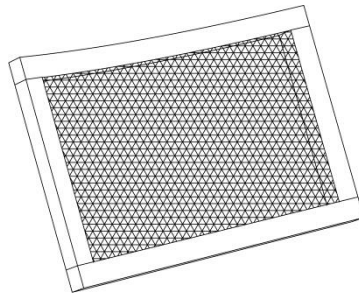


(B) Backrest 1x

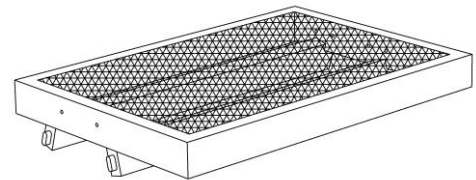

(C) Seat 1x



(D) Allen Bolt 8x  
M6X40 MM

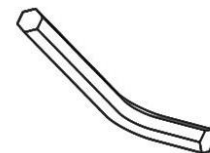

(E) Allen Key 1x  
M4


# CANE CHAIR

## Assembly Instructions


---

URBAN OUTFITTERS

### STEP 1

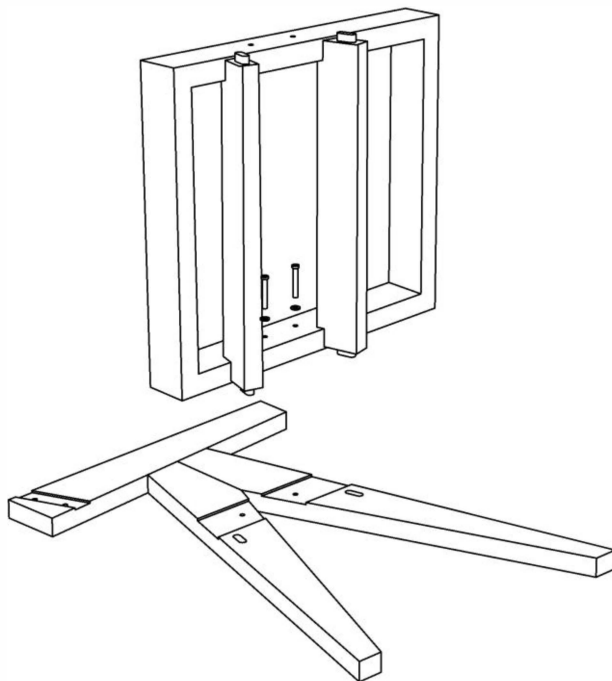

### STEP 2

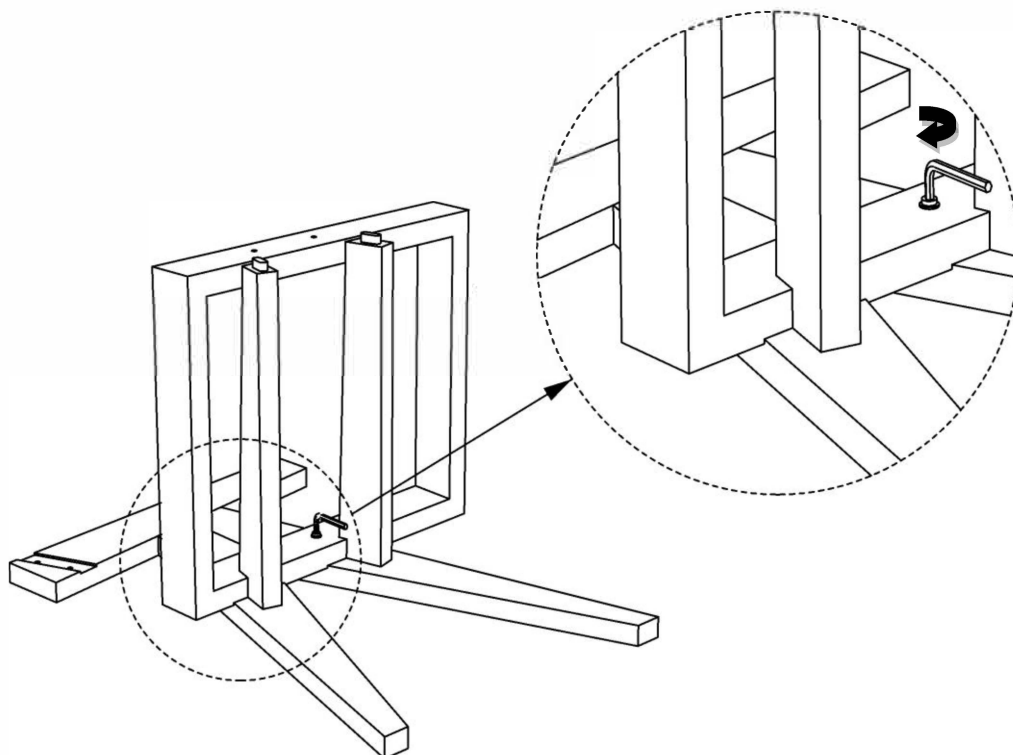


# CANE CHAIR


## Assembly Instructions

URBAN OUTFITTERS

### STEP 3

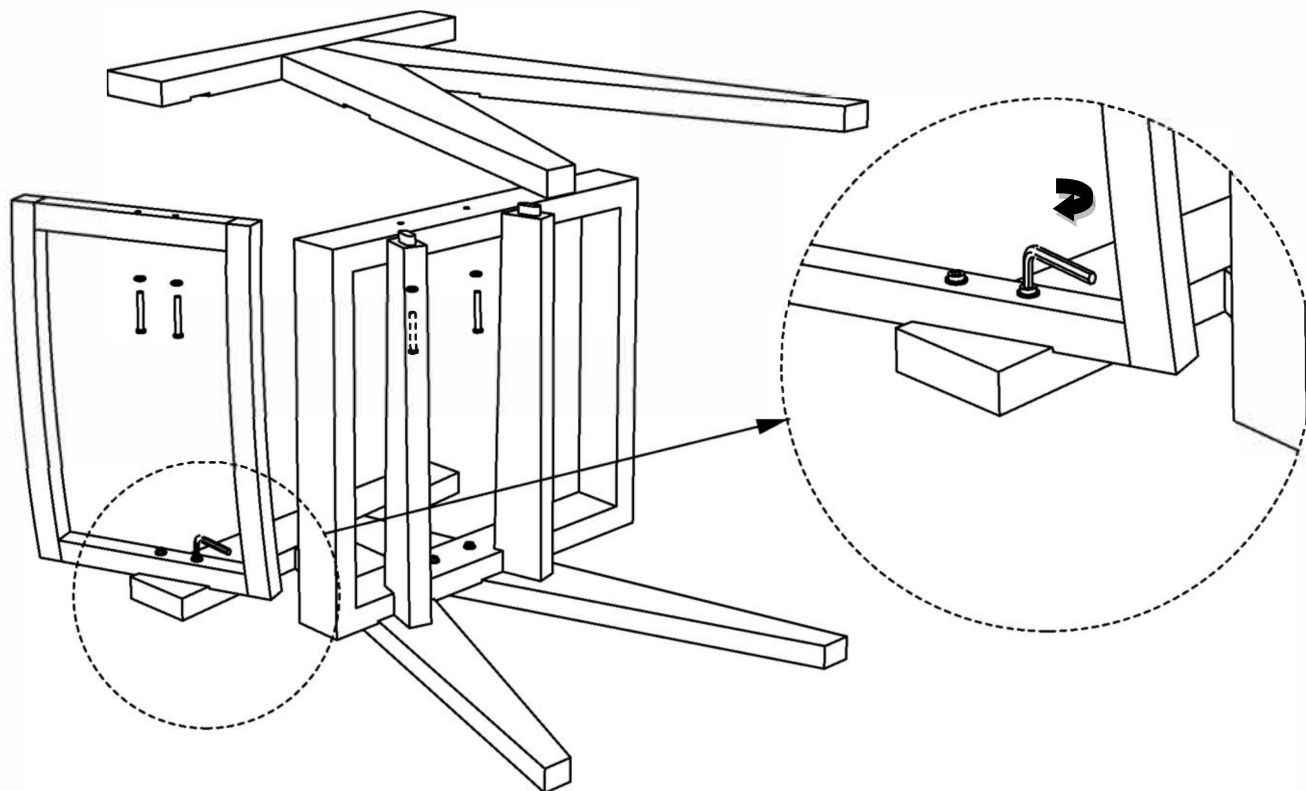

### STEP 4

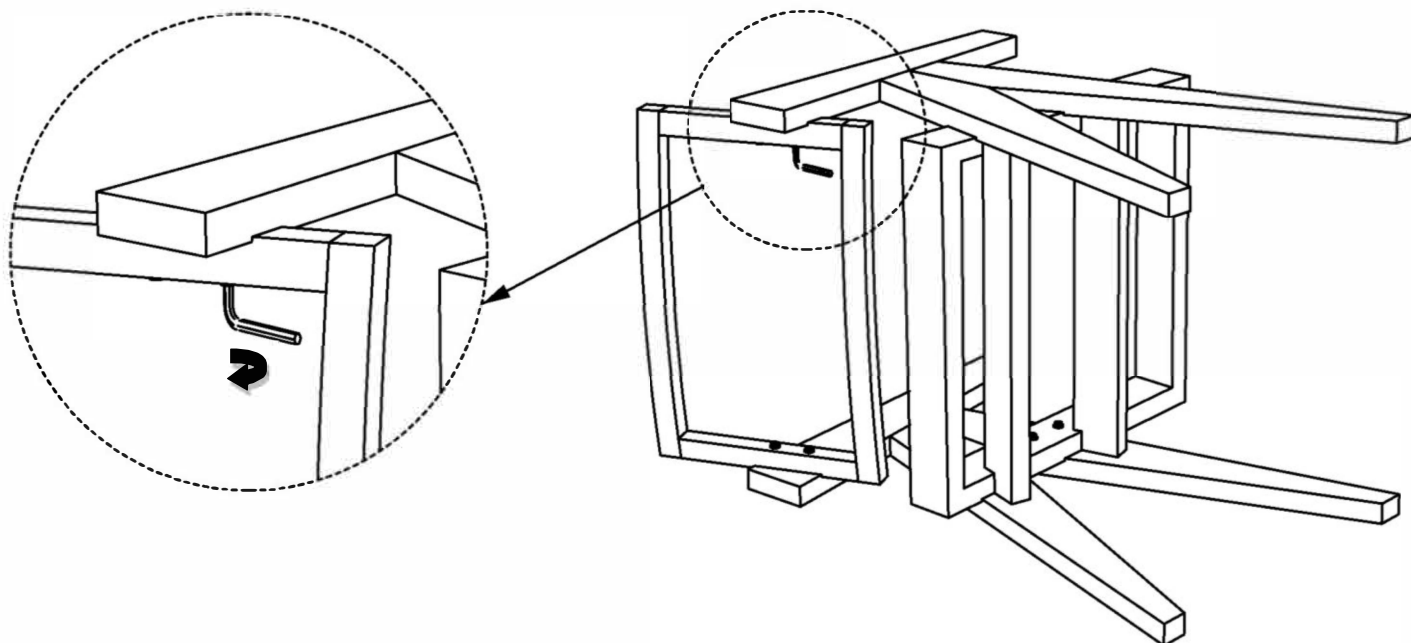


# CANE CHAIR

## Assembly Instructions

URBAN OUTFITTERS

### STEP 5

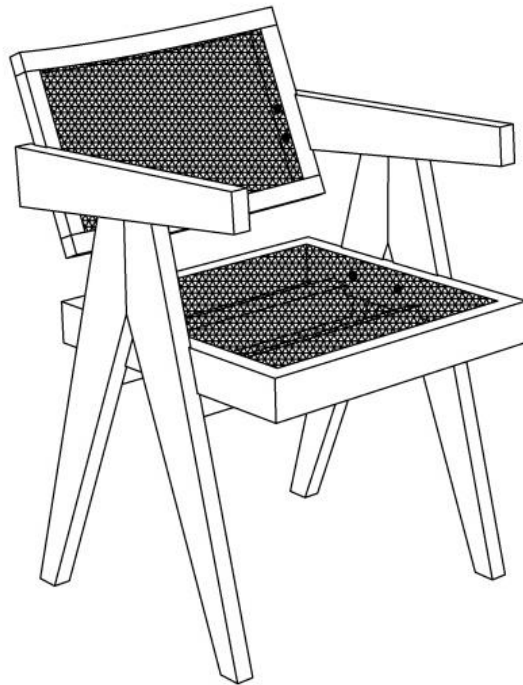

### STEP 6

