

CASTELLA STORAGE UNIT

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Do not throw away packing materials and carton until after assembly.


Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:










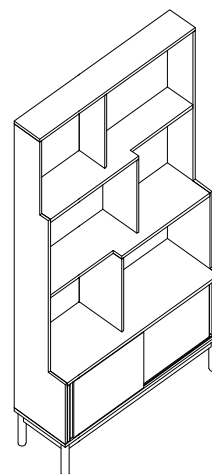


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.



PARTS INCLUDED

F	K	R	S	T	U
					
X 1	1/4" x 2" Bolt 8 X	1/4" x 1-1/8" Bolt 32 X	1/4 flat washer 40 X	1/4 spring washer 40 X	3.5 x 19mm 24 X
V	W	X	Y	Z1	Z2
					
5/32" x 3/8" 1 X	5/32" x 1/2" 1 X	1 X	2 X	3x32mm 2X	3x19mm 2X



Phillips screwdriver (not included)



CASTELLA STORAGE UNIT

URBAN OUTFITTERS

Assembly Instructions



STEP 1

With help lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the Center Shelf (H) with Top Shelf (E) as shown. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do Not Overtighten.

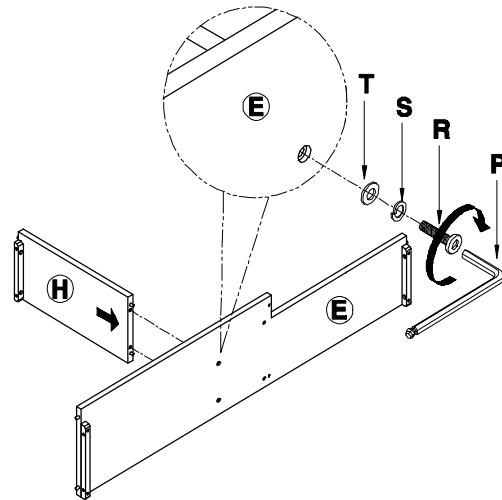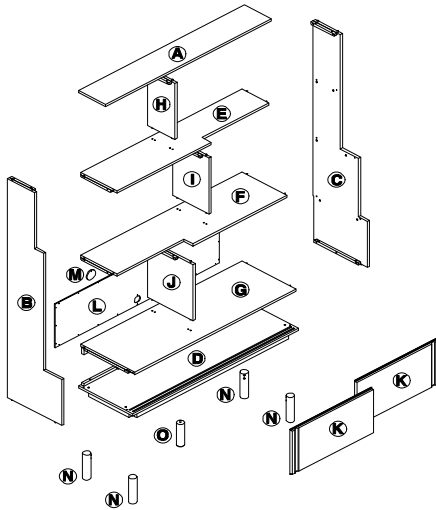

STEP 2

Align Shelf (I) with Shelf (E) and press firmly together. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten. Repeat to Shelf (F) as shown below.

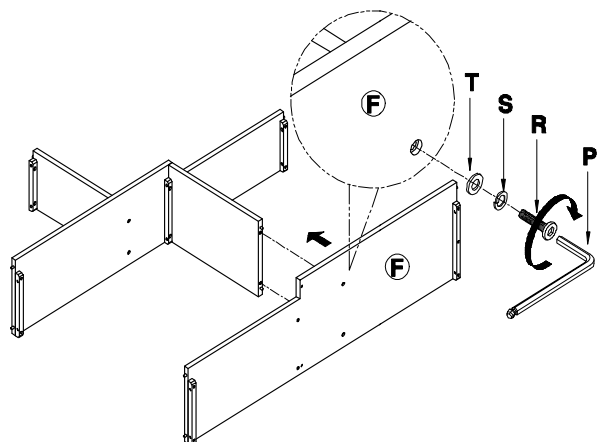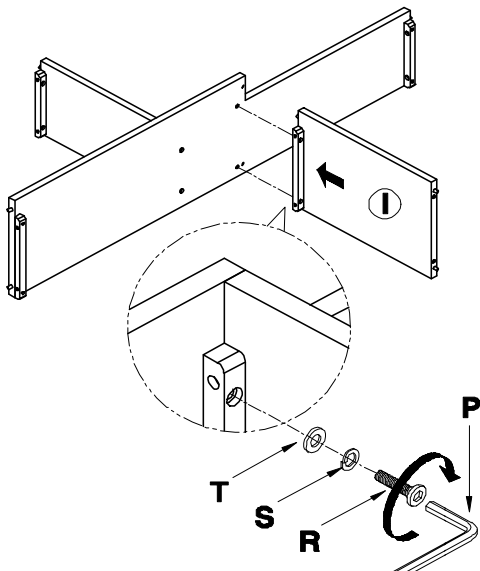


CASTELLA STORAGE UNIT

URBAN OUTFITTERS

Assembly Instructions


STEP 3

Align Shelf (J) with Shelf (F) and press firmly together. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten. Repeat to Shelf (G) as shown below.

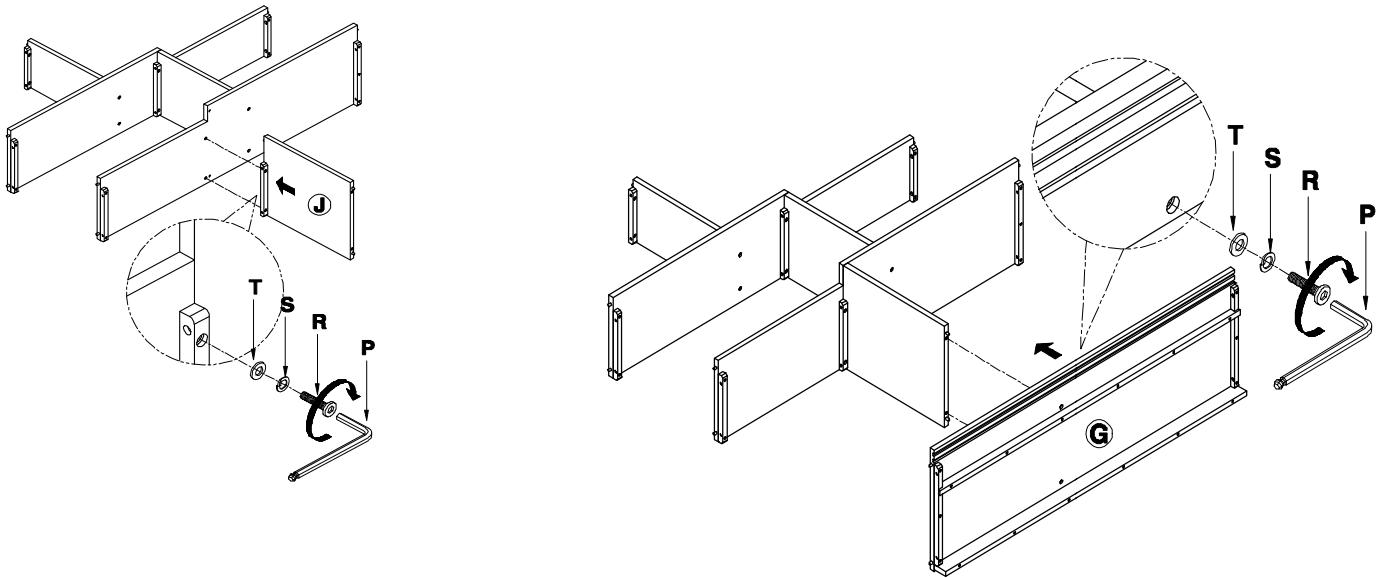

STEP 4

Align shelves (B) and (C). Press firmly into place. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten.

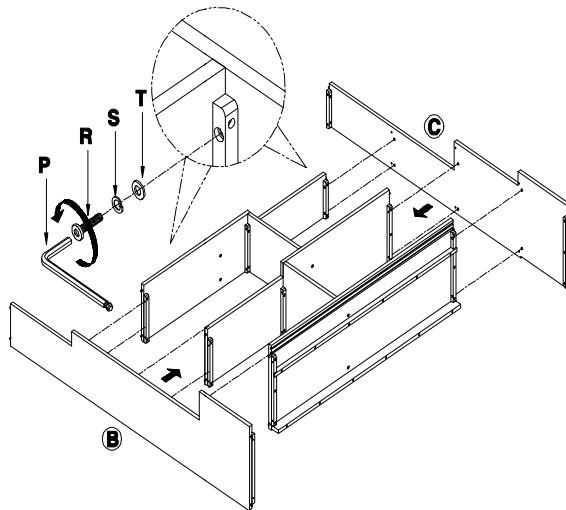


CASTELLA STORAGE UNIT

URBAN OUTFITTERS

Assembly Instructions


STEP 5

Align Top Shelf (A) and press firmly into place. . Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten.

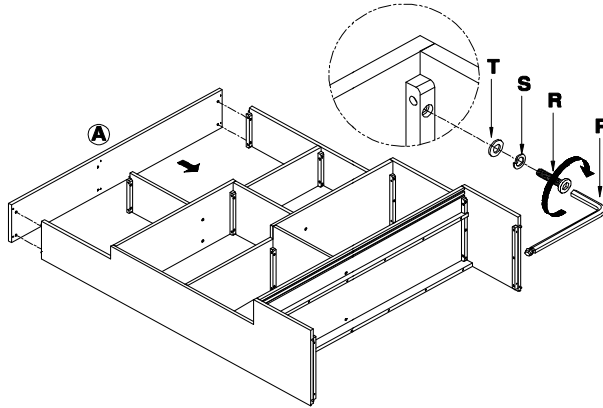

STEP 6

With help align the Doors (K) with the door tracks in the bottom of Shelf (G) and the top of the Bottom Panel (D). Hold everything into place and align the Bottom Panel (D). Press firmly into place. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten. Align Doors (K) as shown below.

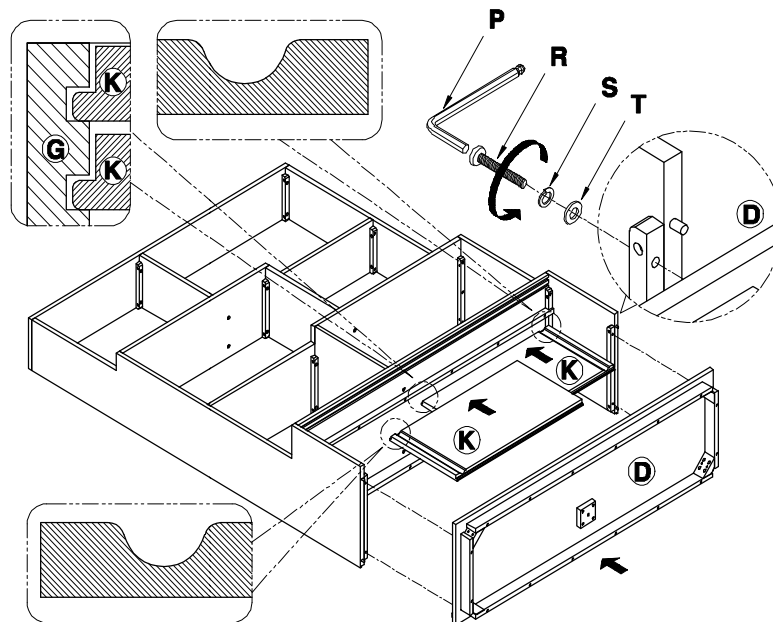



CASTELLA STORAGE UNIT

URBAN OUTFITTERS

Assembly Instructions



STEP 7

Align the Legs (N) as shown. Insert Bolt (R), Spring Washer (S), and Flat Washer (T). Tighten with supplied Hex Key (P) by turning clockwise. Do not overtighten. Screw in the Center Support Leg (O) clockwise until tight. Align the Cap (M) with the back of the Back Panel (L) as shown. Insert Screw (V) through both into Nut (W) as shown.

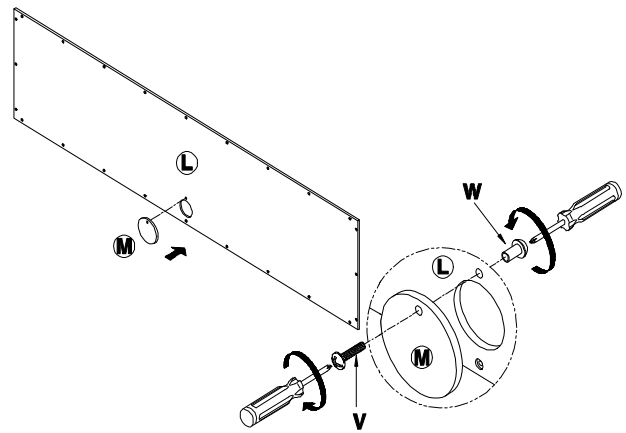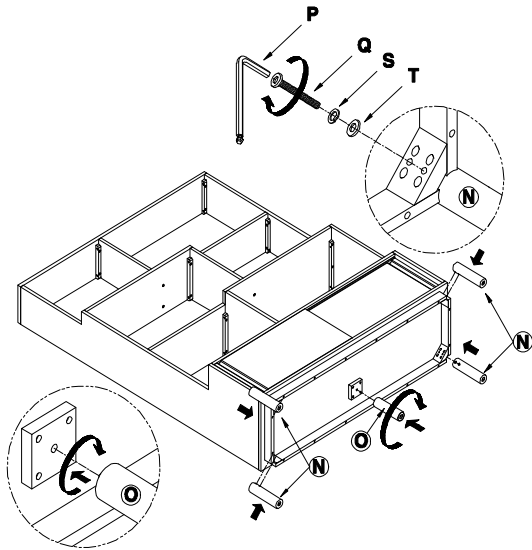

STEP 8

With help stand the Bookshelf upright making sure you do not lean it on the legs as this can damage them. Align the Back Panel (L) as shown. Insert screws (U). Tighten with screwdriver (not included). You will need to adjust the levelers for uneven flooring.

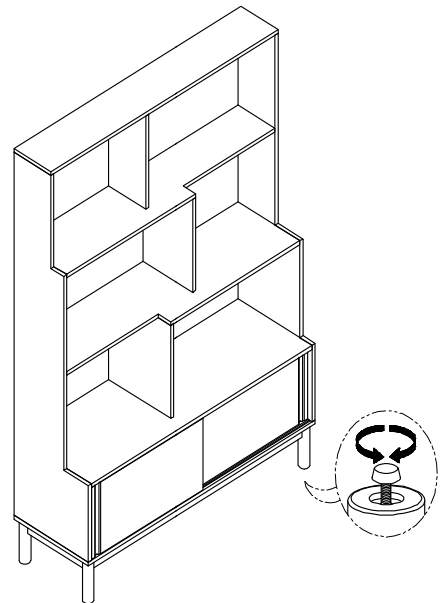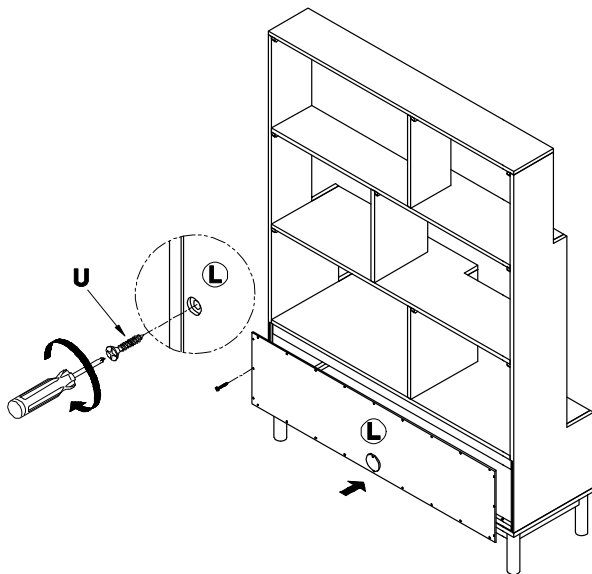

STEP 9

To prevent injury and property damage from unexpected tipping of furniture.

1. Attached the mounting bracket horizontally to the top back edge of the furniture. Insert the short screws through the holes in the bracket and tighten securely using screwdriver. Please contact your local hardware store to get the correct anchor for your wall type.
2. Determine where the furniture is to be placed and mark location on the wall for the other mounting bracket crew holes. It should be placed approximately 2" below the bracket mounted to the furniture.
3. Attached the mounting bracket vertically to the wall by inserting the long screws provided through the hole in the bracket and tightening securely using screwdriver. Please contact your local hardware store to get the correct anchor for your wall type.
4. Place the furniture so the bracket on the back edge are in line with the brackets on the wall.
5. Lace an end of the nylon restraint strap down through each bracket. Bring both ends together and slide the thin end of the strap through the receiving end of the strap until snug.
6. Check to make sure the strap is securely laced and locked to the bracket.

