

Racket Side Table

Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED.

WARNINGS:


Do not discard packing materials and the carton until assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if any parts are missing.
Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

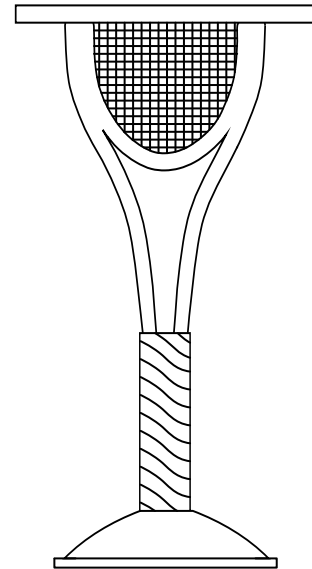


PARTS INCLUDED:



(A) Top

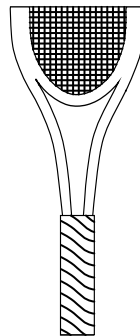

(B) Post




(C) Base



(D) Allen screw x2
[0.51"x 0.51" x 0.60"]
or
[13 x 13 x 15 mm]



(E) Allen screw x1
[0.51"x 0.51" x 1.06"]
or
[13 x 13 x 27 mm]

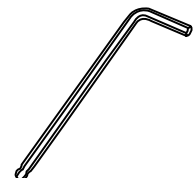

(F) Allen Key


Racket Side Table

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Insert the top (A) into the top of the post (B), align the holes in each part.

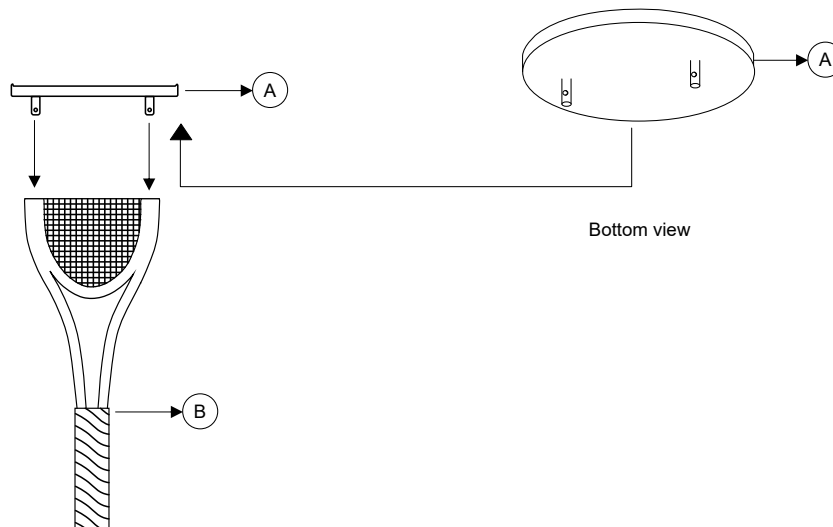

STEP 2

Insert the bolts (D) through the post (B). Use the allen key (F) to tighten the bolts (D). Do not over-tighten the bolts (D).

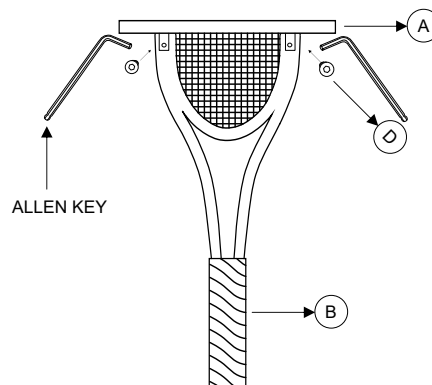

STEP 3

Insert the bolt (E) through the base (C) into the post (B). Use the allen key (F) to tighten the bolt (E). Do not over-tighten the bolt (E).

