



WYATT DRESSER

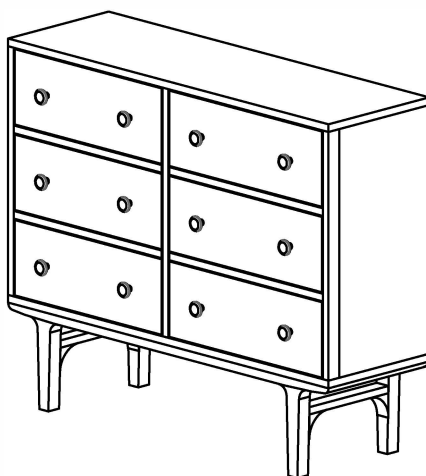


TOOLS REQUIRED:



Allen key 1x

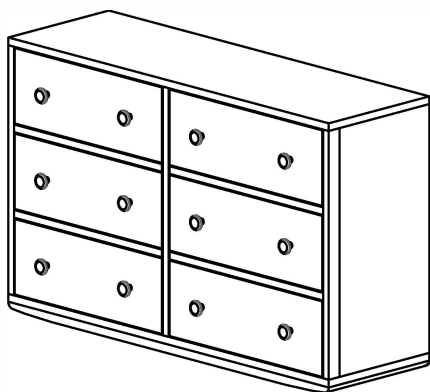

A
BODY 1x

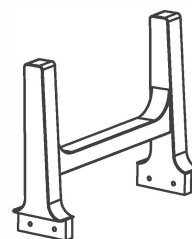

B
LEG 2x



C
ALLEN BOLT 8x
(M6 x30mm)




D
WASHER 8x

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface


WYATT DRESSER

STEP-1

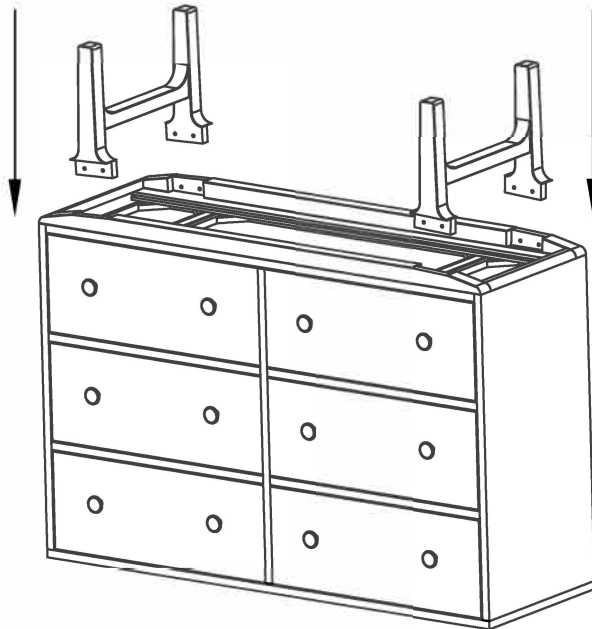


With help flip the dresser over onto a clean smooth surface such as carpet or cardboard. Align legs as shown.

STEP-2

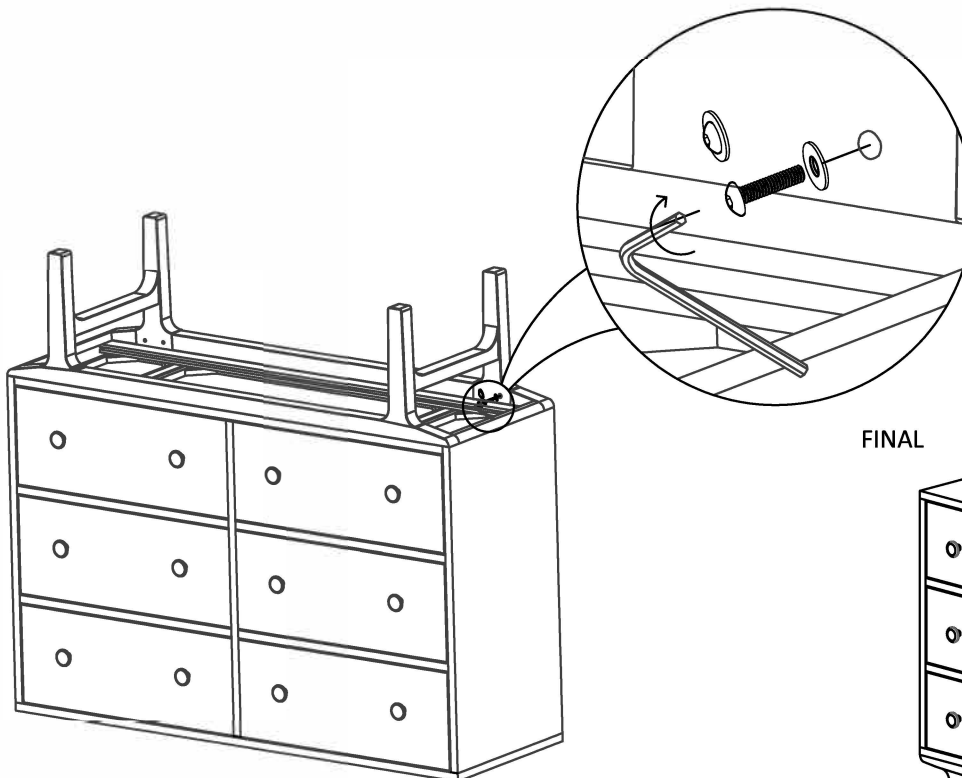

Insert Bolt (C) and washer (D). Tighten with supplied hex key. With help flip the dresser over making sure that you do not lean it on the legs as this can damage them.

FINAL

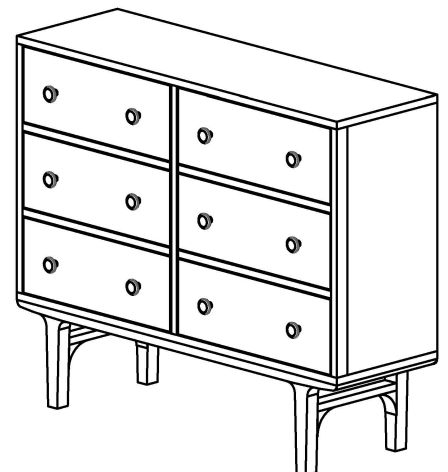

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface