

# ALONZO BED

## Assembly Instructions

# URBAN OUTFITTERS

### TOOLS REQUIRED BUT NOT INCLUDED:



EX. 'Phillips head screwdriver, Level, Hammer' (do not include graphic)

Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean smooth surface


### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills do not rub, with a clean white cloth.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.


### PARTS INCLUDED:

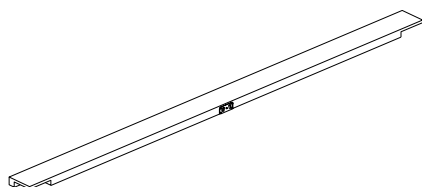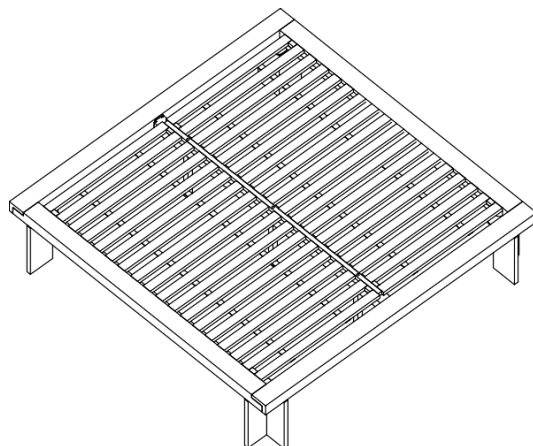


(1) Front/BackFrame x2  
(Wrapped in green tape)

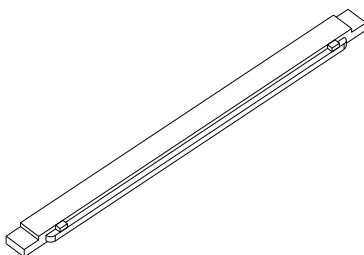

(2) SideFram x2  
(Wrapped in green tape)

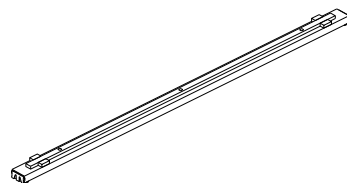


(3) CenterSupport x2  
(Wrapped in green tape)

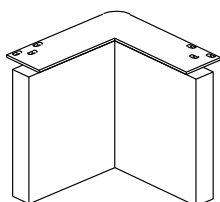


(4) Leg x4  
(Wrapped in green tape)




(5) CenterLeg x3  
(Wrapped in green tape)

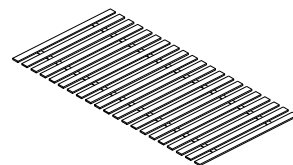


(6) Slats x2  
(Wrapped in green tape)

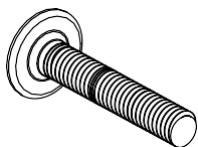


(A) Allen Bolt x8  
[8mm x 45mm]

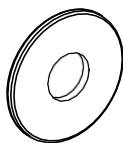


(B) Washer x8  
[20mm]

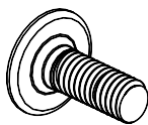

(C) Allen Bolt  
[8mm x 20mm]  
x16



D) Allen Bolt x3  
[8mm x 45mm]  
x3

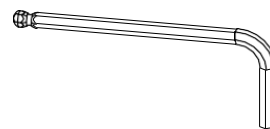


E) Allen Key x1

# ALONZO BED

Assembly Instructions


URBAN OUTFITTERS

EXPLODED & LABELED

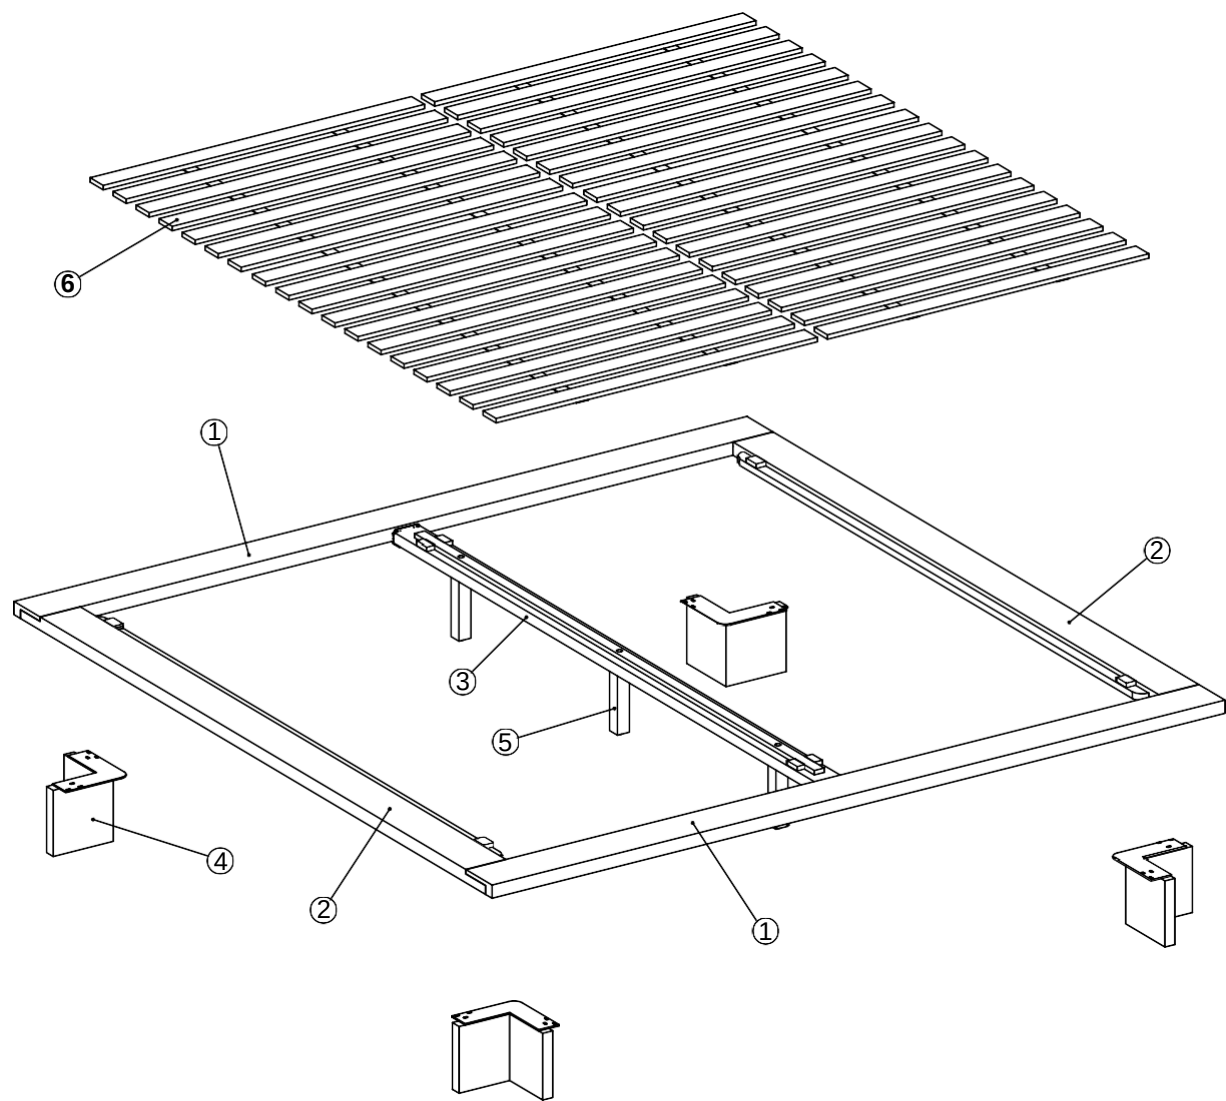

### STEP 1

Lay the top front frame (1) upside down onto a clean smooth surface such as carpet or cardboard. Place top front frame (1) into side framing (2) as shown in the sketch below. Insert Allen Bolts (A) with Washer (B) through frame then tighten with Allen key (E).

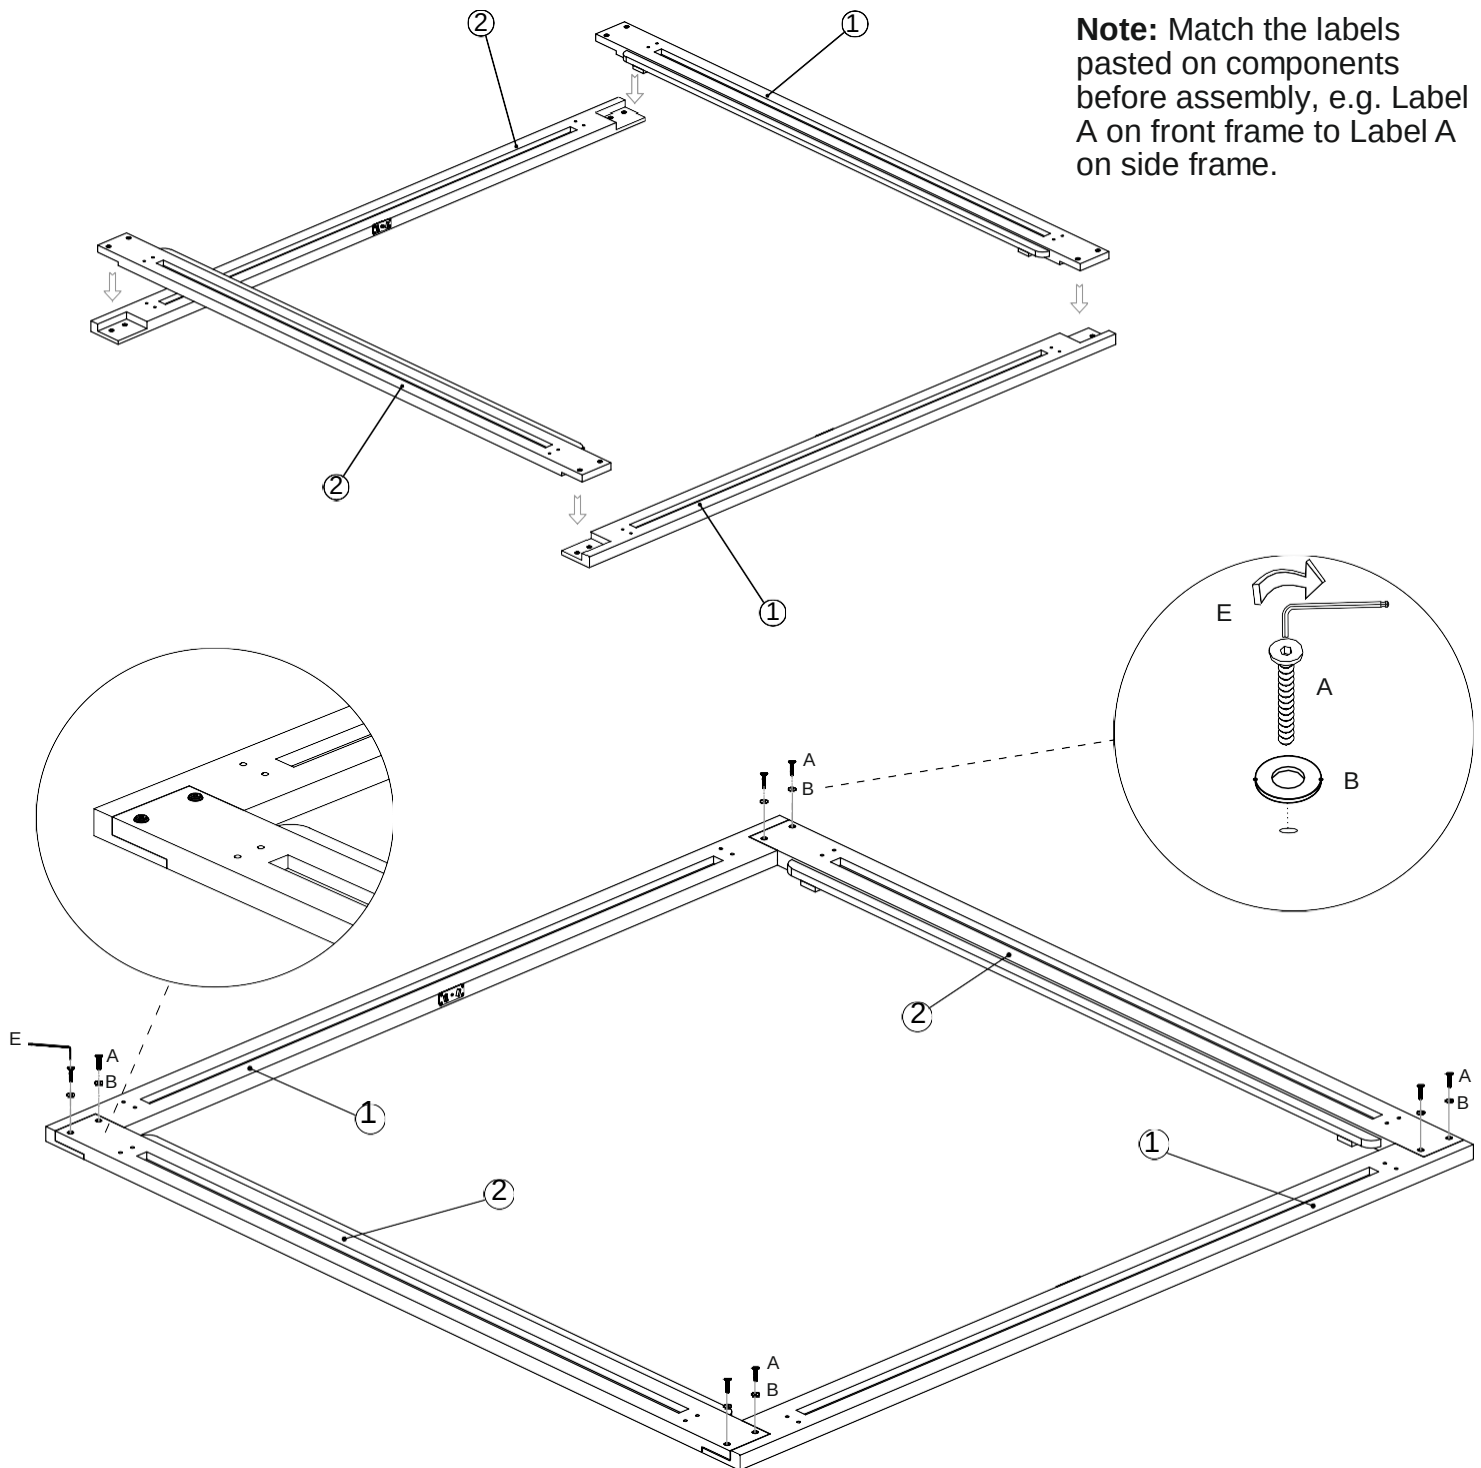


# ALONZO BED

## Assembly Instructions

# URBAN OUTFITTERS

### STEP 2

Align holes in legs (4) to holes in side frame (2) as shown in sketch below. Insert Allen Bolts (C) through Leg (4) into side frame (2) and then tighten with Allen key (E).

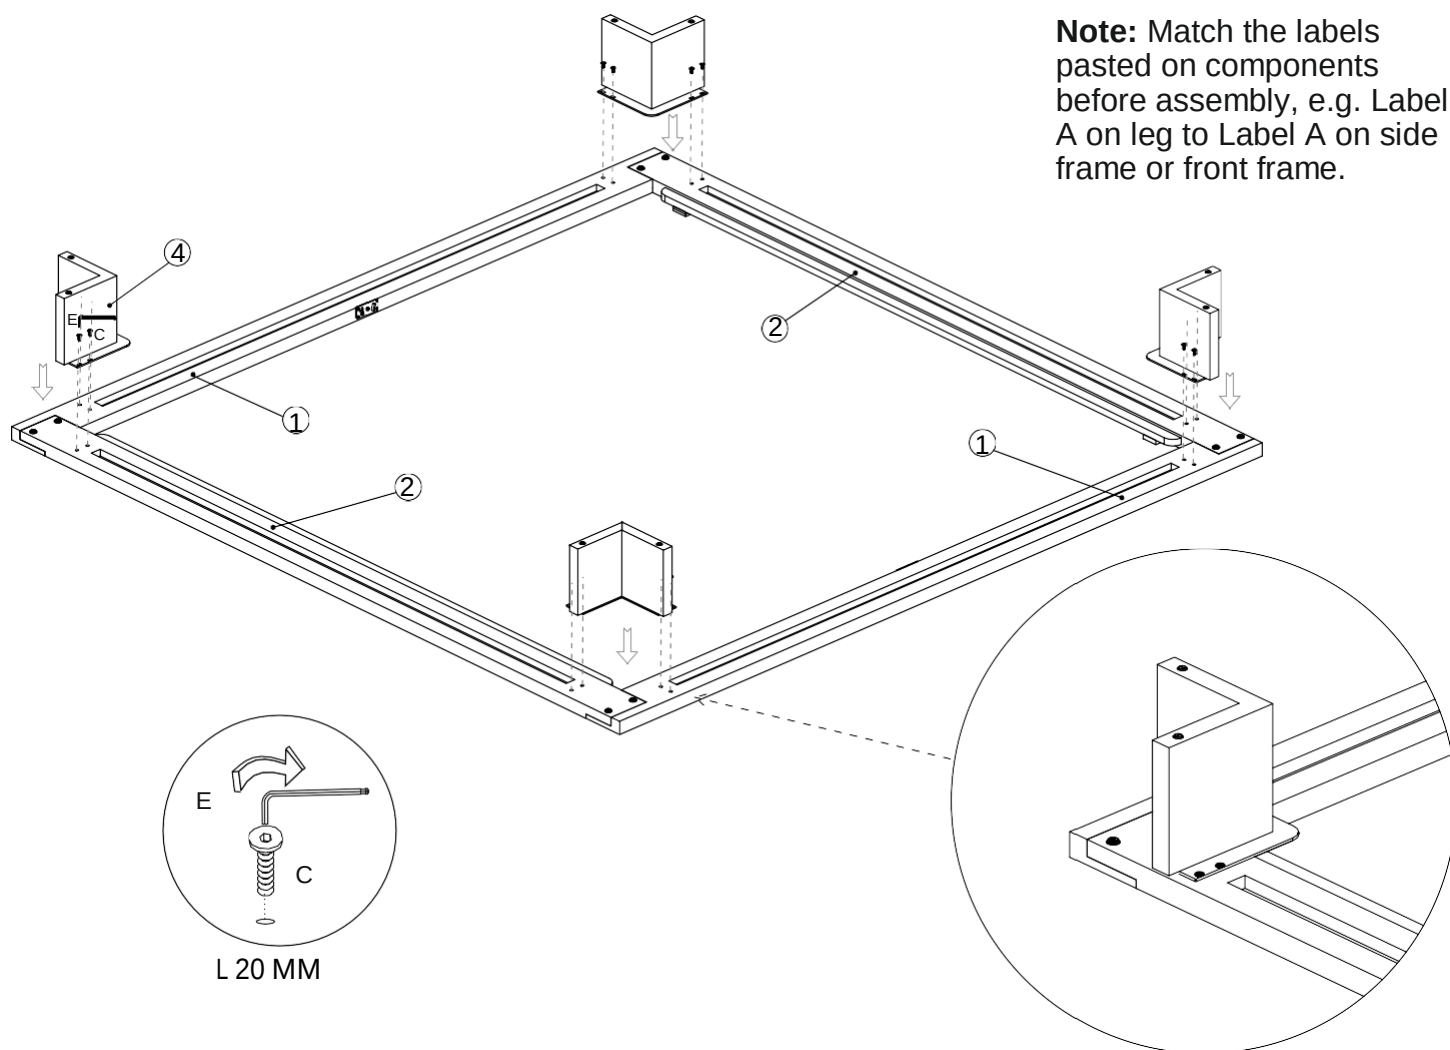


# ALONZO BED

## Assembly Instructions

# URBAN OUTFITTERS

### STEP 3

Attach center support (3) to frame (1) as shown in the sketch below.

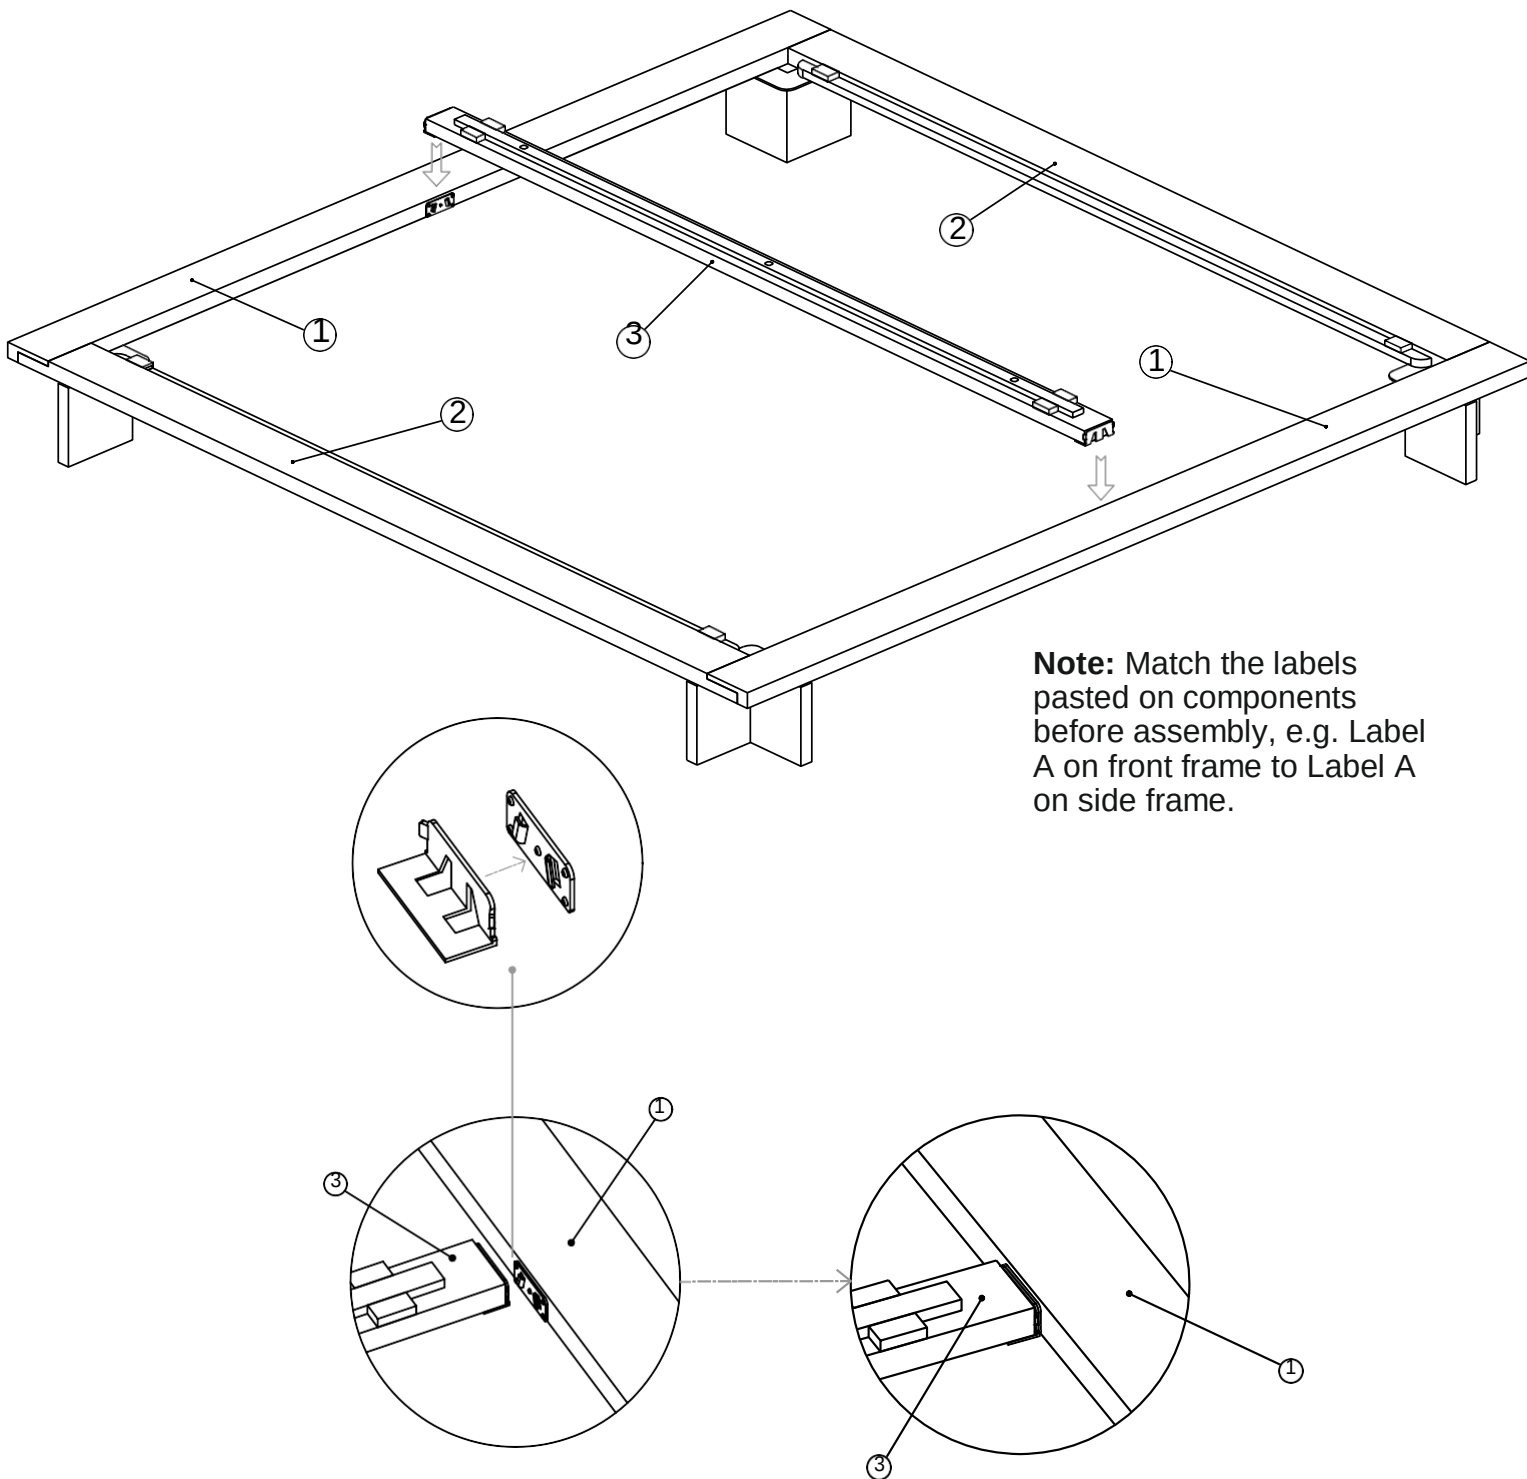

**Note:** Match the labels pasted on components before assembly, e.g. Label A on front frame to Label A on side frame.



# ALONZO BED

## Assembly Instructions

# URBAN OUTFITTERS


### STEP 4

Attach center legs (5) to center support (3) as shown in the sketch below. Insert Allen Bolts (D) through center support (3) into center leg (5) and then tighten with Allen key (E).

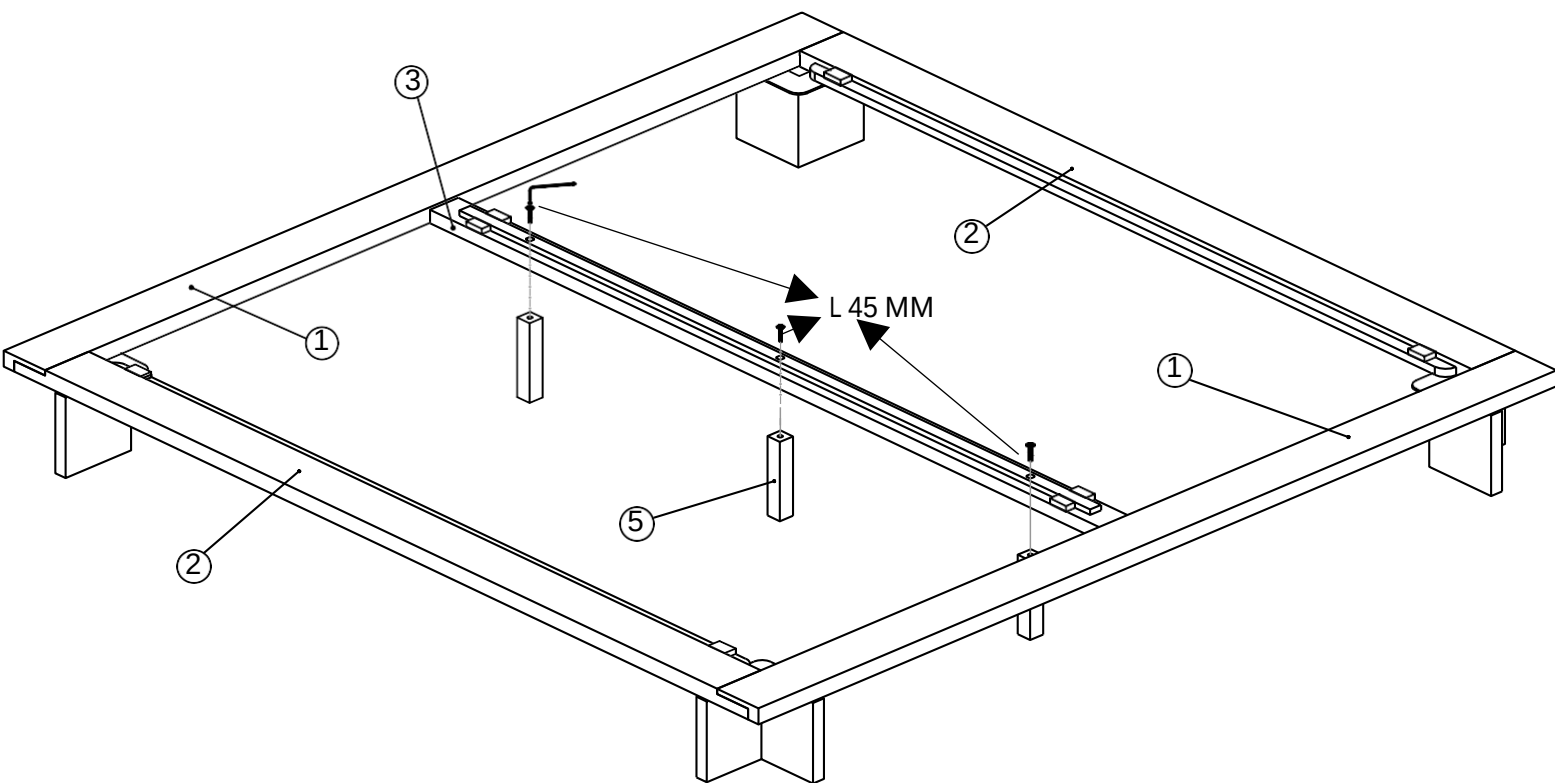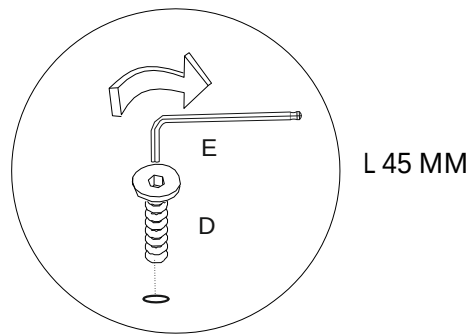

### STEP 5

Place the slat sets (5) on the assembled frame. The front and back slat should be positioned so that the wood blocks on either end of the side frame (2) and center frame (3) fit inside the slat set - this will keep the slat sets in position.

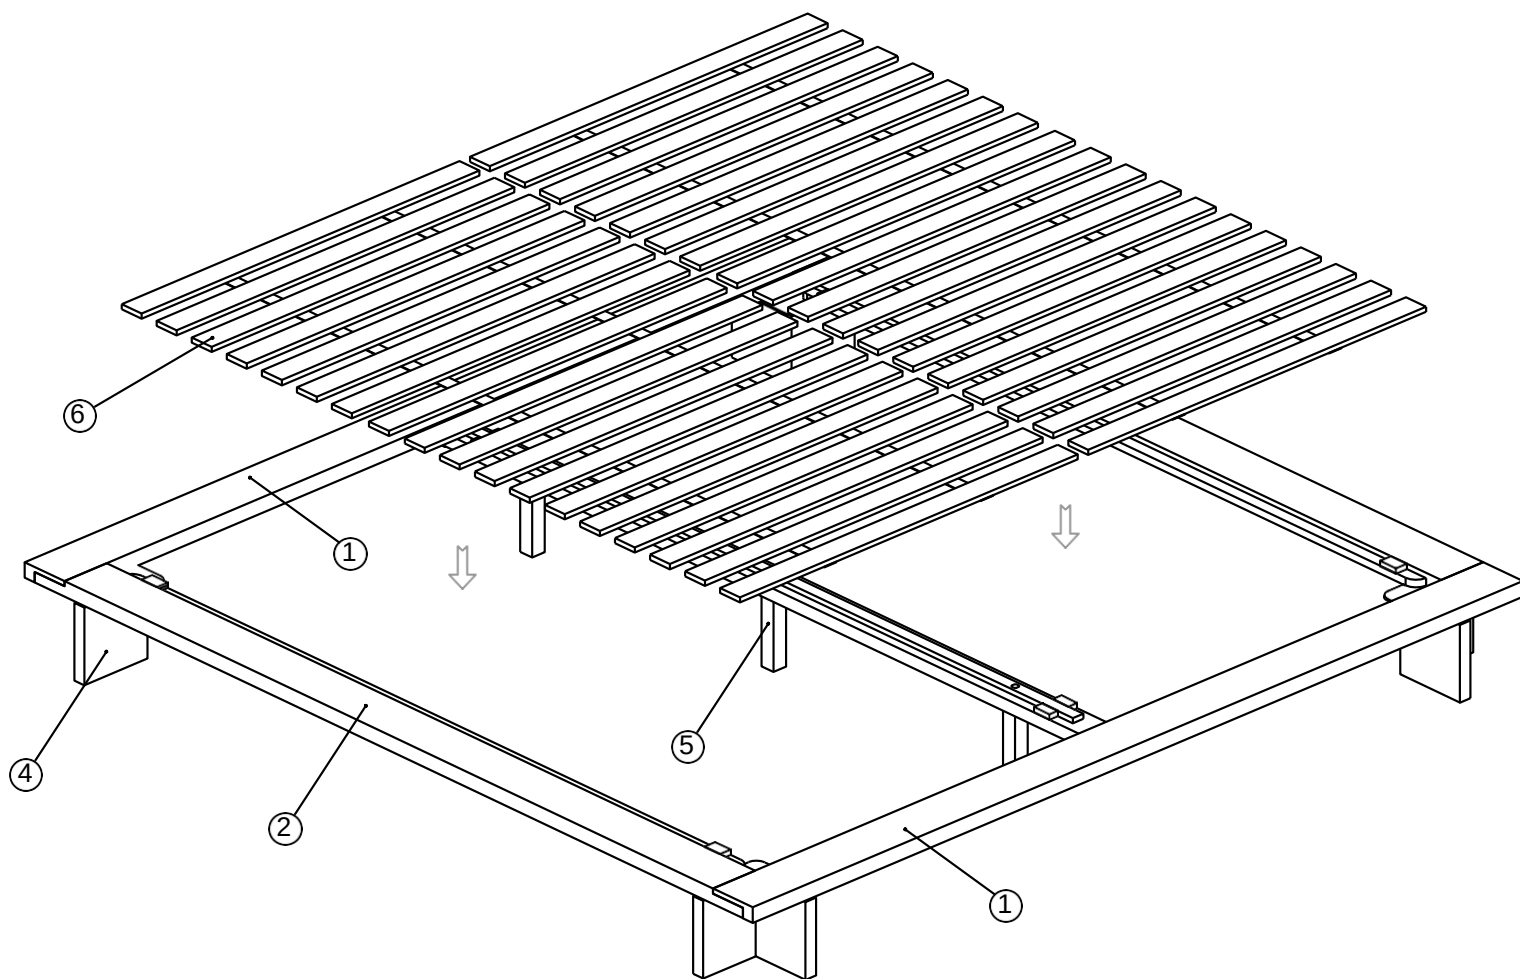

# ALONZO BED

Assembly Instructions

# URBAN OUTFITTERS

## ASSEMBLED

