

# KANE COFFEE TABLE

## Assembly Instructions

URBAN OUTFITTERS


TOOLS REQUIRED BUT NOT INCLUDED: N/A

### WARNINGS:


Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean smooth surface  
Do not drag while moving.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Do not place overheat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills do not rub, with a clean white cloth.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

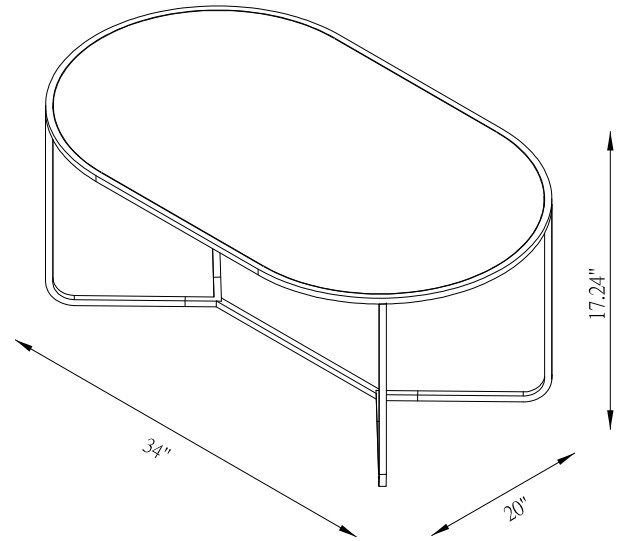


### PARTS INCLUDED:

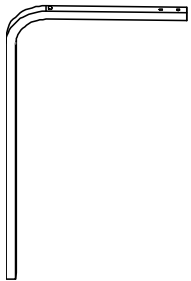


A) Metal Leg x 4

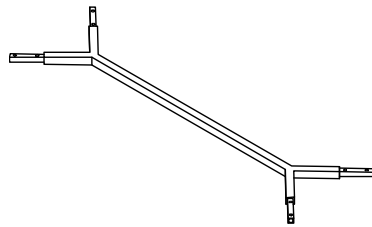

B) Metal Cross rail x1

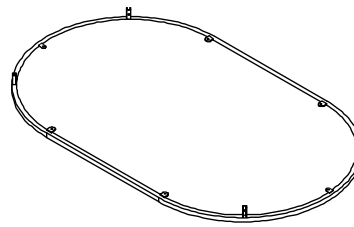

C) Wood Top x1



D) Screw [M5xL10mm] x12



E) Allen Key x1

# KANE COFFEE TABLE

## Assembly Instructions

URBAN OUTFITTERS

### STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. Align Metal Legs (A) with Metal Cross rail (B). Insert Bolts (D) and partially tighten with Allen key (E). Align assembled base with Wood Top (C). Insert Bolts (D), and partially tighten with Allen Key (E). Once all screws are inserted and partially tightened, tighten all screws completely.

