

# Pierce Floor Lamp

## Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**USE A TYPE A 60 WATT BULB, DO NOT EXCEED RECOMMENDED WATTAGE.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

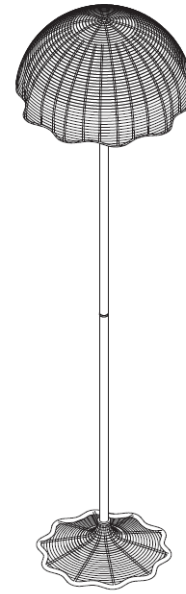

### PARTS INCLUDED:

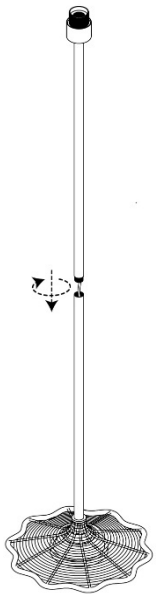

(A) Base

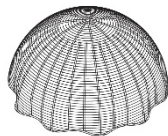

(B) Shade



(C) Socket Ring



(D) Black Felt  
x 1

# Pierce Floor Lamp

## Assembly Instructions

URBAN OUTFITTERS

### STEP 1

With help, orient the lamp to access the bottom of the base. Loosen the screw in the base (A) and then with help, gently pull the wire through the base until the upper tube engages with the threading on bottom tube. Screw the upper tube into the bottom tube, then re-tighten bottom screw and place the black felt pad (D) on the base. Screw a Type A 60W bulb into the Base (A). Then, place the Shade (B) on the Base (A) and screw the socket ring (C) as below shown. Plug in the lamp to complete assembly.

