

MADDIE SHELF

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

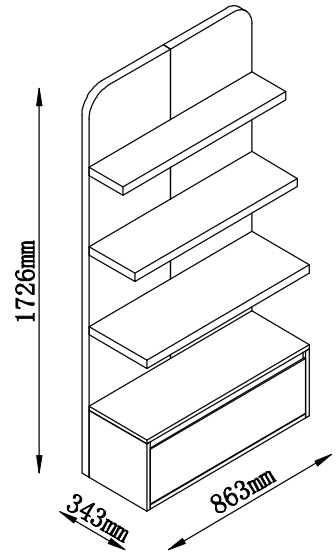


PARTS INCLUDED




(A) Back Panel L
x1




(B) Back Panel R
x1




(C) Shelf
x1

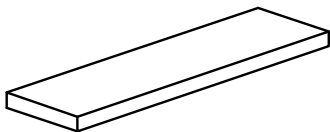

(D) Shelf
x1




(E) Shelf
x1

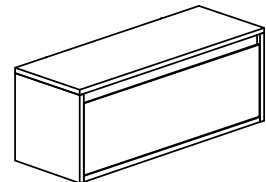


(F) Drawer Box
x1

HARDWARE LIST



(G) Hex key
x 1



(H) Bolt
[1/4" x 2"] x18




(I) Spring washer
[1/4"] x18




(J) Flat washer
[1/4"] x18



(K) Nylon strip
x1

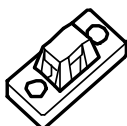

(L) Bracket
x2




(M) Screw
[M3 x 32mm] x2



(N) Screw
[M3 x 19mm] x2


STEP 1

With help lay the Parts out onto a clean smooth surface such as carpet or cardboard. Align the Back Panel L (A) with the Back Panel R (B) and press firmly into place as shown.

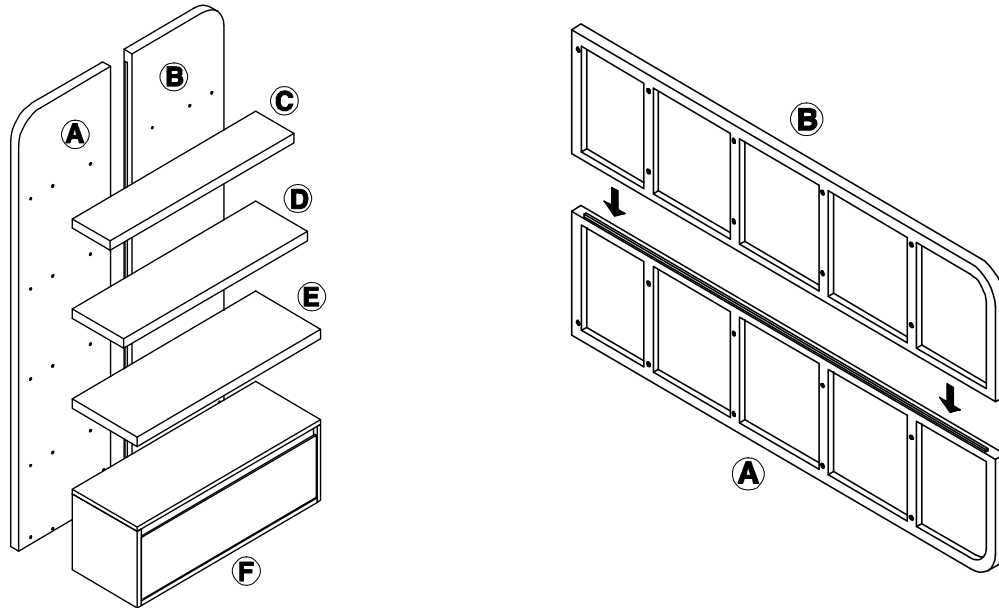

STEP 2

Align the Shelves (C&D&E) and Drawer Box (F) with the Back Panel and press firmly into place as shown. Insert Flat Washer (J), Spring Washer (I) and Bolt (H). Tighten with supplied hex key (G). Do not overtighten. With help stand the Shelf Upright making sure you do not lean it on the bottom as this can damage them.

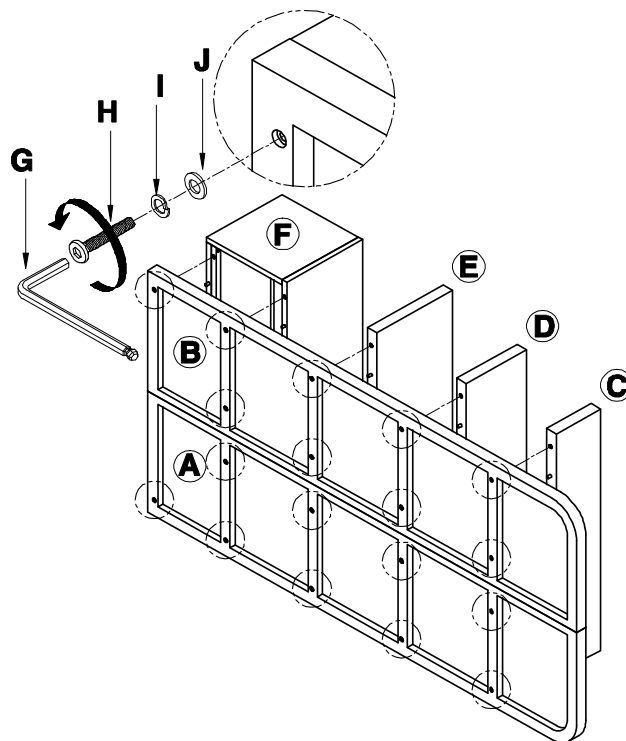

STEP 3

- Align the Anti Tip Brackets (L) to the Top back of the Case. Insert Screws (M) and tighten completely. Do not overtighten.
- Contact your local hardware store to purchase the correct anchors for your wall-type.
- Align the brackets to the wall and make sure they line up with the brackets on the back of the case from step (a).
- Screw the brackets to the wall using the correct anchors.
- Slide the case to the wall. Leaving a little bit of room between the case and the wall.
- Feed the Nylon Strap through both brackets and pull tight.

