

CONGRUENT BOOKCASE

URBAN OUTFITTERS


Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:
Phillips Head Screw Driver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface
The assembly of this item requires x 2 people.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

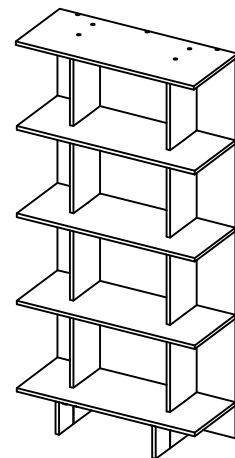


PARTS INCLUDED




(A) Top panel
Quantity: 1pc




(B) Shelf panel
Quantity: 3pcs




(C) Bottom panel
Quantity: 1pc

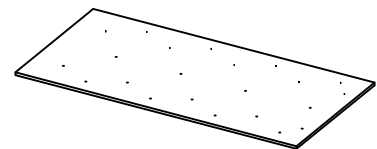

(D) Back panel
Quantity: 1pc



(E) Left side panel
Quantity: 1pc



(F) Right side panel
Quantity: 1pc




(G) Left bottom side panel
Quantity: 1pc



(H) Right bottom side panel
Quantity: 1pc

HARDWARE LIST



(1) Allen bolt
M6 x 30mm
Quantity: 31pcs




(2) Flat Washers
Quantity: 31pcs



(3) Dowel
M8 x 30mm
Quantity: 6pcs



(4) Allen key
Quantity: 1pcs




(5) Cam Bolt
Quantity: 2pcs



(6) Cam Lock
Quantity: 2pcs

TIP KIT



(7) Bracket
Quantity: 4pcs



(8) Nylon strip
Quantity: 2pcs



(9) Screw
M4 x 20mm
Quantity: 4pcs



(10) Screw
M4 x 40mm
Quantity: 4pcs




(11) Wall plug
4 x L40
Quantity: 4pcs

CONGRUENT BOOKCASE

URBAN OUTFITTERS

Assembly Instructions

STEP 1. Align side panels (E) & (F) with back panel (D) as shown. Insert Allen bolt (1), flat washers (2) into holes in the back panel. Tighten with Allen key (4) provided. Insert dowels (3) into bottom side panels (G) & (H) as shown. Screw cam bolt (5) into the threaded inserts on the edge of bottom side panels (G) & (H). Attach bottom side panels (G) & (H) to side panels (E) & (F). Press cam locks (6) into holes at the bottom of either side panels and tighten. The cam lock (6) will stop turning once its locked.

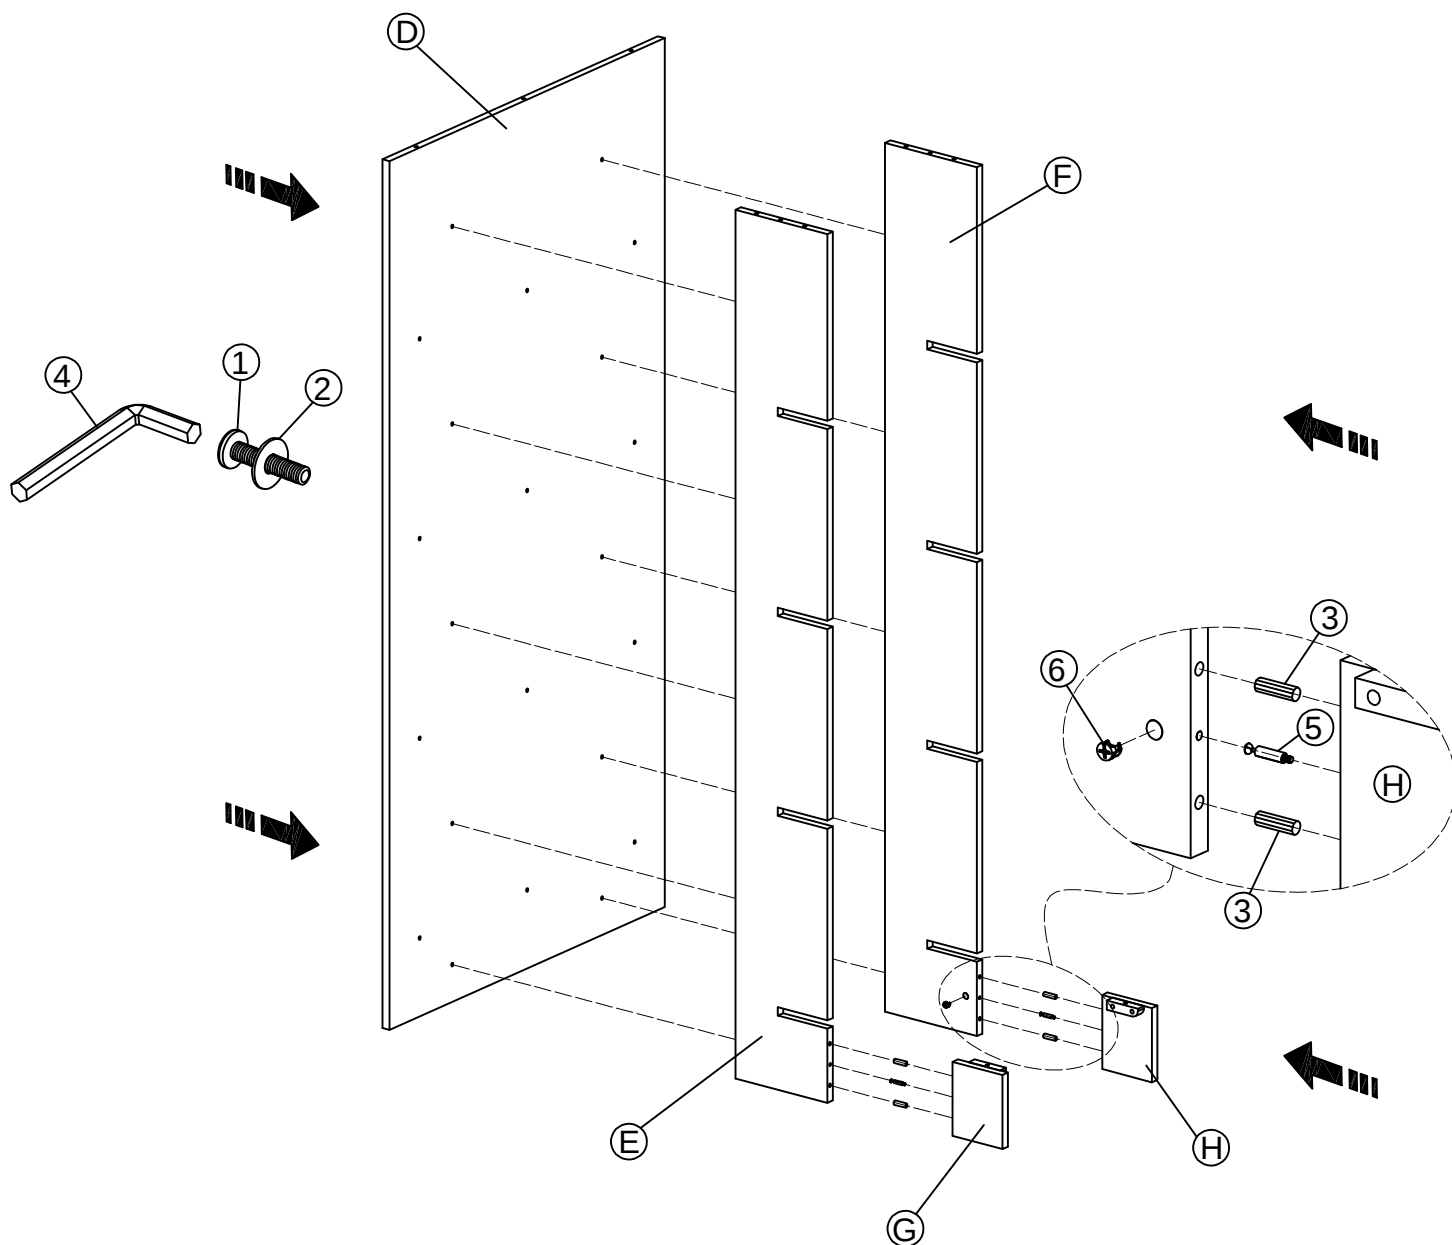


NOTE: PRE-DRILLED HOLES FOR CAMLOCKS TO FACE SHELF INTERIOR AT BOTTOM OF CASE

CONGRUENT BOOKCASE

URBAN OUTFITTERS

Assembly Instructions

STEP 2. Align top panel (A) with the partially assembled bookcase and insert dowels (3) as shown. Insert Allen Bolt (1), flat washers (2) into holes on the top panel. Tighten with Allen key (4) provided. Slide shelf panels (B) and bottom panel (C) into the slots in side panels (E) & (F). Insert Allen bolt (1), flat washers (2) into the holes on the back panel. Tighten all bolts using the Allen key (4).

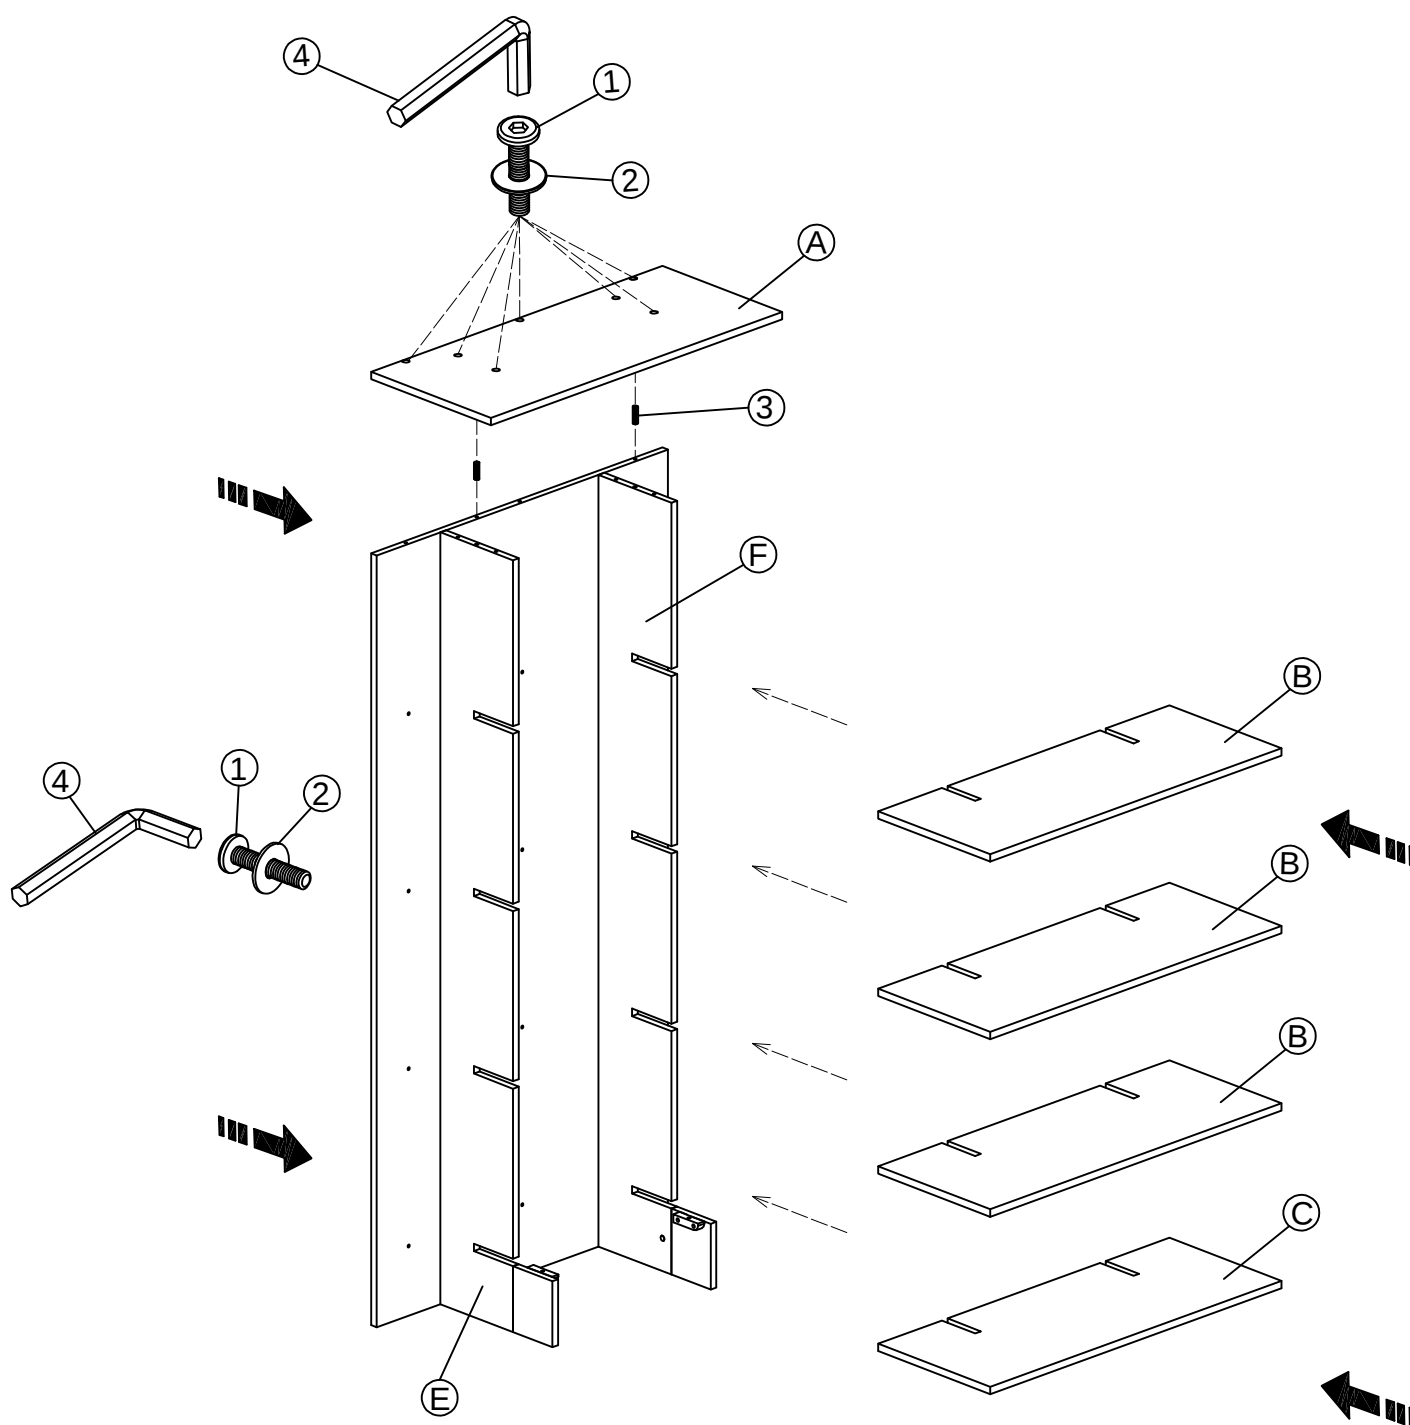


CONGRUENT BOOKCASE


URBAN OUTFITTERS

Assembly Instructions

STEP 3. Insert Allen bolts (1), flat washers (2) into the holes on the ledge attached to the bottom side panels (G) & (H). Tighten with Allen key (4).

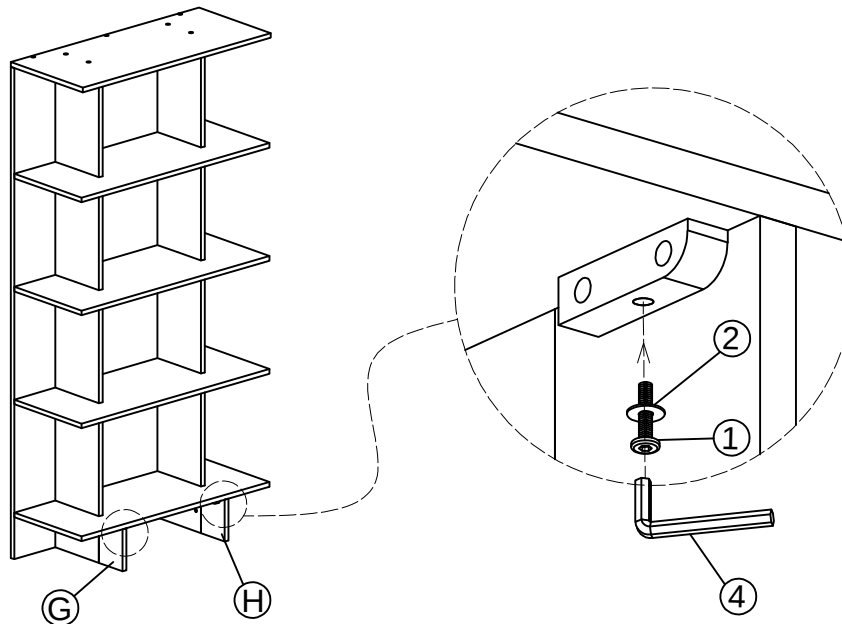

STEP 4. Align the anti tip brackets (7) to the top back of the case. Insert Screws (9) and tighten completely. Do not over-tighten.

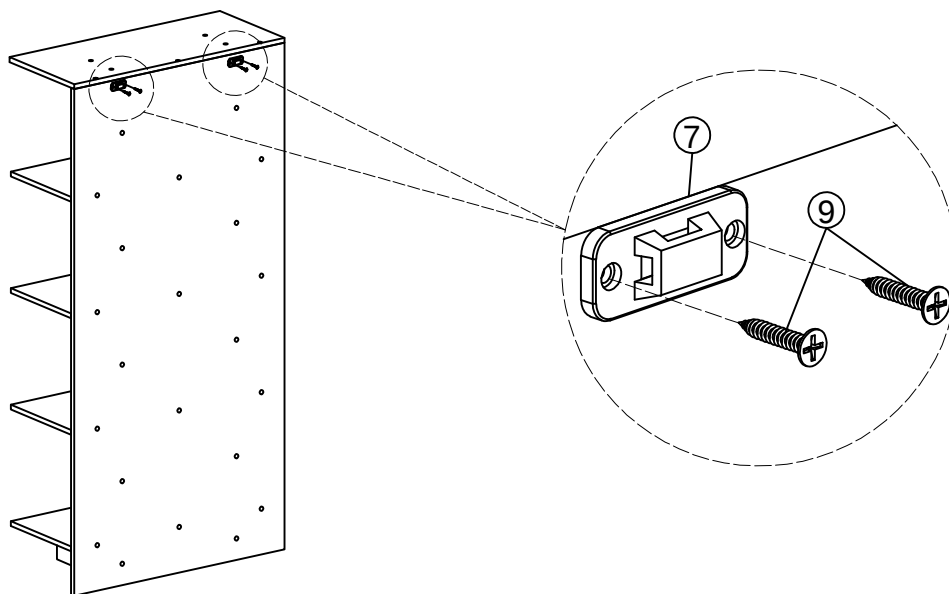


CONGRUENT BOOKCASE

URBAN OUTFITTERS

Assembly Instructions

STEP 5. Contact your local hardware store to purchase the correct anchors for your wall-type. Align the brackets to the wall and make sure they line up with the brackets on the back of the case from step 4. Screw the brackets to the wall using the correct anchors. Slide the case to the wall. Leaving a little bit of room between the case and the wall. Feed the Nylon Strap through both brackets and pull tight.

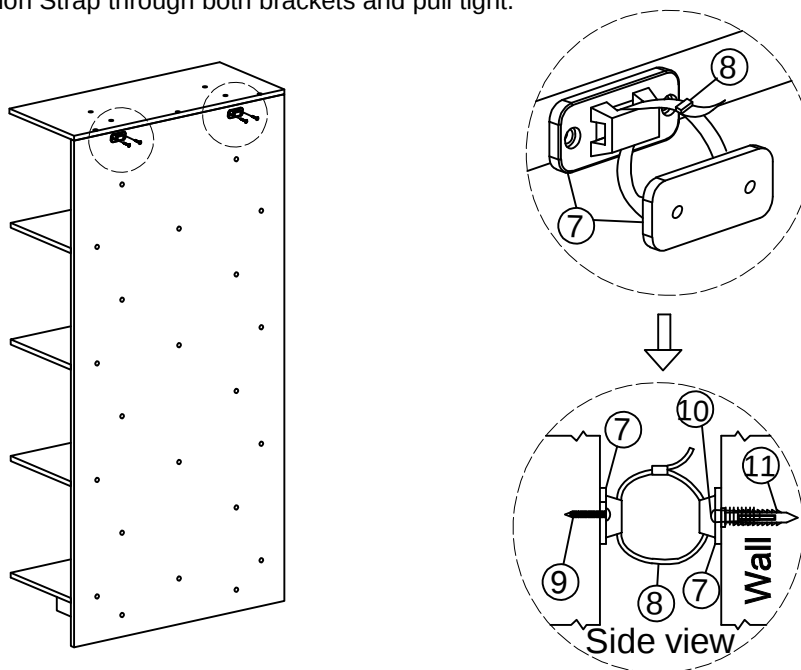

FINISH

